



Operating instructions

TV

- Individual 52 Compose
- Individual 46 Compose
- Individual 40 Compose

LOEWE.


233-34174.022



Contents

Remote control – TV functions	3	Digital radio	36
Control unit front side of the device	4	Radio mode	36
Connections rear side of the device – Compose 40	5	EPG – Electronic Programme Guide (radio)	37
Connections rear side of the device – Compose 46 / Compose 52	6	Audio playback from external devices	37
Welcome	7	DVB	38
Scope of delivery	7	Software update	38
About this operating manual	7	Conditional Access module (CA module)	40
TV set equipment	7	Other settings	41
Operating convenience with wizards	8	Parental lock	41
The wizards in overview	8	Timer functions	42
Info display and TV index	8	Language	42
For your safety	9	On-screen displays	43
Environmental protection	10	Time and date	43
Initial installation	11	Operating additional equipment	44
Installing the TV set	11	Connection wizard	44
Preparing the remote control unit	11	Devices to the connections AV1/AV2/AVS	46
Connecting the TV set	11	Devices to the HDMI (DVI) connections	48
Turning the set on/off	12	Concealed installation of HDMI devices	49
First installation wizard	12	Devices to the PC IN connection	50
Positioning/aligning DVB-T antenna	14	Devices to the Component IN connection	51
Operating convenience	15	Sound components wizard	52
General information on menu operation	15	TV speakers	52
The info display	15	Connecting Loewe sound system	53
The index in the TV set	16	Connecting active loudspeakers	54
The Assist+ menu	16	Adjusting the speaker system	54
TV menu – Overview diagram	17	Connecting audio amplifiers	57
Radio menu – Overview diagram	17	Assignment of the digital audio input	58
Daily operation	18	Audio connection in HDMI (DVI) devices	58
Select station	18	RS-232C interface	58
Select video source	19	The direct way to record	59
Adjusting the sound	20	Timer recording with external devices	61
Adjusting the picture	22	PhotoViewer	62
Operation without remote control	23	MusicBox	64
Button functions	24	Operating Loewe equipment	68
Managing stations	26	Rotating the TV set	70
TV stations	26	Troubleshooting	71
Put together / change favourites lists	29	Technical data	73
Picture in Picture	30	General data	73
Picture in Picture (PIP)	30	Electrical data	73
Configure Picture in Picture (PIP) mode	31	Connections (max. equipment)	73
Electronic Programme Guide	32	Accessories	74
Electronic Programme Guide – EPG	32	Accessories and upgrade kits	74
Configuring EPG	33	Setup possibilities	75
Teletext	34	Glossary	76
Teletext	34	Index	80
Teletext menu	35	Service	81
Digital teletext (MHEG-5)	36	Other	82
		Trademarks	82
		Acknowledgements	82

Remote control – TV functions

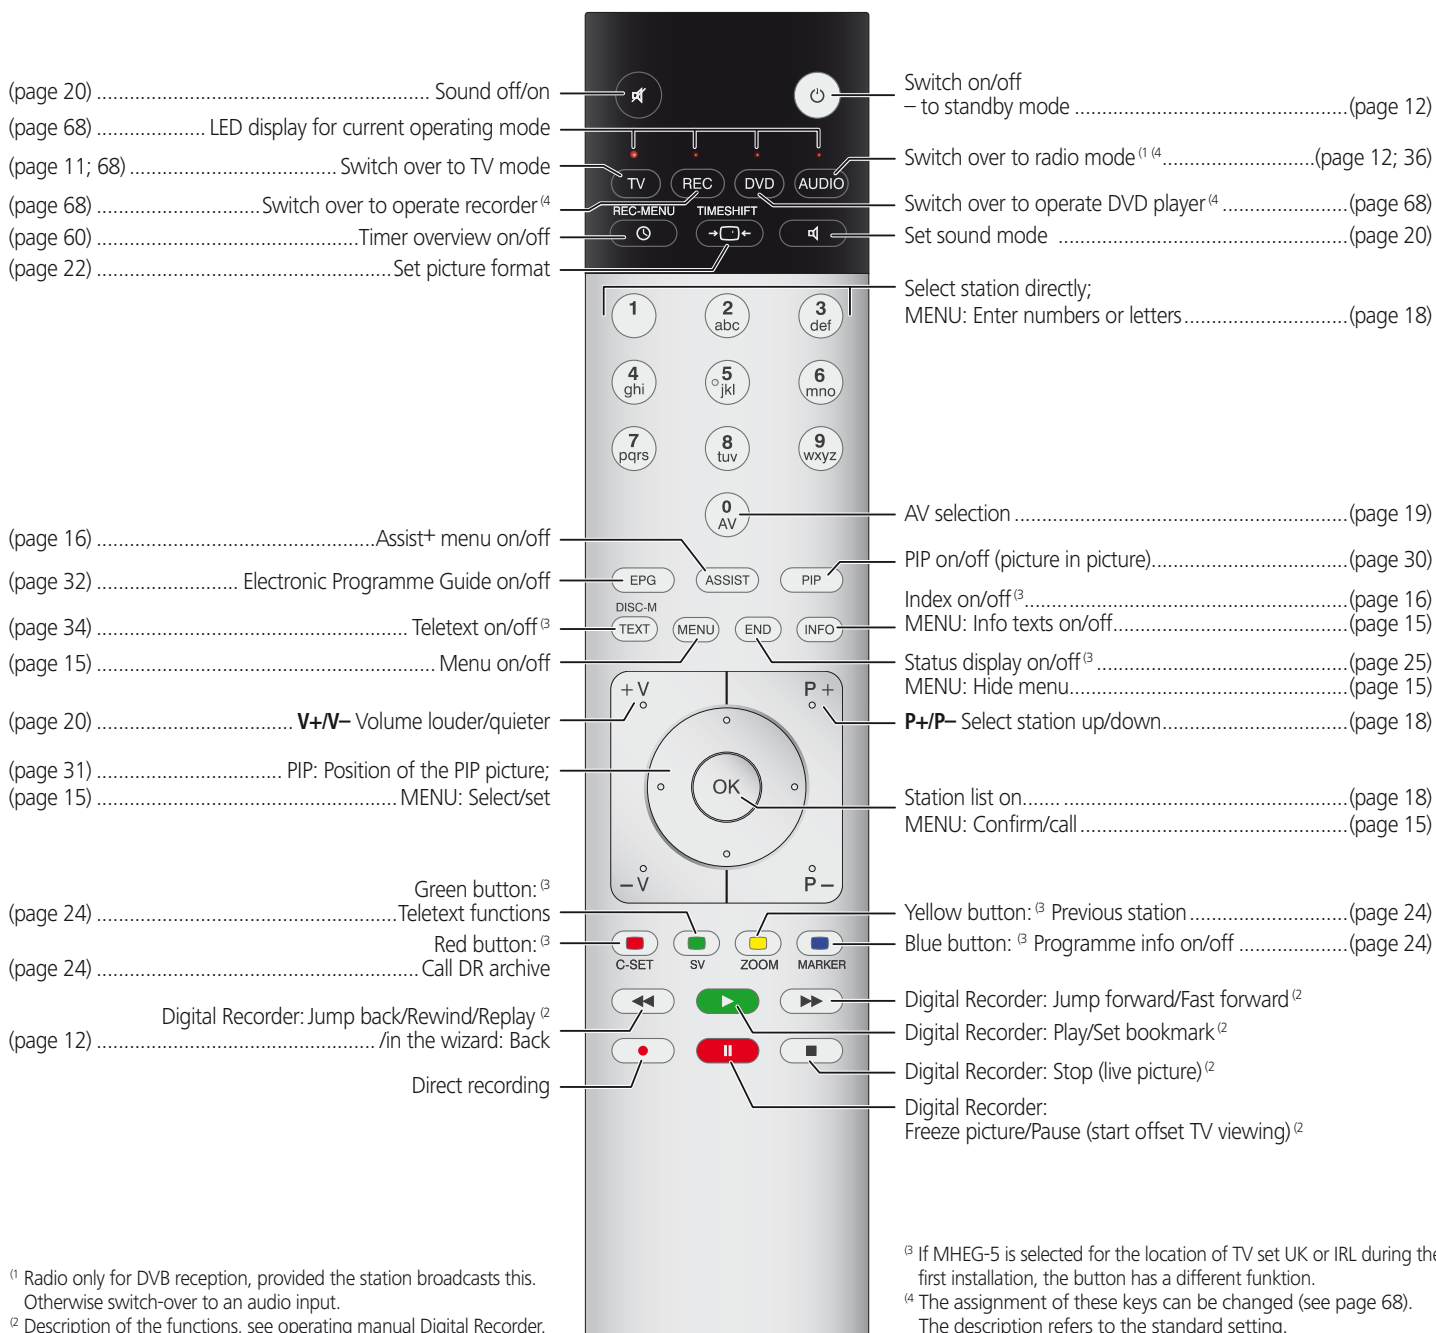


⁽¹⁾ Radio only for DVB reception, provided the station broadcasts this. Otherwise switch-over to an audio input.

⁽²⁾ Description of the functions, see operating manual Digital Recorder.

⁽³⁾ If MHEG-5 is selected for the location of TV set UK or IRL during the first installation, the button has a different funktion.


⁽⁴⁾ The assignment of these keys can be changed (see page 68). The description refers to the standard setting.

Control unit front side of the device

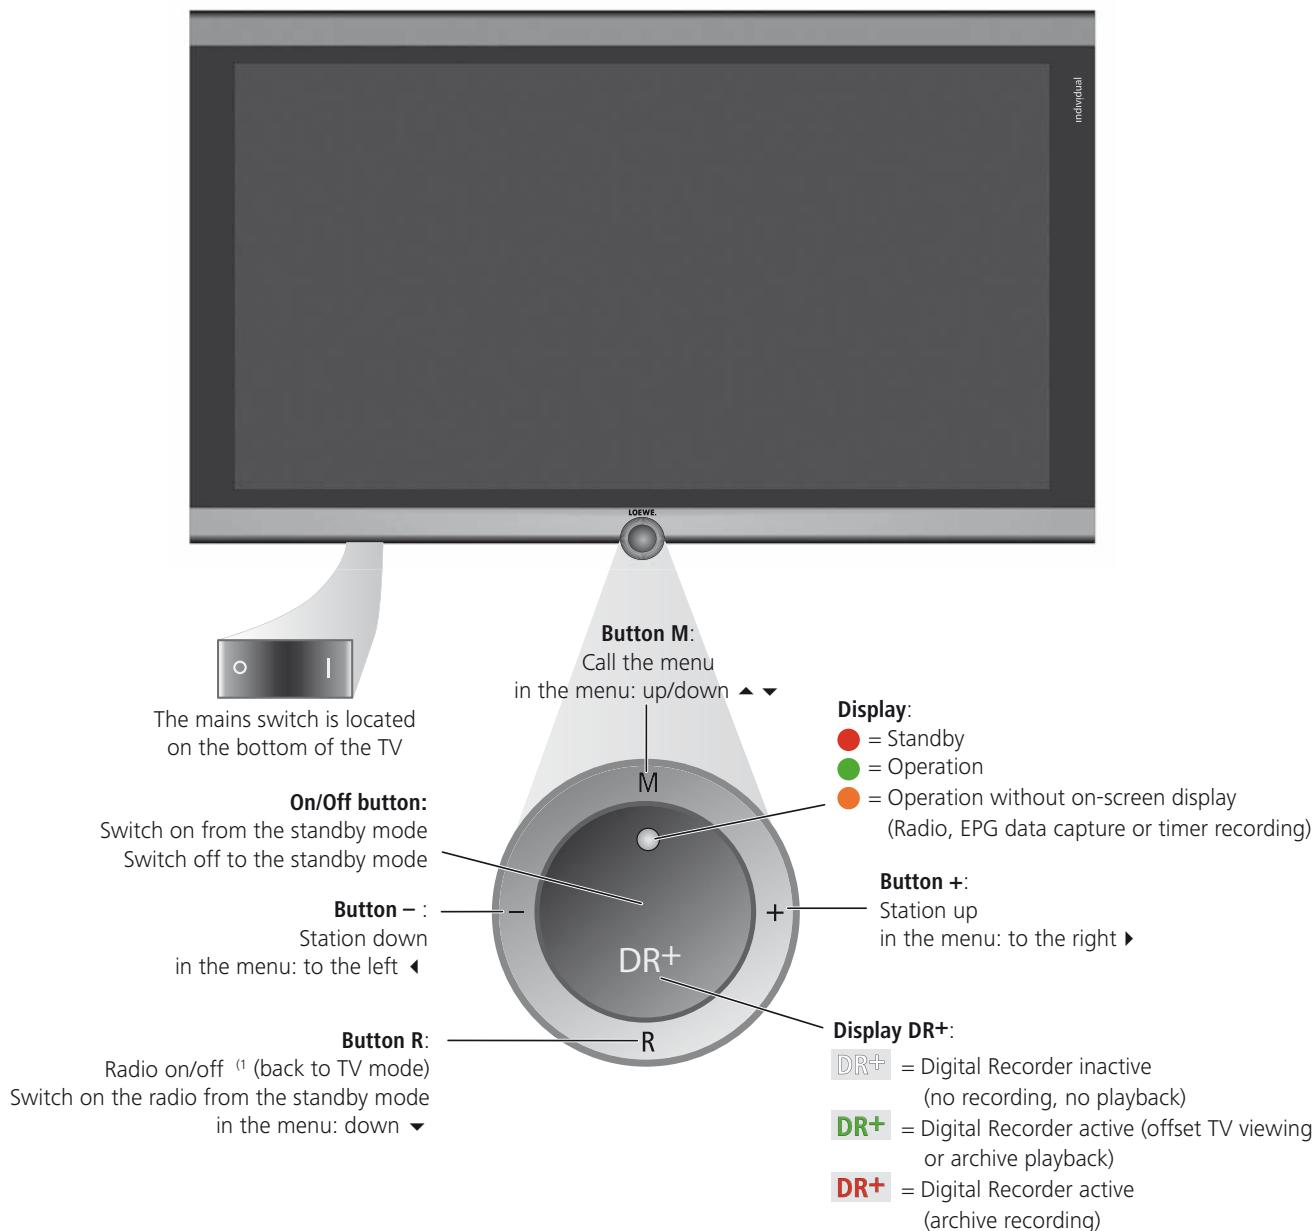

⁽¹⁾ Radio only for DVB reception, provided the station broadcasts this.
Otherwise switch over to an audio input.

Connections rear side of the device – Compose 40

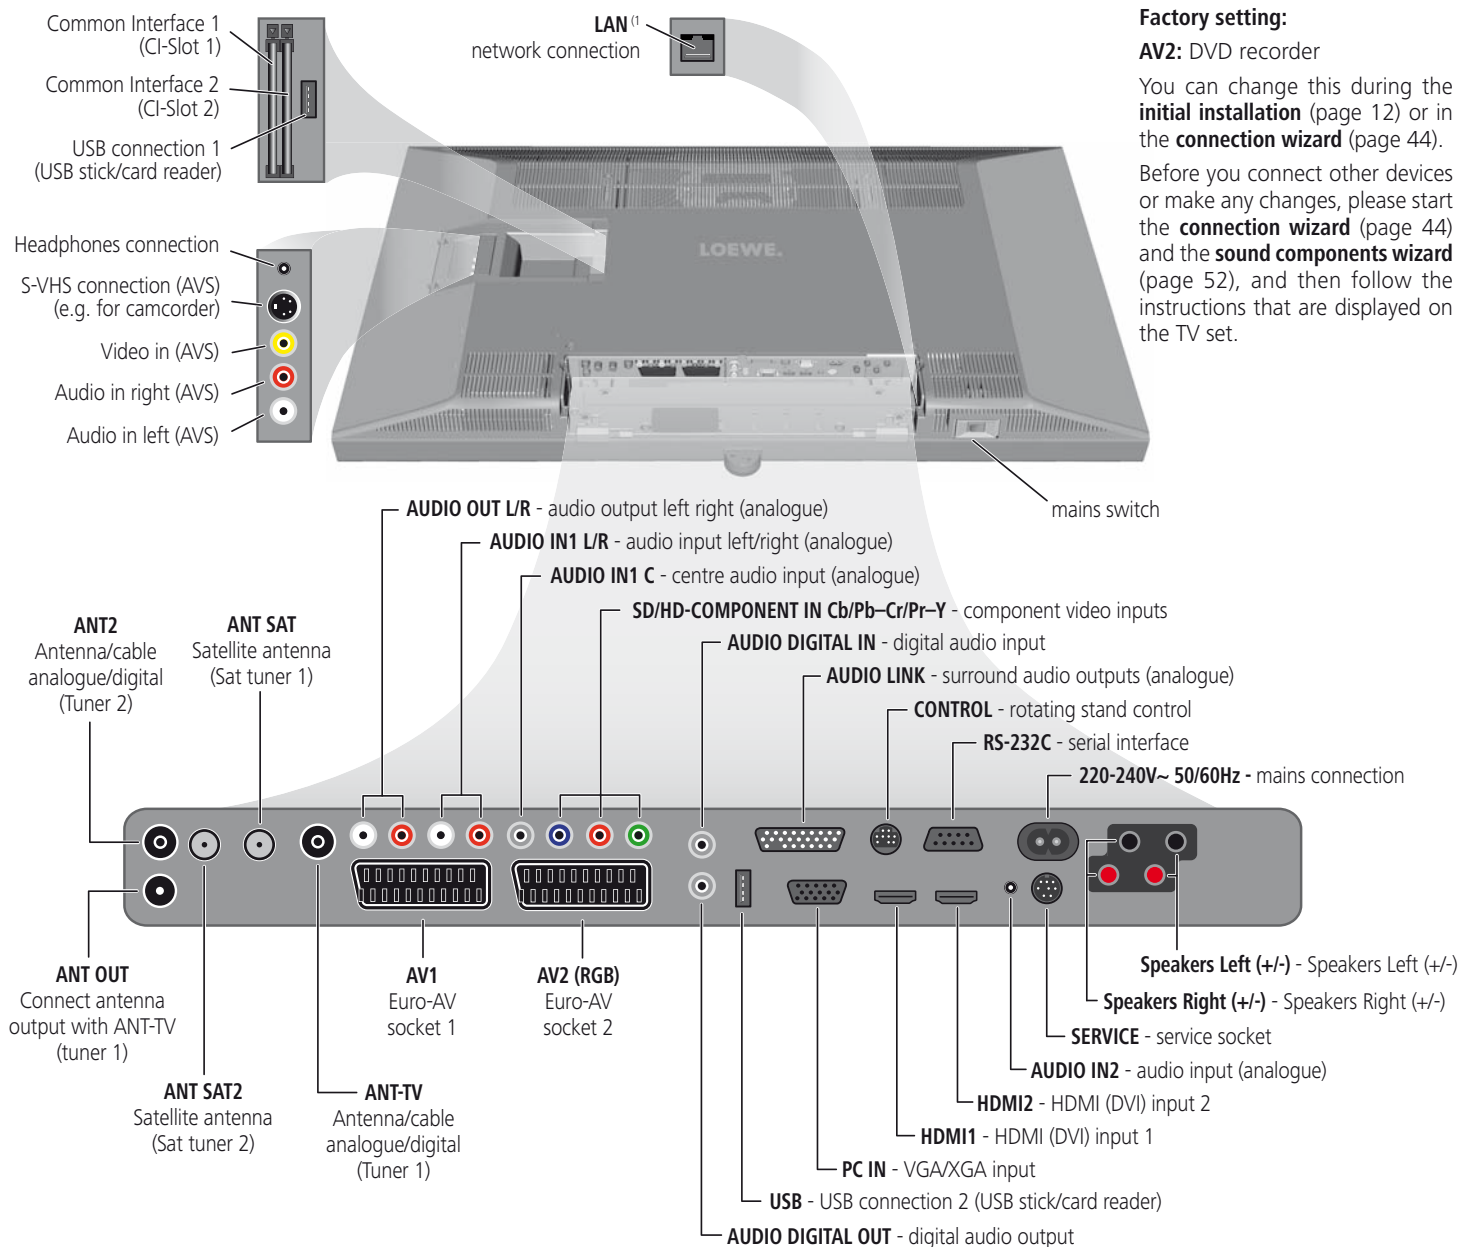

Factory setting:


AV2: DVD recorder

You can change this during the **initial installation** (page 12) or in the **connection wizard** (page 44).

Before you connect other devices or make any changes, please start the **connection wizard** (page 44) and the **sound components wizard** (page 52), and then follow the instructions that are displayed on the TV set.

⁽¹⁾ Only after retrofitting Network Mediaplayer (see Accessories page 74).

Connections rear side of the device – Compose 46 / Compose 52

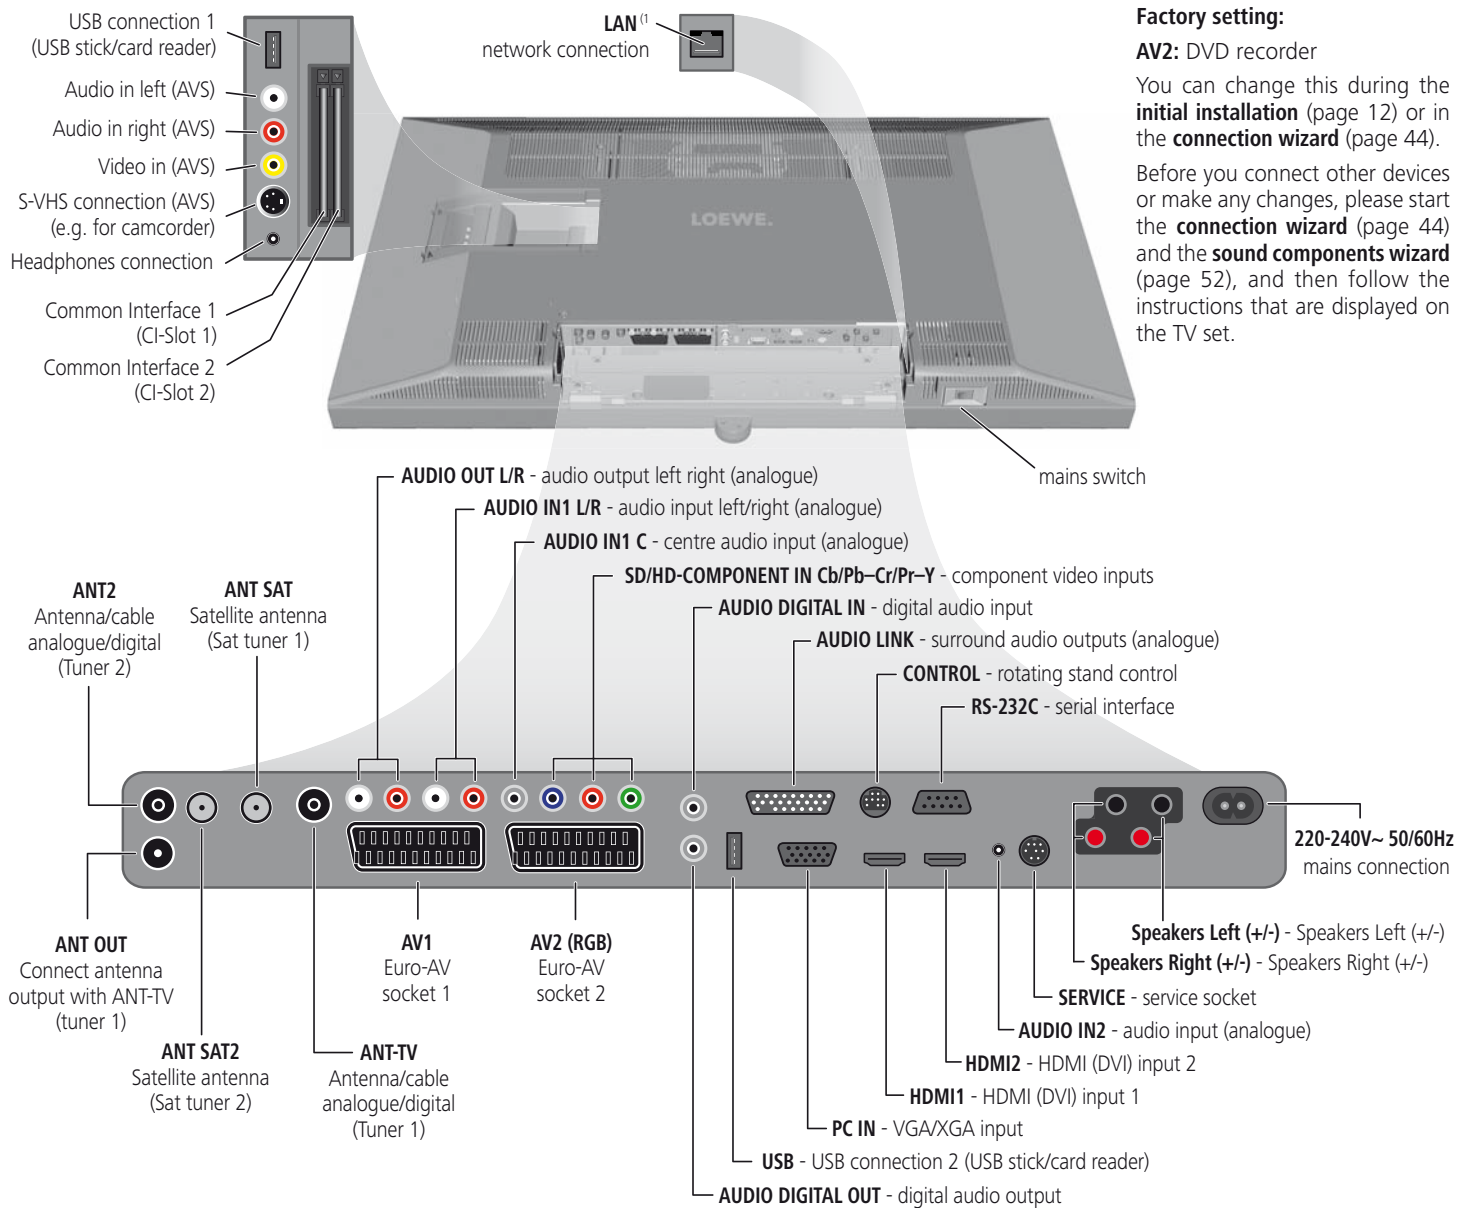

Factory setting:

AV2: DVD recorder

You can change this during the **initial installation** (page 12) or in the **connection wizard** (page 44).

Before you connect other devices or make any changes, please start the **connection wizard** (page 44) and the **sound components wizard** (page 52), and then follow the instructions that are displayed on the TV set.

⁽¹⁾ Compose 46: Only after retrofitting Network Mediaplayer (see Accessories page 74).
Compose 52: Network Mediaplayer is installed at the factory.

Welcome

Thank you!

At Loewe, we combine the highest standards of technology, design and user friendliness. This applies equally for TV, video and accessories.



Your new TV set is equipped for the TV standard "HDTV" (High Definition Television). With its high definition screen, the 100 Hz image refresh frequency (200 Hz for Compose 52) and the future-oriented digital interfaces HDMI (High Definition Multimedia Interface) it offers possibilities for watching HDTV broadcasts in an excellent picture quality. HDTV is a worldwide, digital standard in the 16:9 format which revolutionises normal TV viewing. It is broadcast with an up to five times greater resolution than conventional signals and therefore creates an unexpectedly 3D image.

The TV set is equipped for digital reception. You can use the already frequently broadcast "everywhere television" (DVB-T) as well as digital cable (DVB-C) and digital satellite reception (DVB-S).

If **MHEG-5** is selected for location of TV set UK or IRL, there are some restrictions for reception:

DVB-C and DVB-S reception is **not possible** with MHEG-5, see also on page 13. **Caution:** Common Interface Plus technology will **never work** again after activating MHEG-5.

The TV set is fitted with a digital audio decoder. You can connect a speaker system (e.g. Loewe Individual Sound) or active speakers and enjoy movie theater sound.

You can connect a card reader or a USB stick with digital photos and/or MP3 music files to the USB connection of your TV set and view your photos or play music via the integrated PhotoViewer/MusicBox software. All the functions can be operated with the Loewe remote control.

We have designed the TV set in such a manner that you can easily operate it with the help of wizards and menus. Information about the menu settings is displayed automatically. You will quickly comprehend the context.

Scope of delivery

- LCD TV set
- Mains cable
- Antenna cable
- Wall mount WM54 (incl. installation instructions)
- Remote control Assist with two batteries
- Operating instructions Digital Recorder
- Operating instructions Network Mediaplayer (Compose 52)
- This operating manual

No speakers are included in the scope of delivery for the "Individual Compose" TV set. You can custom configure the speaker equipment with your TV set and adapt it to your requirements. Ask your dealer in this regard.

About this operating manual

For best results regarding safety and the longevity of the set, we recommend you read the chapter "For your Safety" (page 9) before switching it on for the first time.

For many questions concerning the technology you will find an answer in the index of your TV set. If your question concerns TV set operation, you can access a function directly from the index of the TV set.

Owing to this possibility, this operating manual only explains the most important operating steps.

The index/glossary from page 76 onwards gives explanations of certain terms used in the TV set and the operating manual.

Paragraphs which begin with the symbol **►** indicate important instructions, tips or conditions for the following settings.

Terms which you will find in the menus or printed on the remote control or TV set are written in **bold** type.

The necessary control elements are shown in the descriptions to the left of the text containing the instructions for action.

Depending on the connected accessory equipment the menus in the TV set can differ from those described here.

All the station names, programme contents, the illustrated photos, titles, albums and album covers in this operating manual are examples.

TV set equipment

See the rating plate on the rear of the set for the precise product designation. The precise features are listed in the **Integrated features** item in the index of the TV set (see page 16).

Welcome

Operating convenience with wizards

This TV set offers user prompting with wizards that take you through the settings step-by-step.

You can return to the previous step or exit the wizard at any time.

The wizards in overview

Initial installation

The initial installation wizard helps you with the initial installation and connection of any existing equipment (see page 12).

Setting up the antenna

You enter in the antenna wizard which antenna signals are available to you. The antenna wizard is called in initial installation (see page 12). You can also call the antenna wizard in the **TV menu** under **Connections** → **Antenna DVB** → **Antenna DVB-S** or **Antenna DVB-T**.

Search wizard

If you want to search for new stations after the initial installation, or if you have set up your antenna for the first time, then you can handle this task with the help of the search wizard (see page 26). You will find the search wizard in the **TV menu** under **Settings** → **Stations** → **Search wizard**.

Connecting external devices

The connection wizard ensures that all devices are correctly registered and connected. It is started automatically at the end of the initial installation wizard but can also be called separately (see page 44). You will find the connection wizard in the **TV menu** under **Connections** → **New devices/modifications**.

Connecting sound components

The sound component wizard ensures that the components which reproduce the TV sound are correctly registered, connected and set. It is started automatically at the end of the initial installation wizard but can also be called separately (see page 52). You will find the sound components wizard in the **TV menu** under **Connections** → **Sound components**.

Assist⁺

You can select the most important operating modes directly with the Assist⁺ menu (**ASSIST button**). Selectable modes are: TV, Radio digital, Teletext, DR archive, PhotoViewer, MusicBox, CA module and Index (see page 16).

Programming and managing recordings

The recording wizard helps you to programme a video recording with a video recorder, DVD recorder, or the integrated Digital Recorder (see page 59).

Station list

The station list is a list of all stored stations. You can also use the station list for switching stations conveniently (see page 18).

Software update wizard

The latest software for your TV set can be loaded via DVB stations or via USB stick (see page 38).


Info display and TV index

An information display for each menu item

The info display automatically shows content-based info texts in the upper part of the screen for each menu item. It forms a convenient operating system with the index (see page 15).

An index in the TV set

The index gives you an overview of the functional scope of your TV set. You can also start wizards and menu settings directly from here (see page 16).

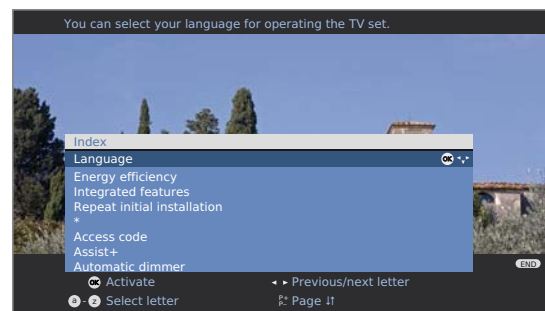

For your safety

For your own safety and to prevent unnecessary damage to your device, read and comply with the following safety instructions:

Proper use and environmental conditions

This TV set is designed exclusively for reception and reproduction of video and audio signals and is designed for living rooms or office facilities, and should not be operated in rooms with high **humidity**, such as a bathroom, or sauna, or where there is a high **concentration of dust** (e.g. workshops). The manufacturer's warranty is only valid for use in the specified permissible environment.

If the set is used outdoors ensure that it is protected against **moisture** (rain, splashing water, or dew). High humidity and dust concentrations cause leak currents in the device, which can cause a shock hazard if the device is touched, or a fire.

If you have brought the set into a warm environment from the **cold**, then wait for about 1 hour before switching it on to avoid formation of **condensation**.

Do not place any **objects** filled with **liquid** or burning candles on the device. Protect the set against dripping and splashing water.

Never place the TV set in a position where it is exposed to **vibrations**. This can lead to material overload.



Transporting

Only transport the device in **vertical position**. Grasp the device on the upper and lower edges of the housing. Never set the TV down on the protruding control unit on the bottom of the TV set. This could damage the control unit.

If the set has to be put down during packing/unpacking, place the TV set with the entire front surface lying flat on a soft underlay such as a blanket or the felt from the packing material.

The LCD screen is made of glass or plastic and can break if not handled properly.

If the LCD screen is damaged and **liquid crystal** escapes, wear rubber gloves when moving the device. In the case of **skin contact** immediately wash thoroughly with water.

Power supply

The **wrong voltage** can damage the set. This equipment must only be connected to a mains power supply which has the same voltage and frequency as that specified on the rating plate; use the mains cable provided. The **mains plug** of the TV set must be easily accessible so that the device can be disconnected from the mains at any time. When you unplug the mains plug, do not pull on the **cable** rather pull on the plug housing. The cable in the mains plug could be damaged and cause a **short circuit** the next time it is plugged in.

Lay out the **mains cable** in such a manner that it cannot be damaged. The mains cable must not be kinked or laid over sharp edges, stepped on or exposed to **chemicals**; The latter also applies for the entire equipment. A mains cable with damaged insulation can cause **electrical shock** and is a **fire hazard**.

Air circulation and high temperatures

The **vent slots** on the **rear panel** of the set must always be kept free. Please do not place newspapers or cloths on/over the TV.

Ensure that there is at least 10 cm free space on the sides and above the set for air circulation, if the set is placed in a **cabinet** or on a **shelf**.

Like any electronic device, your TV set requires air for cooling. Obstruction of the air circulation can cause fires.


The set is suitable for different installation solutions. See the instructions for assembly for the different installation solutions.

Stand the TV set with the table or floor stand only on a level, **sturdy, horizontal base**. Particularly ensure that the set does not protrude to the front when placed in or on pieces of furniture.

Set up the device where it is not exposed to direct **sunlight** and where it is not exposed to additional warming through **heating elements**.

Prevent **metal items**, needles, paper clips, liquids, wax, or similar items, from getting into the interior of the device through the **vent slots** in the rear panel. Such objects can cause **short circuits** in the set, which could possibly cause a fire.

If something should get into the **interior of the set** then immediately unplug the mains plug of the device and contact **customer service** for more information.

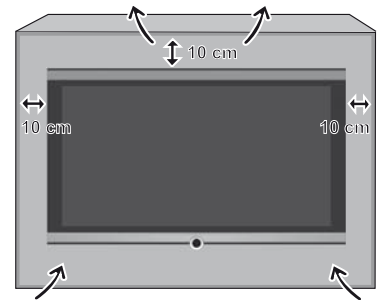

For your safety

Repairs and accessories

Never remove the back of the TV set yourself. Only have your TV device repaired or serviced by **authorised television technicians**.

Only use **original accessories** such as Loewe stands if possible (see Accessories on pages 74 and 75).

Supervision

Do not allow **children** to use the TV set without supervision or to play in the immediate vicinity of the TV set. The set could tip over, be pushed off or pulled down from the stand surface and injure someone.

Do **not** allow the switched-on TV set to run **unattended**.

Volume

Loud music can lead to ear damage. Avoid extreme volume especially over long periods and when using headphones.

Cleaning

Clean the TV set, the screen, and the remote control unit with a soft, moist, and clean cloth, only, **without any aggressive or scouring cleaning agents**.

Thunder storms

Pull out the **mains plug** and all connected **antenna cables** from the TV set in a thunderstorm. Overvoltage caused by **lightning** can damage the set via the antenna system, as well as via the mains. The mains plug and all connected antenna cables should also be pulled out during long periods of **absence**.

Note on the LCD screen

The TV set you have purchased with LCD screen satisfies the most rigorous quality requirements and has been inspected relative to **pixel errors**. In spite of the utmost care in manufacturing the display, for technical reasons the possibility that some **pixels** will have defects cannot be 100% excluded. Please understand that these types of effects, as long as they are within the standard of specified limits, cannot be considered as a device defect in terms of the guarantee.

Avoid displaying **still images** for long periods of time. It is possible that a copy of the image may remain.

Environmental protection

Energy consumption

Your TV set is equipped with an eco-standby power supply. In the standby mode, the power consumption drops to low power (see Technical data on page 73). If you want to save even more energy then switch the device off with the mains switch. However note that in this case, EPG (Electronic Programme Guide) data will be lost, and it may be that programmed timer recordings **cannot** be executed via the TV device.

The power consumed by the TV set in operation depends on the choice of the energy efficiency presetting in the initial installation (page 13).

If you activate the automatic dimming (see page 22), your TV picture will adapt to the ambient brightness. This reduces the power consumption of the TV set.

Packaging and box

You have made a decision to purchase a high-quality technical product with a long service life. For disposal of the packaging, in accordance with national legislation we have paid a fee to a commissioned recycler to pick up the packaging from the dealer. Nevertheless we recommend keeping the original box and **packaging material** on hand so that the device can be transported with optimal protection if necessary.

The set



The EU directive 2002/96/EC regulates the proper way to recycle, handle and utilise used electronic devices. **Old electronic devices** consequently must be disposed of separately. Please do **not** dispose of this device in normal **household trash!**

You may return your used set free of charge at designated recycling centres or at your specialist dealer whenever you purchase a new, comparable set. Additional details about return (also for non EU countries) are available from your local municipal authorities.

Batteries



The batteries supplied as initial equipment do not contain any pollutants such as cadmium, lead, or mercury. Used batteries should **no longer** be disposed of in the **domestic waste** according to the Battery Ordinance. Dispose of your batteries at no charge in the **collection containers** which are set up for this purpose in retail stores.

Initial installation

Installing the TV set

First prepare the chosen installation solution for your TV set. See the installation instructions of the wallmount supplied. See Accessories (page 75) for other installation possibilities.

Preparing the remote control unit

Inserting or replacing batteries

Press the embossed arrow and push down the battery compartment cover.

Insert two alkaline manganese LR 03 (AAA) batteries; ensure that the + and – poles are correctly positioned!

Slide the cover up from below.



Adjusting the remote control for operating the TV set

TV

Press the **TV button**.

See page 68 to learn about operating other Loewe devices.

Connecting the TV set

Connecting to the mains

- Note the position of the mains connection in Individual Compose 40 / 46 / 52.

Remove the cover for the connections.

Connect the TV set to a 220-240V outlet:

First plug the small plug of the mains cable into the mains connection on the rear of the TV, then plug the large plug into a mains power outlet.

Connecting the antenna

Analogue / DVB-C / DVB-T antenna:


Plug the antenna plug of antenna system, cable system, or room antenna into the **ANT2** socket.

The connecting cable between **ANT-TV** – **ANT OUT** is plugged at the factory.

Satellite antenna:

Connect an antenna plug, e.g. from the antenna change-over switch or from the twin-LNC of the satellite system to the sockets **ANT-SAT** resp. **ANT-SAT2**.

When connecting only one SAT antenna cable, connect it to **ANT-SAT**.

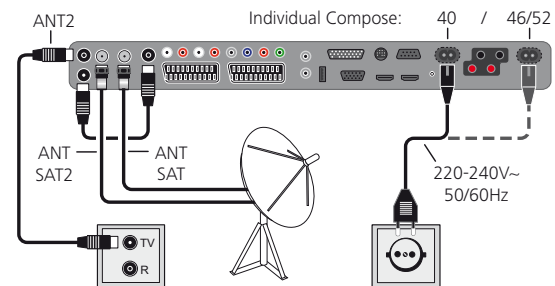

Connections on the back of the set (see also page 5 and 6).

Replace the cover over the connections.

Connecting speakers

How to configure and connect TV speakers, speaker systems or active speakers is described from page 52.

Receiving coded stations

When using a CA module and a Smart-Card to receive coded stations, please observe the handling of the CA module (see page 40).

Initial installation

Turning the set on/off


Switching the TV set to standby mode



Activate the mains switch on the bottom left of the set.
The display in the control panel on the front of the set will be illuminated red, the set is now in standby mode.

Switching the TV on/off on the control unit

Press the on/off button in the middle for about 2 seconds to switch the TV set on/off.

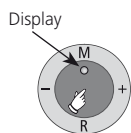

Meaning of the display colour:

Red: Standby mode

Green: TV set is switched on

Orange: Radio mode, TV set receives EPG data or timer recording active

Switching the set on with the remote control



Press the **on/off button**



or
numeric buttons



or
TV button



or
OK button – station list is called



or
ASSIST button – Assist+ menu is called.

 
Switching the set off with the remote control



Press the **on/off button**.

► Before switching off the set with the mains switch, we recommend you to switch it to standby mode.

Switch on in Radio mode



Press **R** on the TV control unit.




or:
Press the **AUDIO button** on the remote control (radio mode, see page 36).

First installation wizard

Initial installation after switching on for the first time

This wizard starts automatically after the set is switched on for the first time, however it can also be called later manually in the TV index, see **Repeat initial installation** on page 16.

► If at least one station is locked the access code must be entered before repeating initial installation (see Parental lock on page 41).

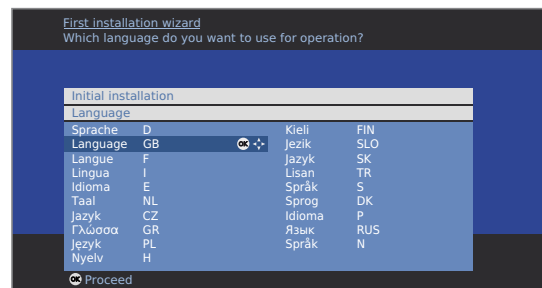

The first step with the wizard starts when selecting the language for the user prompts. From this point on follow the instructions on your TV set.

Brief explanation of button functions:



Press the ring (up, down, left, right) to move the cursor and to select settings.



By pressing the **OK button** a setting is confirmed and you will go to the next step.




With the **yellow button** you can select or remove the individual items (see the example below).
When an element is selected, it is marked by a checkmark .



Use this button to go back one step.



Exit the wizard with the **END button** (if available).

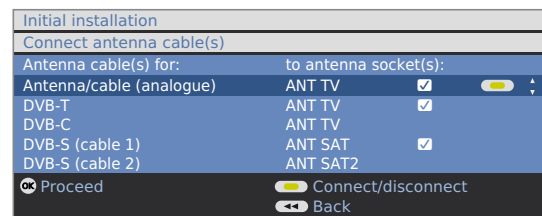

An example of multiple selection using the **yellow button**.

continued on next page →

Initial installation

Explanations of the setting possibilities:

Energy efficiency	<p>Decide how energy efficiently you want to operate your TV set. The value for the contrast (and thus the brightness of the background lighting) is adapted and the automatic dimmer activated or deactivated (see page 22) depending on the presetting.</p> <p>Eco standard: The emphasis for home use is on low energy consumption. The automatic dimmer is activated.</p> <p>Premium mode: This mode optimises the settings to a brighter environment at a higher energy consumption. The automatic dimmer is activated.</p> <p>Shop mode: The picture settings are aligned to operation in the presentation room. The automatic dimmer is deactivated. If the ambient brightness diminishes, the energy consumption is not reduced.</p> <p>The presetting can be changed later in the TV menu under Picture → Picture adjustment → Presettings (see page 22) or under Settings → Energy efficiency.</p>	Logical Channel Number (continued)	For TV sets with MHEG-5 software the stations are tied to "Logical Channel Numbers" – "LCN" and sorted from 1-799. Digital stations without "LCN" are stored from 800 onwards. Analogue stations are stored from 1001.
Location of TV set	<p>Select the country for country-specific pre-settings.</p> <p>If UK or IRL is selected for the location of TV set, it is possible to activate MHEG-5 (UK Freeview) for the TV set.</p> <p>If MHEG-5 was activated, DVB-C and DVB-S can not be used anymore. Only terrestrial/cable and DVB-T stations are available.</p> <p>Caution: Common Interface Plus technology will never work again after activating MHEG-5.</p> <p>A dialogue appears, where you can confirm to set the operating software to the selected location.</p> <p>If Yes is selected and confirmed with OK, the TV set turns off and on again automatically. First installation starts again after activating the operation software.</p>	Encrypted stations	<p>You can state whether coded stations are to be searched for in the search/update. Select yes to save all found scrambled stations. However, these stations can only be received in connection with a CA module and the appropriate Smart Card. Handling of the CA module is described on page 40.</p> <p>If a CA module with a SmartCard is already plugged in for the station search, all the stations which this module can descramble are also saved when no is preset.</p>
Antenna selection	<p>Antenna/cable (analogue): analogue stations via cable/antenna</p> <p>DVB-T: digital terrestrial stations</p> <p>DVB-C: digital stations via cable</p> <p>DVB-S (cable 1): digital stations via satellite</p> <p>DVB-S (cable 2): digital stations via satellite</p>	DVB-T: Antenna	<p>If you are using an active antenna, then select yes (5V) for the antenna power supply.</p>
Subtitle and audio languages (DVB)	<p>You can preset the desired languages and reserve languages for subtitles and audio for DVB programmes here (see page 42)</p>	DVB-C: Settings	<p>The conventional settings will be derived from the selection of set location. Only change this if you know other symbol rates and modulation types or if you have to specify the network ID for your cable network. In the case of small cable networks fed directly from the satellite, the rate of 6900 might have to be replaced by 6111. Information is available from your cable network provider. If you want to run the station search independently of the channel grid, select frequency search for the search method.</p>
Logical Channel Number	<p>In various countries, digital stations (DVB-T, DVB-C) are transmitted with a preset channel number per station, known as "Logical Channel Numbers" – "LCN". In this case the preset channel numbers are adopted as station memory locations and the stations of the preferred signal source sorted according to LCN. There may be gaps in the numbering of the station list depending on the LCN.</p>	High band	<p>Specify here whether the high band of the selected satellite is to be searched in addition to the low band.</p>
		LNK frequencies Low Band / High Band	<p>Normally, you do not need to change the values for high and low band, unless the LNK (LNB) of your satellite system uses a different oscillator frequency (important for the frequency display).</p> <p>After you have made these settings, you should receive the picture and sound of the selected satellites (only with Astra1 and HOTBIRD).</p>
		Search method	<p>If you want to run the station search independently of the channel grid, select frequency search for the search method.</p>
		Symbol rates	<p>The symbol rates are specified by the satellite provider and do not normally need to be changed.</p>
		Favoured signal source	<p>Select the signal source from a list, the station of which is to be at the top of your station list (starting with station slot 1). Recordings with automatic time control (see page 59) are only possible for the respective first DVB signal source.</p>

continued on next page →

Initial installation

Start search Start the automatic station search with **OK**.
The set now searches for TV and DVB radio stations.
The stations found in the automatic search are divided into the appropriate station blocks depending on the previously selected antenna cables (signal sources). Subsequently the stations can only be re-sorted within these blocks. At the beginning of the station list you will find the block with the stations of the preferred signal source.
Any mixed sorting of stations from different signal sources is only possible with the favourites list.

Age-related lock You can specify an age limit for your TV set here. DVB broadcasts which have an appropriate age identification are locked and can only be watched after entering the access code (see page 41).

Connecting additional devices Then the connection and sound component wizard starts which helps you to log in, set and connect video recorders, decoders, a loudspeaker system or a HiFi/AV amplifier to your TV set. A DVD recorder is already logged in ex factory.
You can start the connection wizard and the sound components wizard manually later and add new devices. Further information is available from page 44 (Connection wizard) and page 52 (Sound components wizard).

Digital Link Plus If you have registered and connected a recorder in the connection wizard, the Digital Link Plus transmission begins at the end of the sound components wizard. If a Digital Link Plus capable recorder is connected, the station list of the analogue stations is transmitted to the external recorder.
You can also call Digital Link Plus under **TV menu** → **Connections** → **Digital Link Plus**.

Explanations of the DVB-T antenna:

- Room antenna** With good reception conditions a room antenna can be used for DVB-T (socket **ANT2**).
- Active antenna** Under less favourable reception conditions, it is advisable to use an active antenna which has to be set accordingly in the initial installation or in the **TV menu** → **Connections** → **Antenna DVB** → **Antenna DVB-T** (see DVB-T antenna on page 13).
- Directional antenna** If the location is outside of the normal transmission range then a directional antenna can be used to improve reception quality.

Positioning/aligning DVB-T antenna


If you are receiving one or more DVB-T stations with picture and sound interference then you should change the installation location and alignment of the antenna. Ask your dealer to tell you which channels are used to broadcast the DVB-T stations in your region.

- ➡ In normal TV mode, without other displays. A DVB-T station is received and selected.



Call **TV menu**.

- ◀ ▶ Select **Settings**,
▼ go to the menu line below.
- ◀ ▶ Select **Stations**,
▼ go to the menu line below.
- ◀ ▶ Select **Manual adjustment**,
OK call manual adjustment.

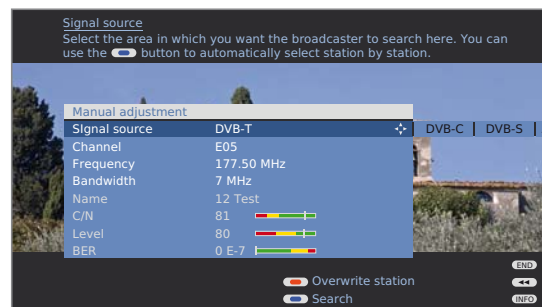

The signal source is already on DVB-T due to the station preselection.

Position and align the antenna in such a manner that maximum values for **C/N** and **Level** are obtained.



Blue button: Start search.

Search for DVB-T stations one after another and compare values for **C/N** and **Level**.
Then position/align the antenna to the weakest station so that maximum values for **C/N** and **Level** are obtained.

Thereafter perform an automatic search for all DVB-T stations, see page 26.

Explanation of the setting possibilities:

- Bandwidth** Depending on the selected channel and country the associated bandwidth will be set automatically.

Operating convenience


General information on menu operation

Menus for the individual operating modes (TV, Radio, PIP, EPG, Teletext, PhotoViewer, MusicBox and DR archive) are called with the **MENU button**. Other menus can be opened with other buttons on the remote control. The menus are displayed at the bottom of the screen. At the top you get additional information about the selected menu item (see info display on the right).

⇒ In normal TV mode, without other displays.

(MENU)

Call **TV menu**.

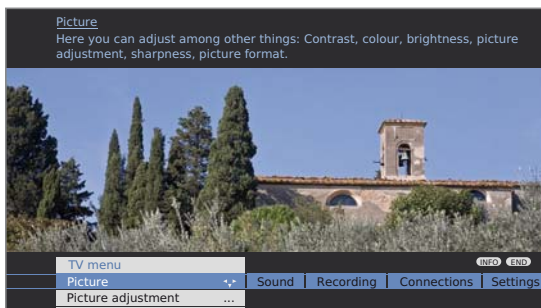

Example: Selecting and executing functions



- ◀ ▶ Select **Picture**,
 - ▼ go to the menu line below.
- ◀ ▶ Select **Brightness**,
 - ▼ go to the menu line below.
- ◀ ▶ Set **Brightness**.
 - ▲ Return to the **Brightness** menu line to make other picture settings.
- ◀ ▶ Select **more ...**,
OK call **more ...** functions.
- ◀ ▶ Select **Auto format**,
 - ▼ go to the menu line below.
- ◀ ▶ Select **on / off**.

(END)

Conclude the settings.

Inputs with the numeric buttons



Letters have to be entered for specific functions. Like using a mobile phone keypad (1 to 9), press a numeric button until the desired character appears.

The available letters are printed on the individual numeric buttons.

The info display


The info display shows a content-based info text for each menu item at the top edge of the screen to aid you in making the settings. In conjunction with the index it makes a convenient control system.

⇒ A menu is displayed.

(INFO)

The factory setting is that the info display is shown automatically for each menu item. In this case you can temporarily hide the info texts with the **INFO button**.

The automatic info display can be hidden via a menu setting. Then it can be displayed temporarily by pressing the **INFO button**.

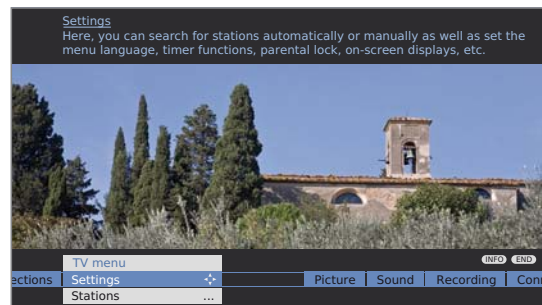

An **INFO** icon at the bottom right above the menu bar also tells you that an info text is available.



If an info text over several pages is available the number of available pages and **P+P- Page ↑↓** is displayed in the Info window. You can scroll through the individual info pages with **P+** and **P-**.

Permanently display or hide the automatic info display

Once you have become familiar with how to operate the TV set, you can switch off the automatic info display.

⇒ In normal TV mode, without other displays.

(MENU)



Call **TV menu**.

- ◀ ▶ Select **Settings**,
 - ▼ go to the menu line below.
- ◀ ▶ Select **Miscellaneous**,
 - ▼ go to the menu line below.
- ◀ ▶ Select **On-screen displays**,
 - ▼ go to the menu line below.
- ◀ ▶ Select **Automatic info**,
 - ▼ go to the menu line below: **yes / no**.

Operating convenience

The index in the TV set

You can start all wizards and many operating functions directly from this point. The complete function scope of the TV set can thus be easily understood.

Alphabetic sorting is preceded by the items **Language**, **Energy efficiency**, **Integrated features** and **Repeat initial installation**.


Call index

- ➡ In normal TV mode, without other displays.
- ➡ If MHEG-5 is active, Index is available via Assist+ menu only (see right column).

INFO

Call **Index**.

You will see an info text for the highlighted keyword in the info display.

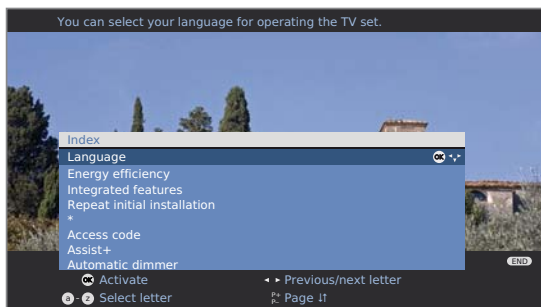

If an OK symbol appears in the marked line, this function can be called directly with **OK**.

Selecting a keyword

 


Enter initial letters with the **numeric buttons** like with a mobile phone keypad (see page 15).

or go with:



- ◀ ▶ to the preceding / next letters,
- ▼ ▲ from line to line,



P+ / P- scroll backwards or forwards in whole pages.

Example: You want to have the TV set switch off automatically at a specific time:
Select the keyword **Switch off** → **Automatic**, with **OK** you will go to the setting.

The Assist+ menu

The most important additional functions of the TV set can be called directly with the Assist+ menu.


Open Assist+

ASSIST

Call **Assist+** menu.



- ▲ ▼ Select additional function,
- OK** calls the function.

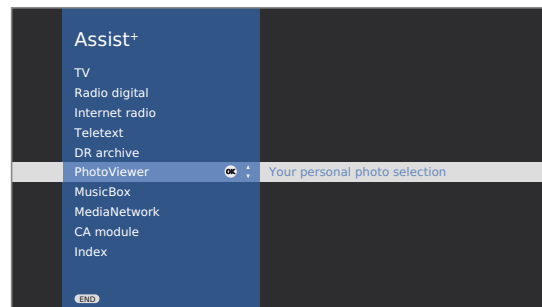


Description of the individual functions:


- TV: See page 18 onwards.
- Radio digital: See page 36.
- Internet radio: Menu item only appears if the TV set is equipped with Network Mediaplayer; see Network Mediaplayer operating instructions.
- Teletext: See page 34 onwards.
- DR archive: See Digital Recorder operating instructions.
- PhotoViewer: See page 62 onwards.
- MusicBox: See page 64 onwards.
- MediaNetwork: Menu item only appears if the TV set is equipped with Network Mediaplayer; see Network Mediaplayer operating instructions.
- CA module: Menu item only appears if a CA module is plugged (see page 40) and a digital station is selected.
- Index: See left-hand column.

Operating convenience

TV menu – Overview diagram

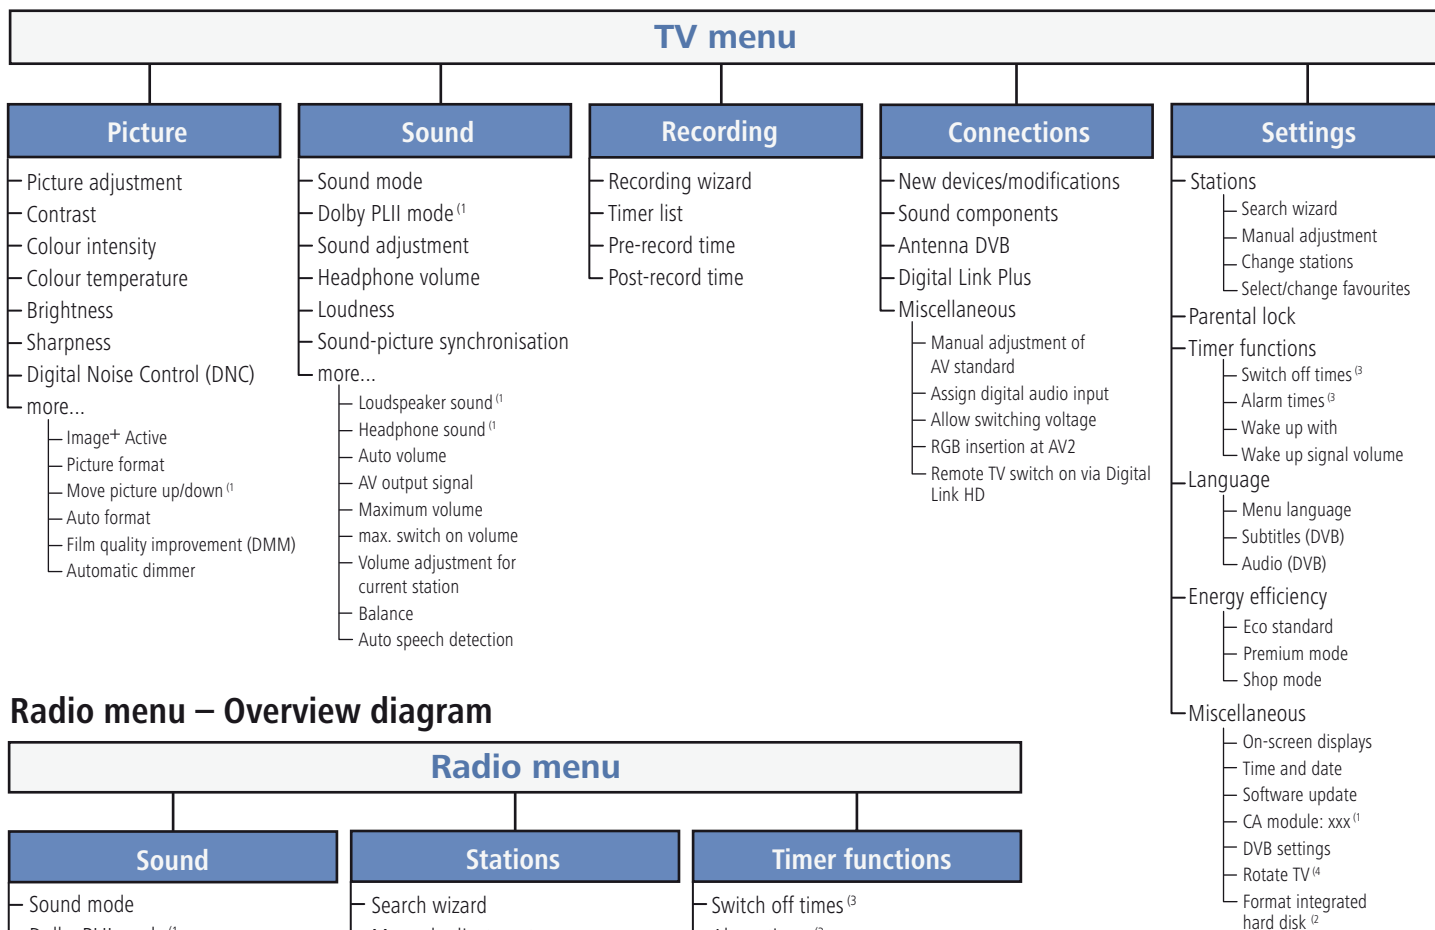

Radio menu – Overview diagram

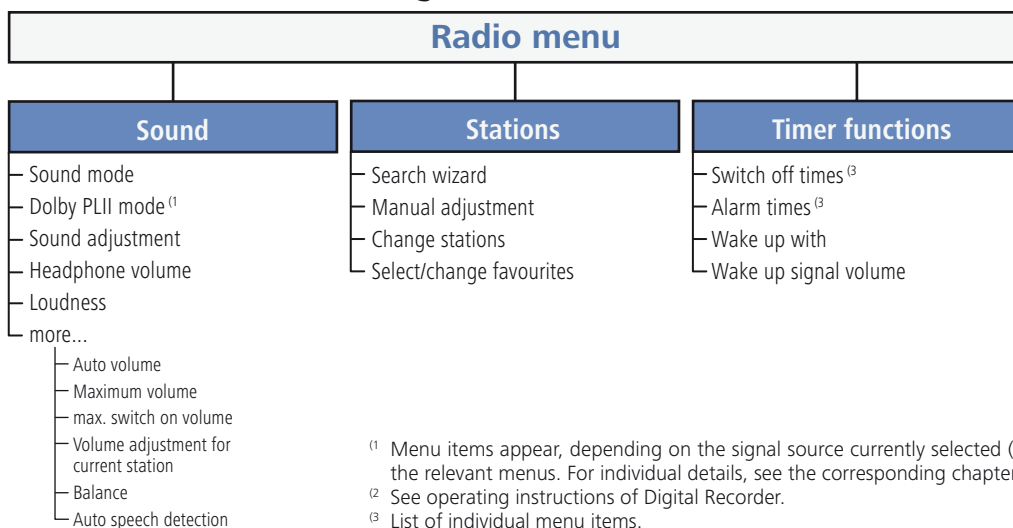

⁽¹⁾ Menu items appear, depending on the signal source currently selected (DVB or analogue) and/or at definite presettings in the relevant menus. For individual details, see the corresponding chapter of the operating instructions.

⁽²⁾ See operating instructions of Digital Recorder.

 
⁽³⁾ List of individual menu items.

⁽⁴⁾ Menu item only appears if a foot with motor drive is used (see page 75).

Daily operation

Select station

With the keys P+ and P- on the remote control



P+ / P- Station up/down.

The station display with sound identification is displayed briefly.

- ➔ If favourites are selected, the station is switched over in the favourites list with **P+ / P-** (see page 19).
- ➔ The symbols for the sound identification are described on page 25.
- ➔ If there are additional languages or DVB subtitles for DVB stations, then language and subtitle selection is shown below the station display. See also page 25: Additional selection possibilities for DVB stations.

With the numeric keys of the remote control



1-digit stations

Keep the **numeric button** pressed for one second, the station changes immediately.

or:

Press the **numeric button** briefly, the station changes after 2 seconds (changes immediately in case up to 9 stations are stored).

2-digit and 3-digit stations

Press first (and second) **numeric button** briefly.

Keep the last **numeric button** pressed for one second, the station changes immediately.

or:

Press all the **numeric buttons** briefly, the station changes after 2 seconds (changes immediately in case of up to 99 or 999 stored stations).

4-digit stations

Press all four **numeric buttons**, the station changes immediately.

- ➔ If favourites are selected, the station in the favourites list is switched to with the numeric buttons (see page 19). Maximum two-digit station numbers are possible.

- ➔ If you select an unoccupied station slot, the next available station is switched to.

Call last viewed station (for TV sets with MHEG-5 software)



- ▲ ▼ You can switch back and forth quickly between two stations using this buttons.

With the station list

- ➔ In normal TV operation, without further displays, no favourites selected:

OK Call Station list.



Sorting numerically



P+ / P- Scroll in the pages of the station list.



◀ ▶ Jump to the next station block.



▲ ▼ ◀ ▶ Mark stations.

or:


Enter the number of the station with the **numeric buttons**. The marked station is shown as a small picture.

OK The marked station is called.



Blue button: Changes the sorting between **numerically** and **alphabetically**.

Sorting alphabetically

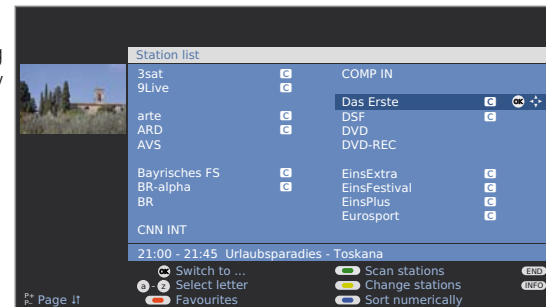

Enter initial letters with the **numeric buttons** like with a mobile phone keypad (see page 15).

The first station for the specified letters is marked.

▲ ▼ ◀ ▶ Mark stations.

OK The marked station is called.





Daily operation


With the favourites lists

You can save and call your favourite stations in 6 favourites lists (e.g. for multiple users). Each favourites list can contain up to 99 stations. After initial installation, 10 stations from the station list are already stored in the first list. Change the favourites list to suit your requirements (see **Put together / change favourites lists** on page 29).


➔ In normal TV mode, without other displays:

 **OK** calls the station list.


 **Red button:** Calls the favourites list.

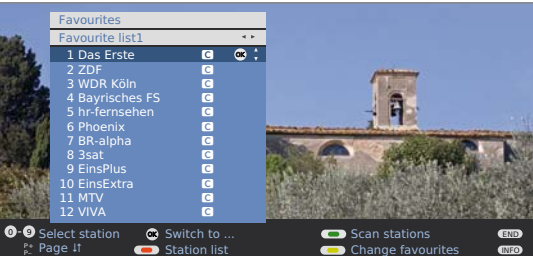


Select station directly with **numeric buttons**. Or:


 **▲ ▼** Mark stations.

P+ / P- Scroll in the pages of the favourites list.

 **◀ ▶** Select other favourites list.

 **OK** The marked station is called.

➔ Other favourites lists can only be selected if these contain stations.

 **Red button:** Back to the station list.

Green button: Scan all stations of the currently selected favourites list.

Yellow button: Change the Favourites lists, see page 29.

Explanation of the favourites lists:

The selection made with the red button (favourites list) is retained until you switch back to the station list with the red button.

If favourites are selected, the name of the favourites list appears in the status display after the station name after changing stations.


Explanation of the icons following station names:


- T** Digital DVB-T station (terrestrial via antenna)
- C** Digital DVB-C station (via cable)
- S** Digital DVB-S station (via satellite)
- C+** Coded station
- CI+** CI+ coded station
- A** Locked station (see Parental lock on page 41)


Select video source

➔ Please ensure that the appropriate devices have also been registered with the connection wizard (see page 44).

With the AV selection

 Call **AV selection**.

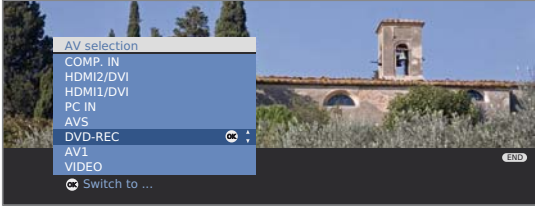


 **▲ ▼** Select desired device or connection, **OK** switch over.

A signal from the selected video source should now be visible.

With the station list

➔ In normal TV mode, without other displays:


 **OK** Call the station list.


If the favourites list is displayed, switch to the station list first.

In numerical sorting the connections or devices are always at the beginning of the list.

In alphabetic sorting, the connections or devices are sorted in alphabetically.



 **▲ ▼** Select connection/device.

 **OK** Switch over.

Daily operation

 
Adjusting the sound

Switching sound off/on



Sound off;
Sound on: Press button again or set volume **V+**.

Setting the volume



V+ / V- Volume louder / quieter.

The volume bar will be shown briefly if no other menu is displayed.

Setting the Sound mode



Call **Sound mode**.



 
◀ ▶ Select the number of speakers you want to hear.

Additional sound settings for volume adjustment and for Sound mode:

▣ As long as you can still see the volume bar or the selection of speakers for sound mode:



▲ Call additional sound settings.



◀ ▶ Select sound setting,
▼ go to the menu line below.

◀ ▶ Make changes.

Sound settings via the TV menu

▣ In normal TV mode, without other displays.



Call **TV menu**.



◀ ▶ Select **Sound**,
▼ go to the menu line below.

◀ ▶ Select desired sound setting,
▼ go to the menu line below.

◀ ▶ Make changes.

Explanations of the sound settings:

Sound mode Select the number of speakers you want to hear. The selection depends on the connected sound components (from page 52) and on the transmitted audio signal.

▣ If the number of speakers appears in brackets, the sound of missing speakers is transmitted by the existing speakers (virtual).

optimal The momentarily reproduced audio signal is output with the ideal number of speakers.

1 ▶ Play centre sound or mono (left/right).

2 ▶ Play front sound (L/R stereo).

3 ▶ Play front and centre sound.

4 ▶ Play front and surround sound.

5 ▶ Play front, surround and centre sound.

Amplifier ▶ Play via an external HiFi amplifier. Selection is only possible if an amplifier has been selected in the sound components wizard (see page 57).

Dolby PLII mode Here you can make Dolby Pro Logic II sound settings for movie, music, matrix and personal settings. Menu item only appears with certain sound mode settings.

Sound adjustment Speech, Classical, Pop, Custom music, and Custom film sound.

Headphone volume Adjust the headphones volume.

Loudness Proper boost of bass and treble tones at low volume.

Sound-picture synchronisation If the sound does not exactly match the picture, you can correct it here. If you move to the left in the bar you delay the sound in relation to the picture. If you move to the right you accelerate it in relation to the picture. The sound is adapted in time steps of 10ms each.

The Sound-picture synchronisation menu item only appears for DVB stations.

more ... Call with **OK** (see next page).

Daily operation

Explanations of the sound settings:

more ...

Loudspeaker/
Headphone sound Selection possibility Mono/Stereo or Sound 1 or Sound 2 for two-sound broadcasts separately for speakers and headphones. Only available for analogue stations.

Auto Volume Reduces volume differences, e.g. for advertisements that are too loud.

AV output
signal Sound selection for two-sound broadcasts.

Maximum
volume Determining the maximum volume that can be set.

max. switch on
volume Specify the volume that is set when switching on the TV set with the mains switch.
If the volume is higher when switching the TV set to the standby mode than specified here, then it is reduced automatically to the fixed maximum switching on volume when it is turned on again.

Volume
adjustment for
current station The volume can differ according to the individual stations. If the sound is too loud or too quiet in relation to other stations, adjust the volume. When the menu is open, you can select the stations one after another with **P+ / P-** and adjust every single station conveniently.

Balance Set stereo balance so that the volume impression is identical on the left and right.

Auto speech
detection If the automatic speech detection is activated, the sound of the current program is automatically output with optimum comprehensibility when speech is detected.

Daily operation

 
Adjusting the picture



Call **TV menu**.



- ◀ ▶ Select **Picture**,
- ▼ go to the menu line below.



- ◀ ▶ Select the desired picture function,
- ▼ go to the menu line below.

- ◀ ▶ Make changes.

Explanations of the picture settings:

Picture adjustment Switches the picture parameters between personal settings and energy efficiency presets.

Contrast Adjust contrast.

The power consumption of the TV set is directly dependent on the value set here (see also page 13).

Colour intensity Adjust the colour.

Colour temperature Set warmer or colder tone for picture.

Brightness Adjust the brightness of the picture.

Sharpness Adjust the contour sharpness of the picture.

DNC Removes or reduces the signal noise in the picture.

more ... Call with **OK**.

Image+ Active Picture improvement on/off and demo mode for Image+ Active.

Picture format Set picture format (see right hand column).

Move picture up/down Move picture vertically (see page 23).

Auto format Automatic detection and setting of the picture format for Cinemascope or widescreen movies.

DMM Reduce jolting.

Automatic dimmer The TV picture adapts to the ambient brightness. The energy consumption of the set is reduced by contrast reduction in a lower ambient brightness. The contrast and energy consumption increase with a high ambient brightness.

Presettings / Personal settings for picture adjustment

 


Call **TV menu**.



- ◀ ▶ Select **Picture**,
- ▼ go to the menu line below.

- ◀ ▶ Select **Picture adjustment**,
- ▼ go to the menu line below.



- ◀ ▶ Select **Presettings** or **Personal settings**.
- ▼ For presets, go to the menu line below.

- ◀ ▶ Select the desired presetting for the picture.
- OK** Confirm selection.

Explanations for Picture adjustment:

Custom adjustments of contrast, colour intensity, colour temperature, brightness, sharpness and digital noise control are saved in the **Personal settings**. Every signal source has its own personal settings.

By selecting **Presettings** the picture settings for the respective currently active signal source are set to predefined values.

For an explanation of the signal sources see glossary: **Signal input groups**.

In the index of the TV set, all the picture and sound adjustments can be reset to the factory values for all signal sources in one step under **Reset picture/sound** or **Factory settings picture/sound**.

Selecting the picture format



Press the **Picture format button** until the desired picture format is set or press



- ◀ ▶ to select the desired picture format.

The **Panorama** picture format can be set between proportionally correct and format filling display. Black bars are visible on the left and right of the picture in the proportionally correct display.

Switch: Keep the **M button** on the TV pressed, at the same time, press the **Picture format button** on the remote control briefly.



Reset: Press the same button combination again.



continued on next page →

Daily operation

Explanations of the picture formats:

➡ The setting options depend on the transmitted picture content.

16:9 Proportionally correct display of 16:9 broadcasts.

4:3 Proportionally correct display of 4:3 broadcasts.

Panorama Proportionally correct or format filling display (as-delivered state) of 4:3 broadcasts on the 16:9 screen. Station logo and subtitles remain visible. See page 22 for switching the Panorama mode.

Cinema Proportionally correct, format filling display of 4:3 broadcasts on 16:9 screens. Station logo and subtitles usually not visible.

Zoom Proportionally correct display. Maximum picture magnification.

PALplus Is a 4:3-compatible 16:9 picture broadcast supplied by the station which is detected automatically.

If a high resolution video signal is displayed on the TV set or fed in via the interfaces PC IN, HDMI1/DVI, HDMI2/DVI oder COMP. IN, the picture formats 16:9 PC, 16:9 TV, 16:9 Zoom, 4:3 PC, 4:3 TV and 4:3 Zoom can be set. In the PC formats, the complete picture content will be shown. In the TV formats a small part of the picture is cropped. This may be necessary to hide possible interference at the edge of the picture, which arises from the signal supplied.

Move picture vertically



➡ In normal TV mode without other displays.

▲ ▼ Move picture up/down.

 


To show subtitles or news tickers which have been cut off, the picture can be moved up or down in the picture formats **Panorama**, **Cinema** and **Zoom** (not with high resolution signal) with the **arrow buttons** ▲ ▼.

➡ For TV sets with MHEG-5 software you can switch back and forth quickly between two stations using these buttons (see also on page 18).

Operation without remote control

Changing the station on the TV set



+ / - Station up/down.

Switching radio on or off or switching to radio

 


R Radio on or switch between TV and Radio.

Calling the TV menu on the set



M Call **Direct control on TV set** menu,



- / + select function.

➡ **Service** is intended for the customer service.

M or **R** Go to the menu line below,
- / + make changes.

M Move up one menu line,
- / + select other function.

Daily operation

Button functions

Every operating mode of the TV set (TV, Radio, Teletext, EPG, PIP, PhotoViewer, MusicBox and DR archive) has its own menu and own functions for the coloured buttons.

The function of the coloured buttons is shown at the bottom of the menus and wizards. Below, some of the function are listed which you need in TV mode for the daily handling of your TV set.

Functions of the coloured buttons in TV mode

- ➡ The coloured buttons do not work as described below for TV sets with MHEG-5 software, but they operate as described on page 36 (Digital Teletext).



Red button: DR archive on/off.

For TV sets with MHEG-5 software you can open the DR archive via the menu Assist+ (see page 16).

 


Green button: Open the **Teletext functions** menu.

You can select **Subtitles** and your **Personal text pages** via the **Teletext functions** menu. The operation of subtitles depends on the station selected.

Subtitles

Subtitles analogue stations:



- ◀ ▶ Select **Subtitles**,
▼ go to the menu line below.

 
- ◀ ▶ Select the size of the teletext subtitles,
OK show teletext subtitles
(display only if subtitles are available).




END: Teletext subtitles off or select **off** in menu.

Subtitles DVB stations:

- ➡ If the DVB station does not provide any subtitles, the menu item **Subtitles** is greyed out and cannot be accessed with **OK**.
- ➡ The DVB subtitles can also be selected via the status display (see page 25).



- ◀ ▶ Select **Subtitles**,
OK call.

 


- ▲ ▼ Select subtitle mode,
OK show/hide subtitles.

Functions of the coloured buttons in TV mode (continuation)



 Green button: Open the **Teletext functions** menu.



- ◀ ▶ Select **Personal text pages**,
OK call.

Personal text pages



- ▲ ▼ Select text page,
OK view.

➡ If only one text page is defined, no list will be shown and the Teletext page will be opened immediately. To define your personal text pages, see page 35.




Yellow button: Go to the last viewed station.

Use this button to quickly switch back and forth between two stations. For MHEG-5 see page 18 or 23.



Blue button: Show programme info.

The programme info of the following programme is displayed additionally for DVB stations. If MHEG-5 is active, press **INFO** button twice for programme info.

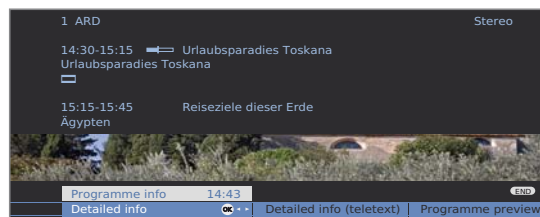

Explanation of the symbols in the programme information:

- Programme in 16:9 picture format
- Programme in high picture definition (HDTV)
- Programme with Dolby-Digital sound
- Broadcast of subtitles for the deaf and hard of hearing
- Programme with youth protection (see **Parental lock - Age-related lock** on page 41).

The symbols may also appear in combinations.

Permanent display of time



Press twice in rapid succession:
Time is shown/hidden permanently.



 
Daily operation

Status display

➔ In normal TV mode, without other displays.

END

END: Show / hide status display.
For MHEG-5, **INFO button**.



You will see the number and name of the station, the title of the current broadcast (if available) and the sound identification in the top two lines. The bar (if available) indicates the progress of the current programme.

If information about the current programme is available, this can be called with the **INFO button**, the button is displayed on the right in this case.

A selection (see right hand column), the time and, if activated, the alarm time and switch-off time appear at the bottom depending on the DVB station.

Explanations of the symbols for sound identification:

Transmitted audio signal:

- Mono** Mono audio transmission analogue
- 2-sound** Two-sound transmission (Sound1/Sound2) analogue
- Stereo** Stereo sound transmission analogue or digital (PCM)
- DD Digital** Dolby Digital sound transmission (DD)
- dts** dts sound transmission
- MPEG** MPEG sound transmission
- PLII** Dolby Pro Logic II sound transmission

Transmitted audio channels:

- DD / dts 1.0 / mono
- DD / dts / MPEG 2.0
- DD / dts 3.0
- DD / dts 4.0
- DD / dts 5.0
- DD / dts 2.1
- DD / dts 3.1
- DD / dts 4.1
- DD / dts 5.1

Selected listening mode:

- 1 Play centre sound or mono (left/right).
- 2 Play front sound (L/R stereo).
- 3 Play front and centre sound.
- 4 Play front and surround sound.
- 5 Play front, surround and centre sound.

➔ If the number of speakers appears in brackets, the sound of missing speakers is transmitted by the existing speakers (virtual). The Dolby Virtual speaker (VS mode) developed by Dolby is activated for the virtual sound reproduction.

Additional selection possibilities for DVB stations

In the status display additional selection possibilities can be offered for specific programmes depending on the DVB programme provider.

- ➔ The **coloured buttons** do not work as described below for TV sets with MHEG-5 software, but they operate as described on page 36 (Digital teletext).
- ➔ If during the status display you press one of the **coloured buttons** or the **TEXT button** then the associated selection menu will be displayed.
- ➔ The selection line is also displayed automatically when a new broadcast with different options to the previous broadcast begins or when you switch stations.

The selection menus are only available as long as the status display is shown. However you can call them again by pressing the **END button**.

Red button: Channel selection for multi-channel providers

Green button: Language/sound
The sound formats on offer and their designations depend on the programme being broadcast.

Yellow button: Time selection

Blue button: CA module selection
The CA module selection only appears when two CA modules are plugged in, which are both able to descramble the encrypted station. In this case, you can choose which of the two CA modules should descramble the station.

TEXT

TEXT: Subtitles
The subtitles available depend on the programme being broadcast

Other setting options for DVB stations

You can make general presettings for DVB stations under **TV menu** → **Settings** → **Miscellaneous** → **DVB settings**.

Subtitle mode Here you can preset whether a subtitle is always to be displayed as soon as it is offered by the station. A special subtitle for impaired hearing can also be selected. Subtitles are not offered by all stations. Many stations only broadcast subtitles by teletext.

Audio mode Here you can preset whether you always want to hear a special sound for impaired sight as soon as it is offered by the station.

DVB character set Select the DVB character set so that the title of the broadcast of your favourite received station or the texts of your CA module are displayed correctly.

Managing stations

TV stations

Various options for managing stations are available via the TV menu. For example the description for TV stations. For radio stations the same applies, except that the Radio menu is called in Radio mode (see also page 36).

- ➡ Station management is not possible if a programmed timer recording is still pending.
- ➡ If at least one station is locked the access code must be entered before Search/Update (see Parental lock on page 41).

Search/update stations – Search wizard

In the search/update with the search wizard, new stations are searched for which have not yet been stored.

- ➡ You have to repeat the initial installation (see page 12) and automatically search for new ones if you want to delete all the existing stations and automatically search for new ones. Do also use the first installation if you want to change to receiving MHEG-5 stations (attend restrictions for DVB software update, see page 38).


MENU



Call TV menu.

- ◀ ▶ Select **Settings**,
▼ go to the menu line below.
- ◀ ▶ Select **Stations**,
▼ go to the menu line below.
- ◀ ▶ Select **Search wizard**,
▼ go to the menu line below.

In the upper info text the current search settings will now be displayed:

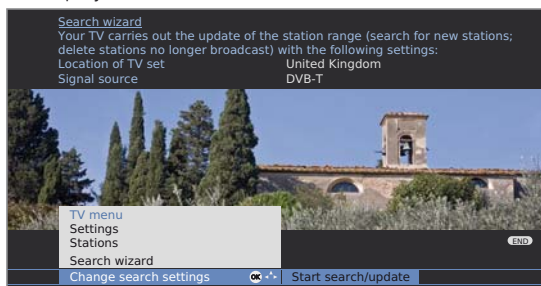

If you want to change these search settings:



- ◀ ▶ Select **Change search settings**,
OK wizard prompts search settings.

If you agree with these settings:

- ◀ ▶ Select **Start search/update**,
OK start search.

Explanations of some search settings:

- Set location** Select the country for country-specific defaults and station sorting.
- Signal source** Select antenna, cable, or satellite here, depending on where you want to search for new stations. At this point you can also call a configuration of the DVB-T and DVB-S antennae via the **green button** (see page 13).
- Antenna/cable:** With selection of set location the conventional TV standard/colour standard is the default. This should only be changed if stations with other standards are to be searched.
- Encrypted stations** You can state whether coded stations are to be searched for in the search/update. Select **yes** then coded stations are also searched for. However, these stations can only be received in connection with a CA module and the appropriate Smart Card. Ask your dealer which Smart Card you need to receive certain stations. Handling of the CA module is described on page 40.

DVB-T If you want to run the station search independently of the channel grid, select **frequency search** for the search method.

DVB-C With the selection of set location the conventional settings will be preset. Only change this if you know other symbol rates and modulation types or if you have to specify the network ID for your cable network (information available from your cable network provider). If you want to run the station search independently of the channel grid, select **frequency search** for the search method.

DVB-S If you want to run the station search independently of the channel grid, select **frequency search** for the search method. The symbol rate is specified by the satellite provider and normally does not need to be adjusted.



Red button: Abort current search/update.


Managing stations

Search for/update stations – handling of new and no longer found stations

The number of new stations found is displayed after the automatic search/update has been completed.



OK List of new stations found

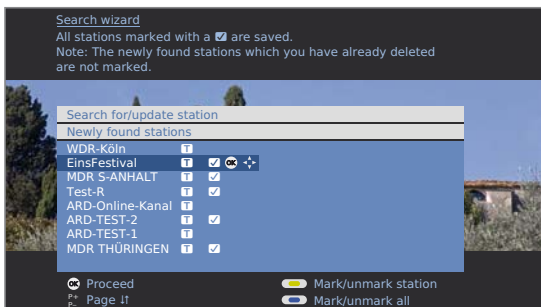

Select station.




Yellow button: Mark / unmark station

Blue button: Mark / unmark all

OK saves the selected stations.

Afterwards, a list of the stations which are saved but which are temporarily not broadcasting or no longer exist is displayed, if available.

The number of the memory location used is displayed in front of the station. Please select the stations you really want to delete.

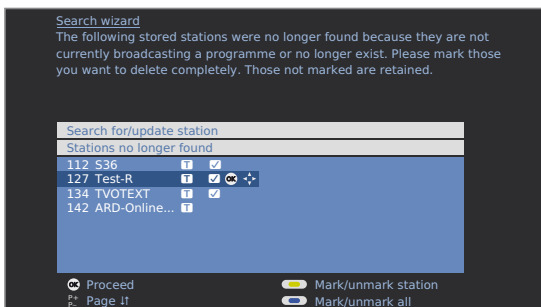

Select station,



Yellow button: Mark / unmark station

Blue button: Mark / unmark all

OK deletes the selected station.

END: Exit the search wizard.

Search/update station – manual search



Call **TV menu**.




Select **Settings**,
 go to the menu line below.

Select **Stations**,
 go to the menu line below.

Select **Manual adjustment**,
OK call input box.

You can enter or edit the station data in the following lines:

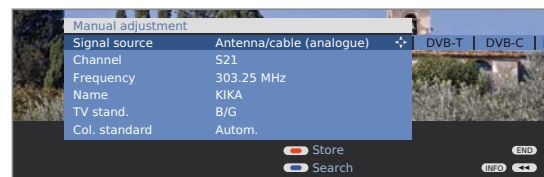

Or:



Blue button: Starts **Search** and searches for next station.

Red button: Stores station.

➔ Only stations for the selected signal source can be saved which do not yet exist in the station list.

➔ Stations which already exist in the station list for the selected signal source are displayed with their station numbers and names on a grey background. These stations can only be overwritten with the **red button**.

Explanations of some search settings:

Various settings are possible depending on the selected signal source. Some settings have already been explained in the initial installation (see page 12 onwards).

Signal source Selection of range in which you want to search for the station.

Channel Direct input of channel.

Frequency Direct input of station frequency.

TV stand. Input of station TV standard.
(B/G, I, L, D/K, M, N) Ask your dealer in this regard.

Col. standard Input of the station colour standard.
(PAL, SECAM, NTSC-V, PAL60, Autom.)
Ask your dealer in this regard.

Managing stations

Change, delete, move, rename, restore station


- ➡ **Change station** can also be called via the station list (page 18).
- ➡ If at least one station is locked the access code must be entered before changing stations start-up (see Parental lock on page 41).

MENU



Call TV menu.

- ◀ ▶ Select **Settings**,
▼ go to the menu line below.
- ◀ ▶ Select **Stations**,
▼ go to the menu line below.
- ◀ ▶ Select **Change stations**,
OK call list of stations.

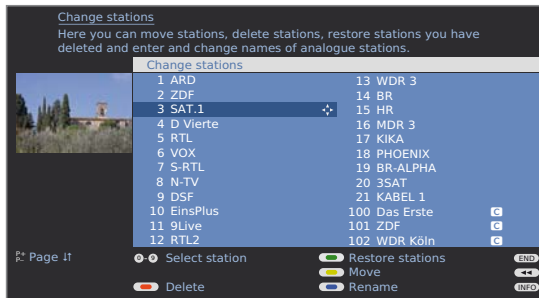

In this menu you can delete, move, rename or restore stations.



- ◀ ▶ ▲ ▼ or **numeric buttons**:
Select the appropriate station.
Scroll with **P+/P-** if necessary.

Delete station



Red button: Starts **Delete** station.



- ▲ ▼ Select several stations to be deleted if necessary,
OK to execute the delete.

Move station / Change order

- ➡ Not possible for MHEG-5 stations.
- ➡ Stations can only be resorted within the signal source block.



Yellow button: Starts **Move** station.



- ▲ ▼ mark several stations if needed,
OK selection ended,
- ▲ ▼ Select insertion position from which the selected stations are to be inserted,
OK to execute the move.

Rename station

- ➡ Not possible for MHEG-5 stations.
- ➡ DVB stations for which the station name is also broadcast cannot be renamed. In this case, the **Rename** function is hidden.



Blue button: Starts **Rename** station.



Under the 1st letter of the name you will see a line indicating the current input position.

- ▶ Input position one character to the right (also for blanks).
- ◀ Input position one character to the left (deletes the character).



Enter the letters one after another with the **numeric buttons** on the remote control. Like using a mobile phone keypad, press a numeric button until the desired character appears. The available letters are printed respectively on the buttons. Different special characters can be selected with button 1.



Green button: Switch upper/lower case letters.



OK to save new name.

Restore stations

Stations which have been deleted from the station list can be restored.



Green button: Starts **Restore** stations.



- ▲ ▼ ◀ ▶ Select station,
OK station is restored.

The restored station is sorted in according to its signal source at the end of the respective signal block.

Managing stations

Put together / change favourites lists

Each favourites list can contain up to 99 stations. You can put together the favourites lists to suit your requirements (e.g. topic lists). Other persons using this TV set can create their own favourites lists.

The favourites lists also have the advantage that the stations of different signal sources can be stored in the order you wish.

⇒ **Change favourites** can also be called via the favourites list (page 19).

MENU




Call **TV menu**.

◀ ▶ Select **Settings**,
▼ go to the menu line below.

◀ ▶ Select **Stations**,
▼ go to the menu line below.

◀ ▶ Mark **Select/change favourites**,
OK calls list of all stations and last active favourites list.

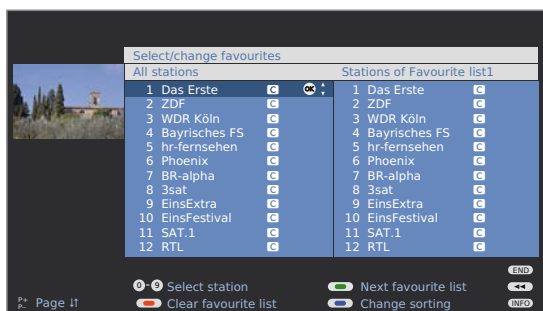

Green button: Select the next favourites list.

Rename favourites list

⇒ Favourites list (right column) must be selected.
If not, change the list with ▶ .

Blue button: Starts **Rename favourites list**.



Numeric buttons: Enter new name (same procedure as for rename station, see page 28).



OK to save new name.

Add station to favourites list

⇒ All stations (left column) must be selected.
If not, change the list with ◀ .



P+/P- Scroll in the pages of the station list if necessary.



▲ ▼ Mark station or select station with the **numeric buttons** (for alphabetical station sorting enter the initial letter) which is to be transferred as a favourite to the favourites list.



OK transfers the station to the favourites list.
The new station is inserted at the end of the favourites list. Proceed in the same manner with additional stations.

Delete station from favourites list

⇒ Favourites list (right column) must be selected.
If not, change the list with ▶ .



▲ ▼ Mark station to be deleted.

OK Removes the marked station from the favourites list.

OR:



Red button: Starts **Clear favourite list**.



OK confirms clear favourites list.

Move / change order of stations in the favourites list

⇒ Favourites list (right column) must be selected.
If not, change the list with ▶ .



▲ ▼ Mark station to be moved.



Yellow button: Starts **Move station**.



▲ ▼ Select insertion position at which the marked station is to be inserted.

The insertion position can also be selected with the numeric buttons.



OK to execute the move.

Picture in Picture

Picture in Picture (PIP)

The concurrent display of two different images is referred to as Picture in Picture.

- ➡ The coloured buttons do not work as described below for TV sets with MHEG-5 software, but they operate as described on page 36 (Digital Teletext).
- ➡ A concurrent representation of two HDTV signals is not possible.
- ➡ A concurrent representation of two coded stations is not possible.
- ➡ Picture change and station selection is restricted during recording.

Your TV set distinguishes between two PIP displays:

Split screen In this case the screen is divided in the middle and the additional PIP image is shown on the right side of the screen. Both images are compressed horizontally and each gets half of the screen.

Small PIP In this case a small PIP image is inserted in the TV picture.

The PIP operation distinguishes between two functionalities:

Standard PIP Stations freely selectable and changeable for PIP and TV picture (coloured buttons have PIP-specific meaning, see below).

iPIP The TV picture is moved to the PIP picture when you press the PIP button. The station of the TV picture is now freely selectable. When you press the PIP button again, the PIP picture returns to the TV picture and the PIP window closes.

Start and end Picture in Picture mode

 PIP Show/hide PIP.





In the Standard PIP function a green frame indicates that the station selection acts on the PIP picture. A white frame means that the operation refers to the main picture. If the frame is blue, the station scan is active in the PIP picture. If the iPIP function is activated, this is indicated by an orange frame.

- ➡ For TV sets with MHEG-5 Software, you switch from the green bar/frame to the white by using the **PIP** key. The next time you press the **PIP** key, PIP is switched off.

Standard PIP operation:

PIP as freeze picture

- ➡ The frame is green, if not, press the **green button**.

    **Red button:** Freeze picture in PIP on / off.

Swap contents of PIP and main picture

- ➡ The frame is green, if not, press the **green button**.

    **Yellow button:** Swaps contents of TV picture and PIP picture.

Select the PIP picture

- ➡ The frame is green, if not, press the **green button**.


Select the station as usual.



Select the station for the main picture



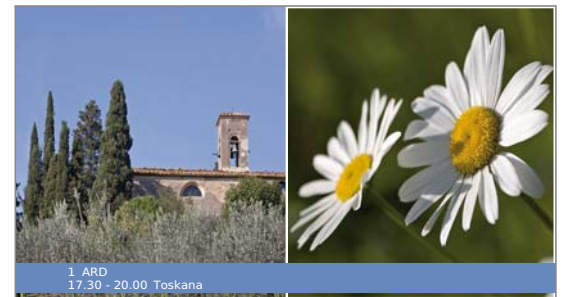

- ➡ The frame is white, if not, press the **green button**.



Select the station as usual.



Scan station in the PIP

- ➡ The frame is green, if not, press the **green button**.

    **Blue button:** Start **Scan stations**. The frame turns blue, the stations now change automatically.

    **Blue button:** Stop **Scan stations**. The frame is green again.

Picture in Picture

Configure Picture in Picture (PIP) mode


In the PIP menu you can set the PIP type (Split Screen or Small PIP), the PIP function (Standard PIP or iPIP) and the position of the small picture.

Start PIP menu

- ➔ PIP mode started, if not, press **PIP button**.
- ➔ The frame is green, if not, press the **green button**.


(MENU)

Call PIP menu.

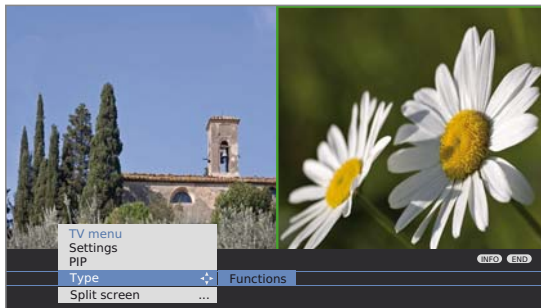

Switch to Small PIP / Split screen

- ➔ PIP menu open.

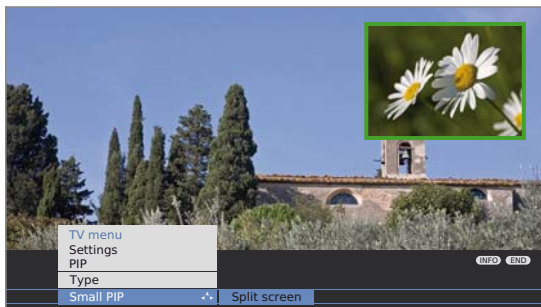

- ◀ ▶ Select **Type**,
 - ▼ go to the menu line below.
- ◀ ▶ Select **Small PIP** or **Split screen**.

Change position of the PIP small picture

- ➔ Other than the status line, which may possibly be displayed, no other display is shown on the screen:




- ▲ ▼ ◀ ▶ Move the PIP into a corner of the screen.

The position of the small picture can also be selected under **Position** in the PIP menu.

Switch to iPIP / Standard PIP function

- ➔ PIP menu open.

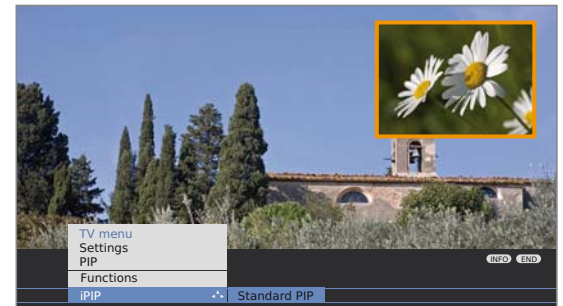

- ◀ ▶ Select **Functions**,
 - ▼ go to the menu line below.
- ◀ ▶ Select **iPIP** or **Standard PIP**.
 - In iPIP the frame around the PIP picture is orange.

iPIP operation:



When the iPIP function is set, the currently displayed picture becomes the PIP picture on pressing the **PIP button**. You can select other stations for the TV picture and still keep an eye on the PIP picture. You can temporarily "ban" commercials or programme sections to the PIP picture in this way.



The PIP picture becomes the TV picture again (PIP off).

Electronic Programme Guide

Electronic Programme Guide – EPG

EPG stands for Electronic Programme Guide and provides you with on-screen programme details. With the system, as with a printed programme guide, you can learn about the current programme. In addition programmes can be sorted according to certain topics, memorised, and also recordings can be programmed.

Starting and ending EPG

EPG

Switch EPG on / off.

- ➔ A wizard will guide you through the necessary presettings the first time you start the EPG. If you have analogue reception, you enter the data capture for analogue stations after that (see page 33).
- ➔ For TV sets with MHEG-5 software, EPG is only possible for DVB-T stations.



The display of the programme guide is divided into two branches. The programme list (bottom) is influenced by certain specifications (top).



Blue button: Switches between the upper default lines **Date, ..., Topics** and the lower programme list.

Switching and memorizing with the programme list

- ➔ In the programme list first all currently running programmes are listed.
- ➔ You are in the lower programme list, if not, press the **blue button**.



- ▼ ▲ Select station.
- OK** View / Memorise.

View The programme is in progress. The TV set switches to the marked programme.

Memorise The programme has not started yet and is memorised. A appears in front of the programme. The TV will ask at the beginning of a program if it should change the channel or switch on from the stand-by mode if the corresponding option of the EPG menu is activated (see page 33).


- ➔ Programmes can also be noted by the timer overview (see page 60).

Adjusting the programme list

- ➔ The selection is at the top of the specifications, if not, press the **blue button**.



- ▼ ▲ Select **Date, Time, Stations** or **Topics**.
- ◀ ▶ Select defaults within the respective line.

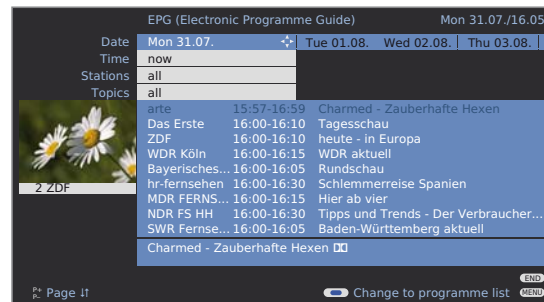

Example If you are searching for the next news, select today's date, **17:00** for example for the time, **all** for station and **News** for topics. Then you get a list of all news programmes from 17.00 h onwards in the programme list below it. The type of list of programmes in the programme list depends on the setting of the **sorting** in the EPG menu (page 33).

Time entry If the line **Time** is selected, then you can enter the time after which the programmes will be displayed, via the numeric buttons of the remote control. The broadcasts are sorted according to the order of the station list within the selected time window.

Stations If a **favourites list** has been selected, only the programmes of stations from the favourites list are displayed in the programme list. A single station can be selected with "...". The Select single station window is opened. After selection, only programmes of the selected single station are displayed.

Hint Before pressing the **blue button** to leave the upper selection lines, select one of the preceding lines. If you then switch back to the programme list, you can change this menu line with ◀ ▶, without having to leave the programme list. If you have marked **Time**, then you can enter the time, after which the programmes will be displayed, with the numeric buttons of the remote control.

Paging through the programme list



P+ / P- Page backwards / forwards.

In the entries for **Date** and **Time**, you will see changes in time as well as in date when paging. Scrolling in the programme list is also possible when the selection is at the top of the specifications.

Electronic Programme Guide

Calling additional information about the programmes

- ➡ Brief information about many programmes is displayed below the programme list of the broadcasts.



You can call detailed information with the **TEXT button** if this function is offered by the TEXT icon in the lower left. The symbol explanations are described on page 24.

Programming a recording for a recorder

- ➡ The selection is in the lower programme list, if not, press the **blue button**.



- ▼ ▲ Mark the desired programme.



RECORD button: Starts recording wizard.

Change or confirm timer data if necessary (see page 59, "The direct way to record").

Then a **red dot** will be displayed in front of this programme as an identification.



RECORD button: Deletes the already programmed recording of the red marked programme from the timer. If the timer data have been transferred to an external recorder, then the timer must also be deleted there.

 
Configuring EPG

Start the EPG menu

- ➡ EPG mode is started, if not, press the **EPG button**.



Call the **EPG menu**.



Settings in the EPG menu:

Select provider (only for analogue stations), **Station selection**, **Data capture**, **Switch on TV when marked**, **Sorting**.

Explanations of setting possibilities in the EPG menu:

Select provider In **analogue TV reception** there may be different providers who transmit the EPG data for certain station packages.

You can have the **list** of providers created **automatically** with the **yellow button** in the **provider selection**. You can select the desired provider at the end of the provider search. You can create the **list** of providers **manually** with the **blue button**.

Station selection In the **station selection** you can determine for which station in the programme guide information is to be displayed. Only stations with are shown in the EPG. With the coloured buttons you can select or remove stations or only select the stations from the favourites lists. Because of the large number of receivable DVB-S stations you should restrict the station selection. This reduces the data entry time and increases the clarity in the EPG.

Marking the stations according to reception ranges:

E Analogue stations via antenna/cable, for which the current provider supplies data.

T Digital terrestrial stations DVB-T.

C Digital cable stations DVB-C.

S Digital satellite stations DVB-S.

Data capture **on (for DVB + analogue):** data capture for DVB and analogue stations

on (only for DVB): data capture only for DVB stations.

off: no data capture.

After changes in the EPG menu or after switching off at the mains switch the EPG data must be collected first.

To do this, switch on the set and select the station from the analogue stations which you want defined as a provider and let the TV set run for about 1 hour with the selected station. Or:

Switch the TV set into standby mode. The display on the TV set glows orange after 2 minutes and the EPG data entry begins.

The data capture normally takes place at night between 2 and 5 o'clock if the TV set is in the standby mode.

Switch on TV when marked When **yes** is set, the switched off TV switches on automatically from the standby mode at the beginning of a set programme. A screen message appears when switching on. If this is not confirmed within 5 minutes with the **OK button**, the TV switches back off automatically for safety reasons.

Sorting The programmes can be sorted either according to their start times (**chronologically**) or according to stations (**corresponding to station list**).

Teletext

Teletext

Your TV set supports the two operating systems TOP Text and FLOF. Up to 2,000 pages are stored so that you have quick access.

Starting and ending Teletext



Switch Teletext on / off.



Page selection with the coloured buttons

- Red button:** Back to the previously viewed page.
- Green button:** On to next page.
- Yellow button:** To next topic.
- Blue button:** To next range of topics.

The coloured bars (for TOP) or the coloured text (for FLOF) in the second last line indicate which coloured buttons you can use to page through topic areas and topics.

Teletext page displays



0 AV: Stop self changing pages.



9: Enlarge page (press several times).



PIP button: Show / hide TV picture (full screen/split screen)



Additional page selection possibilities




1st possibility:
Call **overview page 100**.



2nd possibility:
Directly enter the page number.



3rd possibility:
 ➔ The page includes 3-digit page numbers.
 ▼ ▲ Mark desired page number.

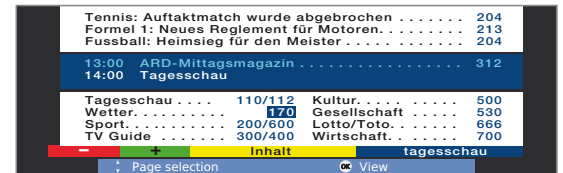

OK Call the page.



4th possibility:
 ➔ The page consists of several sub-pages (indicated by the selection option on the last line).




◀ ▶ Page through sub-pages.

Call TOP table



➔ The table can only be called for stations with the TOP operating system.

OK Call **TOP table**.

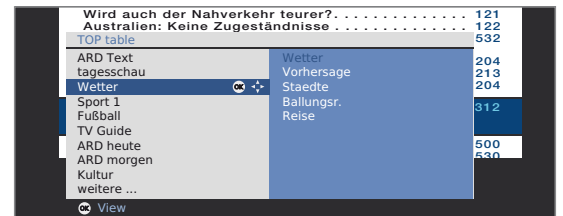

▼ ▲ Mark topic area,
 ◀ ▶ select topic column,
 ▼ ▲ select topic,
OK call the page.

Teletext

Programming timer recordings via Teletext

- Teletext is started, if not, press the **TEXT** button.



Call the programme pages of the current station.



Green button: Go to the appropriate page.



▼ ▲ Select the desired programme, **OK** to programme the recording.

Change the appropriate recording data in the following menu **Timer data** if necessary (see also page 59, "The direct way to record").

OK Confirm.

Changing teletext station

You can change the teletext provider independently of the station you are watching.

- Teletext is started, if not, press the **TEXT** button.



P+ / P- Select next/previous station. The TV set switches through all the stations in the station list or the current **Favourites** list one after another (see page 19).

Or:



Call **Teletext menu**.



◀ ▶ Select **Station selection**, **OK** call station.

◀ ▶ ▲ ▼ Select station as in the station list (page 18), **OK** call station.

Teletext menu

In the Teletext menu you can activate messages, reveal pages and configure the teletext with the **Settings** menu function.

Starting the Teletext menu

- Teletext is started, if not, press the **TEXT** button.



Call the **Teletext menu**.



Explanations of the Teletext menu functions:

- | | |
|---------------------|---|
| Station selection | You can select the teletext of a different station here (see left hand column). |
| Newsflash | The current page is hidden when you activate Newsflash . A symbol at the top left indicates that the function is active. If the contents of the message are updated and it is a small newsflash, this is displayed in the TV picture. If it is a full screen page, the symbol is displayed in blue and the page can be called with the OK button. |
| Reveal | Shows concealed information, e.g. for quiz questions or VPS pages in the programme preview pages. |
| Recording wizard | A wizard for recording via teletext helps to programme an external recorder or the integrated Digital Recorder, see also left column. |
| Settings | Other Teletext menu functions: |
| Preview pages | Input of the first teletext programme preview page if this deviates from the factory setting (page 301). |
| Sub-title pages | Input of the teletext subtitle pages for every station if this deviates from the factory setting (page 150). |
| Personal text pages | Define up to six teletext pages which can be opened later from a list in the menu Teletext functions → Personal text pages (in TV mode press green button , see page 24). |
| Character set | Teletext character set can be switched to other languages (Russian, Greek, Polish and Turkish). |
| HiText | Improved graphic representation of the Teletext. (Not offered by all stations.) |
| Page format | Select side format for full screen visualisation of the Teletext (16:9 or 4:3). |

Teletext

Digital teletext (MHEG-5)

In the UK or Ireland, the teletext for DVB-T stations is transmitted as per the MHEG-5 standard. It contains text, graphics, functions and links.

- ➡ Only for TV sets with MHEG-5 software.
- ➡ At the moment only available in United Kingdom and Ireland.
- ➡ Digital teletext is not available when DVB subtitles are being displayed.

The operation of these menus depends on the particular provider. Normally after a station is changed, the provider broadcasting the digital teletext makes an introductory offer for this service on the screen via menu selection. Follow these notes.

If no message appears telling you how to switch to digital teletext after switching to another station, press the **TEXT** key. If a selection for DVB subtitles is available, this item must be hidden before.

Depending on the provider's respective offer, you can use the **▲ ▼ ◀ ▶** buttons and the **OK button**, the **coloured buttons**, the **END/TEXT button** and sometimes even the **numeric buttons**.

If you want to close the digital teletext, just select a different station using the **P+/P-** buttons or follow the menu prompts on the screen.

Digital radio

Radio mode

The TV set can receive digital radio stations via DVB. In addition you can play the sound from an external device through the TV set via the **audio/AV inputs** of the TV set (see page 37).

- ➡ For TV sets with MHEG-5 software, the buttons may be configured differently by the provider.
- ➡ The **AUDIO button** has been preset for radio operation in the factory. To change the configuration see page 68.

Radio mode on




Press **AUDIO button** on the remote control.

Or:



R on the operating ring on the TV set.

You see an information window about the currently set station.

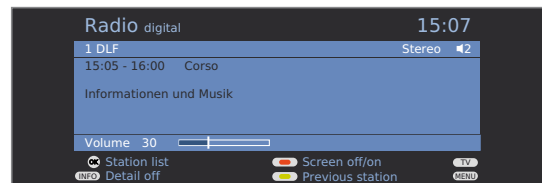

Minimise Radio dialogue to an info line / maximise.



 
Station switching

- ➡ The selection of the stations / favourites is the same as the procedure in TV mode (see pages 18 and 19).



Press **P+/P-** or the **numeric buttons** of the remote control.

Or:



+ / - on the TV set operating ring.

Or:



OK Call station list / favourites.

Digital radio

Setting the volume



V+ / V- Volume louder / quieter.

Other sound settings are the same as for the volume setting in TV mode (see page 20)

Audio adjustment



Call **Sound adjustment**.

Other settings as for TV mode (see page 20).

Switching the screen on/off



Red button: Switch off the screen.

The **LED display** on the TV set (see page 4) changes from green to orange.

Switch on the screen with the remote control:

Red button, **AUDIO button** or **OK button** (station list is opened).

Switch on the screen on the TV set:

Press **R** on the TV set operating ring.

Radio menu

In the Radio menu, you can set the sound, search for and store radio stations (automatically or manually), change stations and set switch off/ alarm functions.

 
The settings are made as described in TV mode.

Call radio menu

Radio mode switched on,
if not, press the **AUDIO button**.



Call the **Radio menu**.



Switch off radio mode



Press **TV button** on the remote control.



Or:

R on the operating ring on the TV set.

EPG – Electronic Programme Guide (radio)


For the DVB radio stations you can also use an electronic programme guide, if the station that is currently active supplies data.

Starting and ending EPG

Radio mode switched on,
if not, press the **AUDIO button**.



Switch EPG on / off.

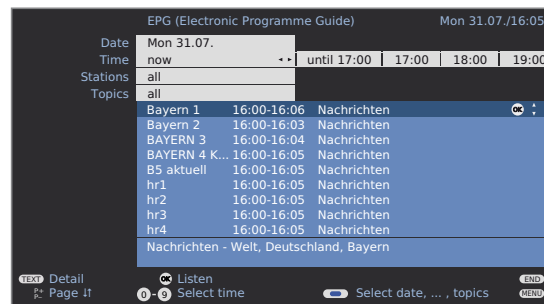

The EPG functions in radio mode are the same as in TV mode. Read from page 32 onwards for further information.

Audio playback from external devices

You can play the sound of external AV devices (e.g. MP3 players, DVD players) in radio mode.

Select AV input

Radio mode switched on,
if not, press the **AUDIO button**.



OK Open station list.

The AV inputs are listed in front of the first radio station.



The selection of the AV inputs is the same as in TV mode (see pages 18 and 19).

Start playback on the external device after selecting the AV input.

Software update

TV base software and DVB software

Your TV set provides the option to update the TV basic and DVB software. Current software versions can be downloaded from the Loewe Internet site (see page 39) and installed on your set using a USB stick.

The software can also be updated by different DVB reception paths (DVB-T, DVB-C, DVB-S).

However, the prerequisite for this is that the software is provided by the appropriate DVB reception path.

This may differ depending on the TV set and the DVB programme provided.

Ask your local dealer for information whether a software update via DVB reception path is possible.

Automatic information by new software version

In the **Change update settings** menu (see right column) you can determine via which DVB reception path (if possible) you want to receive updates.

Your TV set determines automatically overnight whether a new software version is available via the selected DVB reception path. The TV set must be left in the standby mode for this (do not switch off with the mains switch).

If a new software version is available, the TV set informs you of this in an on-screen message the next time it is switched on (see page 39 – Loading new software).

Manual search for new software

If it is not displayed automatically that a new software is available when you switch on the set, you can also search for one manually. The search depends on the selected update source(s).




Call **TV menu**.



- ◀ ▶ Select **Settings**,
▼ go to the menu line below.
- ◀ ▶ Select **Miscellaneous**,
▼ go to the menu line below.
- ◀ ▶ Select **Software update**.
OK Open the software update wizard.

The current update settings are displayed in the info text.

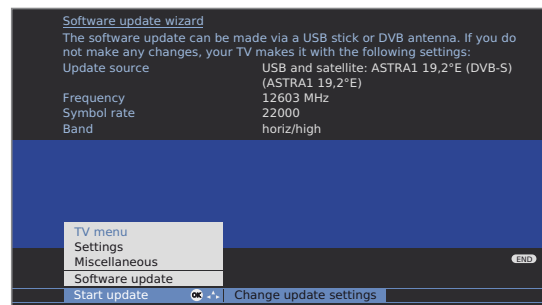

If you want to change the update settings:



- ◀ ▶ Select **Change update settings**,
OK the wizard polls the update settings.

➡ The selection options depend on the antenna cables connected at the initial installation (see page 12).

USB only

New software is searched for via USB.

USB and DVB-T

New software is searched for first via USB then via DVB-T (digital terrestrial transmission).

USB and DVB-C

New software is searched for first via USB then via DVB-C (digital cable transmission).

USB and satellite

New software is searched for first via USB then via DVB-S (digital satellite transmission). The name of the currently selected satellite is displayed.

Setting parameters of the different DVB update sources:

Channel	Select the channel on which the new software is provided.
Frequency	Enter the frequency of the station to be transmitted directly.
Bandwidth	Is preset automatically depending on the selected channel.
Symbol rate	Enter the symbol rate of the station to be transmitted directly.
QAM modulation	Set the suitable type of modulation.
Band	Set the transmission range for satellite reception.


continued on the next page →



If you have adapted the update settings:

OK proceed.

- ◀ ▶ Select **Start update**,
- OK** start update procedure.

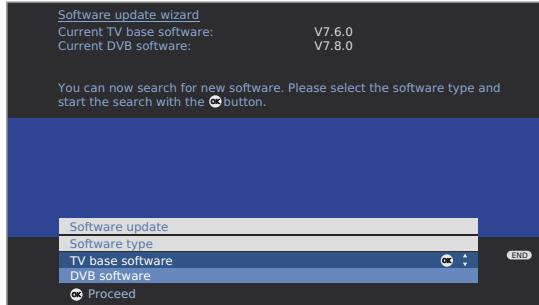


- ▲ ▼ Select software type:

TV base software or
DVB software,

OK start search.

If a new software version is available after the search, the following screen message appears.

Loading new software

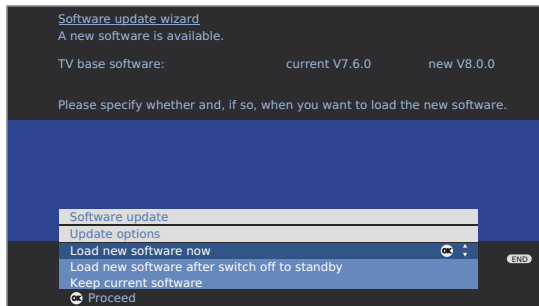

- ▲ ▼ Select update option:

Load new software now
Load new software after switch off to standby
(update after switching off)
Keep current software (no update desired).

OK Proceed or exit wizard.

OK Start **Software update**.

A bar informs you about the progress of the charging process. Do not switch your set off during this time!

This process can take up to 20 minutes depending on the selected update source. You will be informed at the end.

At the end of charging:

Switch the TV set off and back on with the mains switch. This is unnecessary when loading the software with the **Load new software after switch off to standby** update option.

If a new software has not been updated by a DVB station, you will be reminded of this several times when switching on the set.

- ➡ If a new TV software and a new DVB software are available in the automatic search for new software via DVB stations (see page 38), you can choose which software is to be updated.

Software download from the Loewe homepage

You can download new software for your TV set from our homepage. To do this, register on our homepage

<http://www.loewe-uk.com> (go to **Support** → **Registration**).

Follow the individual steps through the registration procedure.

After successful registration and following login on the homepage you must still register your equipment (keep article number and serial number at hand - both are on the sticker on the back of the equipment). You will then see an overview of downloadable contents for your TV set, including TV software. Load the software onto a USB stick to update the files.

Then carry out the updating procedure (see page 38).

Conditional Access module (CA module)


In order to receive coded digital stations, a Conditional Access module (CA module) and a Smart Card must be inserted in the CI slot of your TV set (see page 5 and 6).

The CA module and the Smart Card are not part of the TV set's scope of delivery. They are usually available from your dealer. Loewe does not provide any guarantee for the functioning of the CA module.

The TV set must first recognise and set up the CA module during initial operation. Therefore, it can take up to a minute until decoding starts during initial operation.

Inserting the Smart Card into the CA module


Push the Smart Card into the CA module as far as it goes so that the side with the gold coloured contact chip is facing the side of the CA module marked with the provider's logo. Note the direction of the arrow printed on the Smart Card.

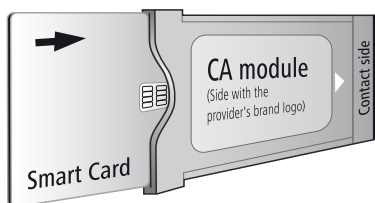

Inserting the CA module in the CI slot

➡ Switch off the TV set's mains switch.

Remove the cover from the rear of the set.

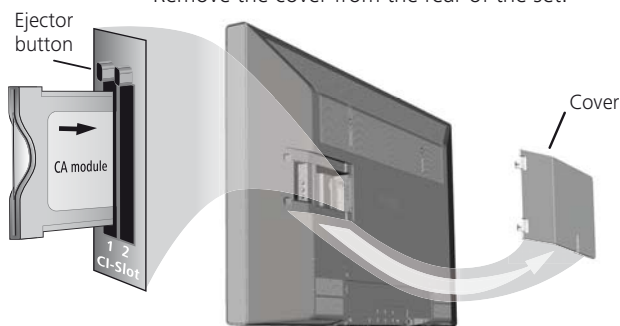

Carefully insert the CA module in CI slot 1 or CI slot 2 with the contact side forward.

If you are standing in front of the TV set (display) then the logo on the CA module must be pointing to the rear. Do not use force. Make sure the module is not twisted in the process. If the CA module is correctly installed, the ejector button protrudes a little further.

Replace the cover.

Searching for encrypted stations

➡ The search wizard must only be started if the setting option **no** has been selected during first installation in the search for encrypted stations or no CA-module was inserted.

(MENU)



Call **TV menu**.

◀ ▶ Select **Settings**,
▼ go to the menu line below.

◀ ▶ Select **Stations**,
▼ go to the menu line below.

◀ ▶ Select **Search wizard**,
▼ go to the menu line below.

◀ ▶ Select **Change search settings**,
OK wizard guides you through the search settings.

See page 26 for a description of the search settings.

Calling CA module information

➡ This menu is only available for digital stations.

(MENU)



Call **TV menu**.

◀ ▶ Select **Settings**,
▼ go to the menu line below.

◀ ▶ Select **Miscellaneous**,
▼ go to the menu line below.

◀ ▶ Select **CA module: xxx**
(xxx corresponds to the CA module provider),

OK call information.

The content of this menu depends on the provider of the CA module.

Removing the CA module

➡ Switch off the TV set's mains switch.

Remove the cover from the rear of the set.

Press in the ejector button on the appropriate module drawer, the module is released.

Remove the module from the set.

Replace the cover.



Other settings

Parental lock

You can select and set various security options to prevent unauthorised use of the TV set and to protect your children from unsuitable programmes.

Defining the access code (PIN)



Call **TV menu**.



◀ ▶ Select **Settings**,
▼ go to the menu line below.

◀ ▶ Select **Parental lock**,
▼ go to the menu line below.

 


Define a four digit access code (PIN) the first time you open it. The numbers appear in plain text. Note the access code (PIN) well.




OK Confirm the access code (PIN).

The **Parental lock** menu is opened.



 The four-digit access code (PIN) must be entered when the parental lock is opened in future. It appears encrypted (****) when entering for security reasons.



Code number

The code number cancels all entered PINs. It can be used for example if you have forgotten your PIN. You will find a note about the code number on page 79. Remove this from the manual and keep it in a safe place.

Explanations of setting possibilities in the Parental lock menu:

- | | |
|----------------------|---|
| Lock all stations | The TV set is locked immediately the menu is exited. All programmes can then only be watched after entering the access code. The lock can be activated both Immediately and for a Daily defined period. The lock remains active until it is switched off in the menu. |
| Lock single stations | You can lock / unlock individual or all of the stations in the station list specifically. The lock remains active until it is switched off in the menu. |
| Age-related lock | Some DVB stations also broadcast an age classification. If the age set here is below the broadcast age limit, the programme can only be watched after entering the access code. |
| Change access code | You can change your access code at any time. Enter the new access code in place of the old one. |
| Deactivate | All set parental locks (locked stations, age-dependent locks, locked films in the DR archive) are cancelled. The current secret code is deleted. When the parental lock is reactivated all the previous parental locks are set again automatically. |
| Reset | All currently set parental locks are finally cancelled. The secret code is deleted. |

Protection of minors for CI Plus programmes

Youth-protected broadcasts of programme providers with CI Plus encoding possibly require you to enter the secret number (PIN) of the CA module.

We recommend selecting the secret number of the TV set according to the secret number of the CA module, since the secret number of the CA module cannot be changed. This means that you must only remember one secret number.

Other settings

Timer functions

This menu offers you convenient alarm services. Programmed alarms are also active when the TV set has been switched off to standby.

If the TV set switches on from the standby mode by alarm, a screen message appears. If this is not confirmed within 5 minutes with the **OK button**, the TV switches back off automatically for safety reasons.

The TV set can also be switched off automatically at certain times. A screen warning appears one minute before automatic switch off. The automatic switch off can be interrupted by pressing any button.

Call Timer functions

 


Call **TV menu**.



◀ ▶ Select **Settings**,
▼ go to the menu line below.

◀ ▶ Select **Timer functions**,
▼ go to the menu line below.



◀ ▶ Select the desired setting.

Explanations of setting possibilities in the Timer functions menu:

Switch off today only The set switches to the standby mode automatically at the specified time.

If a time is specified which has already passed on the same day, the set switches off at this time the next day.

Switch off daily The set regularly switches to the standby mode automatically every day at the specified time.

One-time reminder The set alerts you once today at the specified time. If a time was specified which has already passed on the same day, the alarm is saved for the next day.

Wake up Mon-Fri The set regularly alerts you from Monday to Friday at the set time.

Wake up Sat The set alerts you regularly every Saturday at the specified time.

Wake up Sun The set alerts you regularly every Sunday at the specified time.

Explanations of setting possibilities in the Timer functions menu:

Wake up with Specify whether the TV set switches on in the event of an alarm from the standby mode in **TV** or **radio mode** with the respectively last active station.

Wake up signal volume Set the desired volume of the alarm tone. The alarm tone is emitted as a continuous tone as a guide during the setting.

Language

Specify the language for all menus in the TV set in the language menu. The language for the DVB subtitles and the film language can be set for DVB programmes.

Call language

 


Call **TV menu**.



◀ ▶ Select **Settings**,
▼ go to the menu line below.

◀ ▶ Select **Language**,
▼ go to the menu line below.



◀ ▶ Select the desired setting.

Explanations of setting possibilities in the Language menu:

Menu language You can change the menu language here. The menu language can be changed with the index (siehe Seite 16).

Subtitles (DVB) If subtitles are provided by the DVB station, you can set your desired language in advance here. If this is included in the range of languages of the station, it will be shown automatically.

You can also specify an alternative language under this menu item, in case your chosen language is not offered by the station

Audio (DVB) Specify your desired film language in advance here. If this is included in the range of languages of the station, it will be shown automatically.

You can also specify an alternative language under this menu item, in case your chosen language is not offered by the station.

Other settings

On-screen displays

You can select different settings in this menu which affect the on-screen displays.

 
Call On-screen displays



Call **TV menu**.



- ◀ ▶ Select **Settings**,
▼ go to the menu line below.
- ◀ ▶ Select **Miscellaneous**,
▼ go to the menu line below.
- ◀ ▶ Select **On-screen displays**,
▼ go to the menu line below.



- ◀ ▶ Select the desired setting.

Explanations of setting possibilities in the On-screen displays menu:

- | | |
|----------------------------|---|
| On-screen display time | Here you set the duration of the display, e.g. for the volume or the station display when changing stations. The duration can be set between 2 and 9 seconds. |
| On-screen display position | You can select between an upper and a lower display position so that other displays (subtitles) are not concealed. |
| Volume | Here you set whether or not the change in the volume should also be displayed visually on the screen. |
| Automatic info | Select yes here if you want to be able to see the additional help permanently in the upper part of the screen while navigating the menu. Also see page 15 for further information. |

Time and date

If you receive a station with teletext after switching on the TV, the time and date are recorded automatically. The date may have to be entered manually for some stations.

Enter the time and date manually if you receive station without teletext.

 
Call Time and date



Call **TV menu**.



- ◀ ▶ Select **Settings**,
▼ go to the menu line below.
- ◀ ▶ Select **Miscellaneous**,
▼ go to the menu line below.
- ◀ ▶ Select **Time and date**,
▼ go to the menu line below.



- ◀ ▶ Select the desired setting.

Explanations of setting possibilities in the Time and date menu:

- | | |
|-----------------------------------|--|
| Time | Enter the time (00:00 to 23:59) with the numeric buttons of the remote control. |
| Deviation from Universal Time | The current time at the Greenwich Meridian 0 is to be understood as world time. The time shift in relation to this time must be given in hours (-11 to +13) (with the buttons ◀ ▶ or the numeric buttons on the remote control). Summer time is ignored. |
| Date | Enter the date (day.month.year) with the numeric buttons on the remote control. |
| Beginning of daylight-saving time | Enter the date on which the time is switched over to summer time if it deviates from the automatically calculated date. |
| End of daylight-saving time | Enter the date on which the summer time ends if it deviates from the automatically calculated date. |

Operating additional equipment

Connection wizard

The connection wizard serves to connect accessory equipment optimally to the TV set, make changes to the wiring of the devices or remove momentarily logged in equipment. The exact process of the wizard depends on the choice of equipment.

- ➡ New equipment should not be connected until it has been logged in in the Connection wizard first.
- ➡ DVD recorder at AV2 is preset at the factory.




Call **TV menu**.



- ◀ ▶ Select **Connections**,
- ▼ go to the menu line below.

- ◀ ▶ Select **New devices/modifications**,
- OK** calls the wizard.

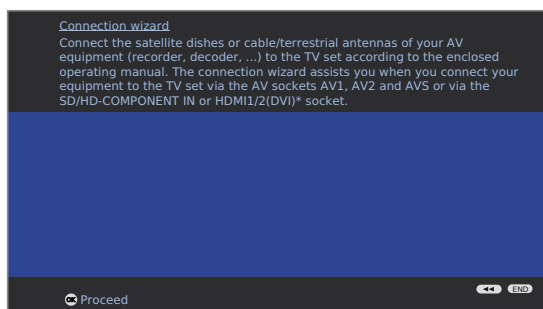


- ➡ The connection wizard can be exited at any time with the **END** button.



OK Proceed.

The connection diagram shows the currently logged in equipment.

Connection diagram

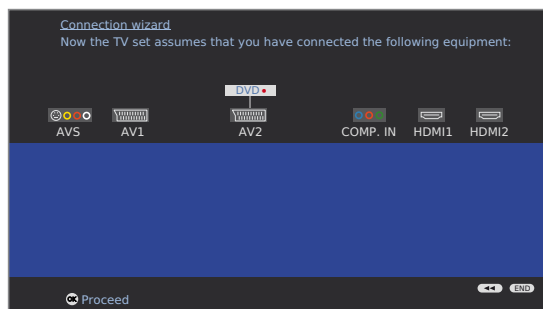

OK Proceed.

Select the equipment you want to connect or remove equipment you no longer use in the AV equipment selection.




- ▲ ▼ Select equipment/connection.



Yellow button: Connect/disconnect equipment.

A **Camcorder / camera** is connected to the TV set additionally in the following example.


AV equipment selection

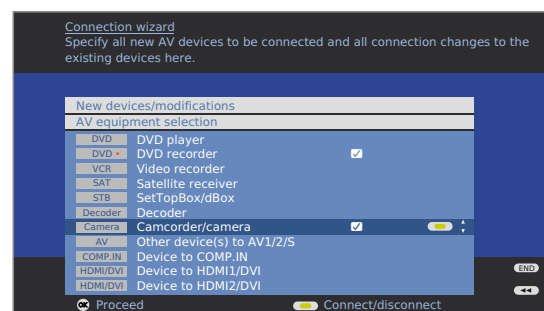

OK Proceed.

The connection diagram is displayed again. Connect the equipment to the corresponding connections of the TV set as shown in the connection diagram.

- ➡ The accessory equipment should be connected to the TV set with the power off (disconnected from the mains). See also the instructions in the operating manual of the equipment to be connected.

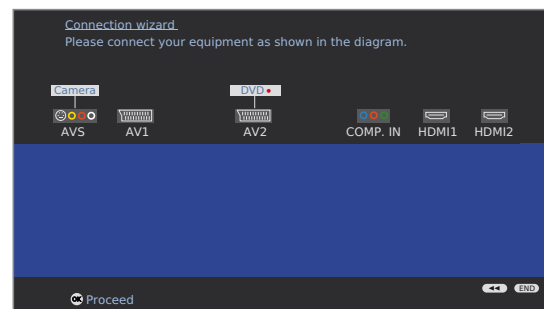


OK Proceed.

continued on the next page →

Operating additional equipment

 
Signal type



- ▲ ▼ Select the signal types of the individual devices one after another where necessary. Normally you should leave the setting on **Automatic CVBS/YC** (e.g. for DVD player/recorder) or **Autom.-VHS/SVHS** (e.g. VCR), otherwise select the suitable signal type.

OK Proceed.

 Immediate playback




- ◀ ▶ Select **yes** or **no**.

If playback is started on a device connected to AV1 or AV2, the TV switches immediately to the appropriate AV input when **yes** is set.

When playing devices with Digital Link Plus, the appropriate AV input is always switched to regardless of the setting.

OK Proceed.

Assign digital audio input

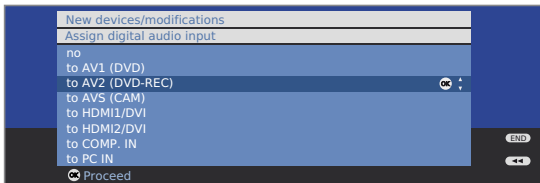

- ▲ ▼ You have to feed the digital audio signal to the TV set for the digital audio reproduction from an external device.

The digital audio input (**AUDIO DIGITAL IN**) of the TV set must be assigned to the appropriate connection of the external device.

If **no** is selected, the analogue sound is used.

OK Proceed.

Digital Link Plus



If you have registered a recorder into the connection wizard, the Digital Link Plus transmission starts.

If a Digital Link Plus capable recorder is connected, the station list of the analogue stations is transmitted to the external recorder.

You can also call Digital Link Plus under **TV menu → Connections → Digital Link Plus**.

END

END: Exit connection wizard.

Operating additional equipment

Devices to the connections AV1/AV2/AVS

Accessory equipment such as DVD players, video and DVD recorders etc. can be connected to the TV set at the Euro-AV sockets **AV1** and **AV2** (see pages 5 and 6).

The AV input **AVS** (see pages 5 and 6) offers the possibility of connecting a digital camera or a camcorder for example.

➡ All devices at the AV inputs must be registered in the connection wizard (see page 44 onwards).

The connection designations vary according to the logged in device. The AV selection then contains, for example, **DVD** in place of **AV1** or **CAM** in place of **AVS**.

The Euro-AV sockets can process different signal types. Which signal type your accessory device provides can be found in the operating manual of the appropriate device.

Owing to the large number of AV devices available on the market, we can only mention a few examples for the connection of accessory equipment to the AV sockets here.

The following description of the connected equipment to the connections **AV1/2/S** refers to the device types logged into the connection wizard from page 44 onwards.

If the sound of a device connected to an AV socket is to be transmitted digitally, a cinch cable must be plugged between the coaxial digital output of the accessory equipment and the **AUDIO DIGITAL IN** socket of the TV set. In addition the digital audio input must be assigned to the corresponding AV socket in the connection wizard (see page 45).

The assignment of the digital audio input may also take place outside the connection wizard. With **TV menu** → **Connections** → **Miscellaneous** → **Assign digital audio input**, the digital audio input can be assigned to the appropriate AV socket, see page 58.


Connecting a DVD player to the TV set

➡ DVD player is registered with the connection wizard.

Switch off all equipment before connecting.

Connect the Euro-AV output of the DVD player to the **AV1** socket of the TV set.

Use a fully equipped Euro-AV cable (available from your dealer) for this.

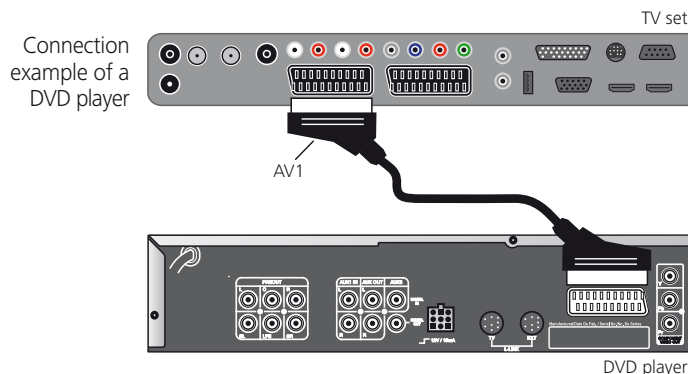


Playback from AV device

If the device supports Digital Link Plus on **AV1/2** or if **Immediate playback** → **yes** was selected in the connection wizard, the TV set switches automatically to the appropriate AV input after switching on the AV device

The AV input can also be called manually, however.



Call **AV selection**.

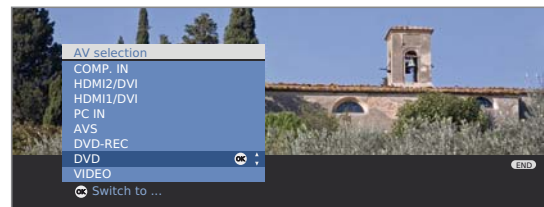


▲ ▼ Select **DVD**,
OK switch over.

Start playback on the connected device.

Operating additional equipment

Connecting a DVD recorder to the TV set

- ➡ DVD recorder is registered with the connection wizard.
- Switch off all equipment before connecting.
- Connect the Euro-AV output of the DVD recorder to the **AV2** socket of the TV set.
- Use a fully equipped Euro-AV cable (available from your dealer) for this.
- If you want to receive and record analogue stations with the receiver (tuner) built into the recorder, the recorder must be looped into the aerial cable. Connect the DVD recorder as shown in the connection example below.

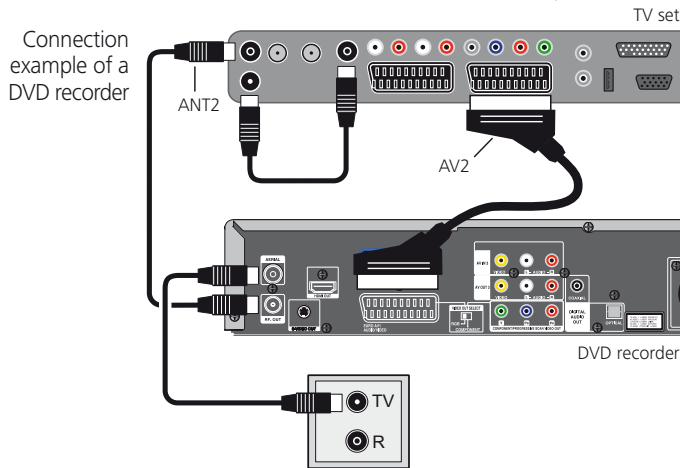


- ➡ If you want to record DVB stations with an external recorder, the internal receiver of the TV set must be used (see "Timer recording with external devices" on page 61).

Playback from AV device



Call **AV selection**.

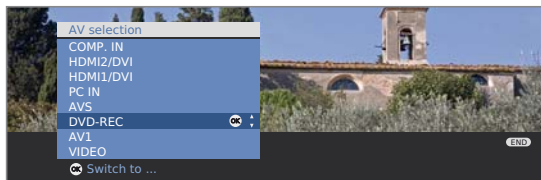


▲ ▼ Select **DVD-REC**,
OK switch over.

Start playback on the connected device.

Connecting Camcorder/camera

- ➡ Camcorder/camera is registered with the connection wizard.
- Switch off all equipment before connecting.
- Connect the AV output of the camcorder to the audio input sockets L/R (white/red) and the S-VHS connection of the AVS sockets of the TV set.
- Use the AV cable enclosed with the camcorder for this.
- Some camcorders only supply an FBAS signal instead of an S-VHS signal at the AV output. In this case use the AVS video input (yellow).

Connection example of a camcorder

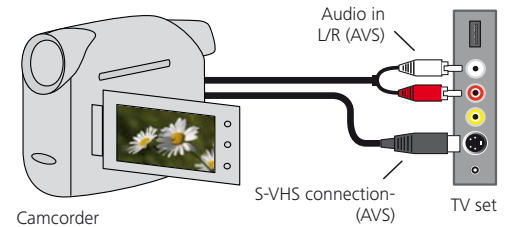

Playback from AV device



Call **AV selection**.



▲ ▼ Select **CAM**,
OK switch over.

Start playback on the connected device.

Operating additional equipment

Devices to the HDMI (DVI) connections

The HDMI connections (High Definition Multimedia Interface) allow the transmission of digital video and audio signals from a player, e.g. DVD player, DVD recorder, Blu-ray player, game console or Set-Top-Box via a single cable.

The digital video and audio data are transmitted without data compression digitally and therefore lose none of their quality.

A maximum of five devices can be connected in cascade to every HDMI socket. The devices are arranged in the AV menu and in the station list below the appropriate HDMI socket. If the respective device sends its own device name, this appears in place of the connection name.

Your TV set can show 24p films, which are output from a connected HDMI player, e.g. Loewe BluTech Vision, optimally (see glossary, page 76). To do this, **Film quality improvement (DMM)** must be set to **on** (see page 22).

Digital video signals from a DVI player can be also be reproduced by the HDMI connection using a DVI/HDMI adapter cable. The sound must be piped in additionally.


HDMI and DVI both use the same copy protection method HDCP.

Connecting the device

► It is not necessary to register HDMI devices with the connection wizard.

Switch off all equipment before connecting.

Connect the device with an HDMI cable (type A, 19-wire) to the **HDMI1/DVI** or **HDMI2/DVI** socket of the TV set.

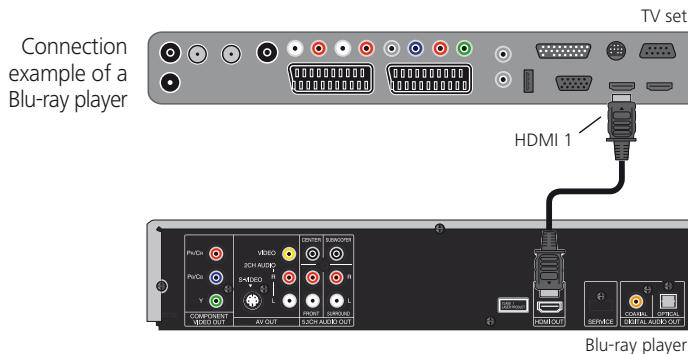


If a DVI/HDMI adapter cable is used, the corresponding sound can be piped through the **AUDIO IN1** (analogue) or **AUDIO DIGITAL IN** (digital) socket on the TV set (see also page 58).

Playback from the device



Call **AV selection**.

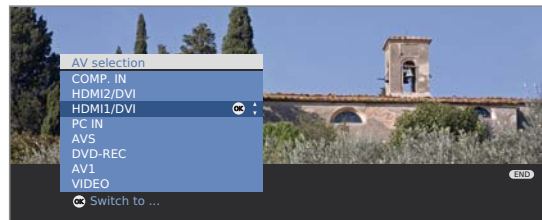

- ▲ ▼ Select **HDMI1/DVI** or **HDMI2/DVI** socket. With Digital Link HD-capable devices the device name may possibly appear in place of the connection name.

OK Switch over.

Start playback on the connected HDMI device. The best possible format for the picture is detected and set automatically.

Operating additional equipment

Concealed installation of HDMI devices

Digital Link HD (HDMI CEC)

The Digital Link HD (HDMI CEC) system operation allows Loewe television sets to transmit the remote control signals via the HDMI connection of a TV set to compatible HDMI devices, such as e.g. Loewe AudioVision. You can therefore set up a concealed CEC capable HDMI device.


For this, first assign the HDMI CEC function with Code **22** to the required device button (**REC**, **DVD** or **AUDIO**) as described on page 68.

Now assign the Digital Link HD function to the used HDMI device.

- ➡ The CEC capable HDMI device is connected to one of the HDMI sockets of the TV set and switched on.

REC **DVD** **AUDIO** Press required button for 5 seconds.

A selection menu appears on the TV set.

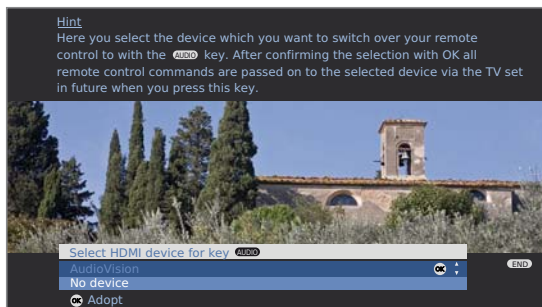

- ▲ ▼ Select required device from the list.
OK Adopt.

From now on, the commands of the remote control are communicated from the TV set to the HDMI device, if the corresponding device button (**REC**, **DVD** or **AUDIO**) has been pressed previously.

Remote TV switch on via Digital Link HD

In the **TV menu** under **Connections** → **Miscellaneous** → **Remote TV switch on via Digital Link HD**, you can select whether the TV set is to switch on automatically from standby mode when a disc is played or a screen menu displayed on connected CEC-capable HDMI equipment.

Operating additional equipment

Devices to the PC IN connection

You can connect a PC to the **PC IN** socket for example and thus use the TV screen as a monitor.

When connecting a PC or accessory equipment to the PC IN socket of the TV set, set one of the following screen resolutions on the PC / accessory equipment first.

800 x 600	60 Hz	(SVGA)	1024 x 768	60 Hz	(XGA)
1280 x 1024	60 Hz	(SXGA)	1360 x 768	60 Hz	(WXGA)
720 x 576i		(SDTV)	720 x 480i		(SDTV)
720 x 576p		(SDTV)	720 x 480p		(SDTV)
1280 x 720p		(HDTV)	1920 x 1080i		(HDTV)


Connecting the device

There is no need to register the device with the connection wizard.

Switch off all equipment before connecting.

Connect the device to the TV set's **PC IN** socket with a VGA cable.

Connect the analogue audio signal of the PC to the **AUDIO IN2** jack on the TV set with a stereo cable.

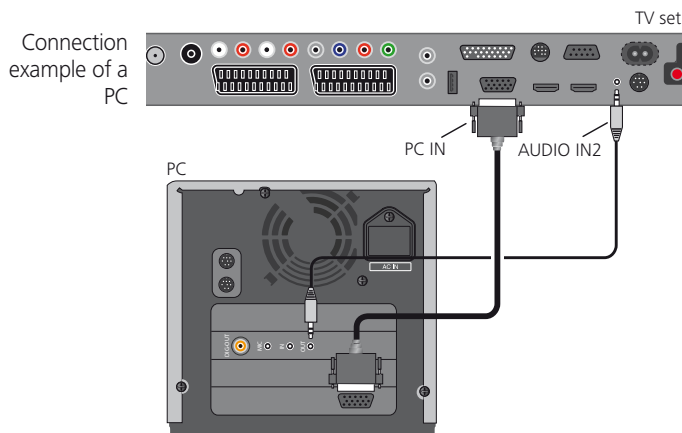

Alternatively, connect the digital audio output of the PC or accessory equipment to the **AUDIO DIGITAL IN** socket of the TV set with a cinch cable.

The digital audio input can be assigned to the PC IN socket by **TV menu** → **Connections** → **Miscellaneous** → **Assign digital audio input**, see page 58.

Playback from the device



Call **AV selection**.



▲ ▼ Select **PC IN** socket, **OK** switch over.

Adapt geometry (only possible with certain signals)

This can be used to position the picture correctly and move the position of the picture (horizontally and vertically) so that it fills out the whole screen.



Call **TV menu**.



- ◀ ▶ Select **Geometry**,
▼ go to the menu line below.
- ◀ ▶ Select the desired setting,
▼ go to the menu line below.
- ◀ ▶ Make settings.

Set colour standard (only possible with certain signals)



Call **TV menu**.



- ◀ ▶ Select **Picture**,
▼ go to the menu line below.
- ◀ ▶ Select and set **Colour standard**:
RGB or
Ycc / Ypp

The colours will not be shown correctly if the wrong standard is set.

Operating additional equipment

Devices to the Component IN connection

DVD players/recorders or a Set-Top-Box with Component Video connections can also be connected to the **Cb/Pb Cr/Pr Y** sockets (**SD/HD-COMPONENT**) of the TV set instead of to the EURO-AV sockets.

The connecting cable with three cinch plugs each transfers the picture information with a better quality than a EURO-AV cable. You need another cable for the sound transmission.


Connecting the device

➡ Device to COMP. IN is registered with the connection wizard.

Switch off all equipment before connecting.

Connect the Component Video outputs of the external device by a triple cinch cable to the **Cb/Pb Cr/Pr Y** sockets of the TV set.

Connect the analogue audio outputs of the external device to the **AUDIO IN1 L/R** sockets of the TV set by a dual cinch cable.

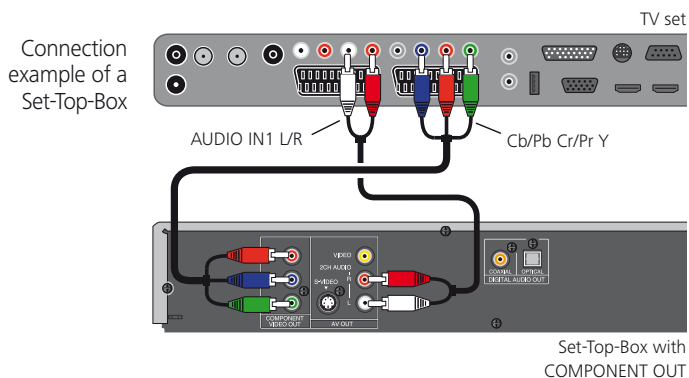


Alternatively, connect the digital audio output of the external device to the **AUDIO DIGITAL IN** socket of the TV set with a cinch cable.

The digital audio input can be assigned to the COMP. IN socket by **TV menu** → **Connections** → **Miscellaneous** → **Assign digital audio input**, see page 58.

Playback from the device



Call **AV selection**.

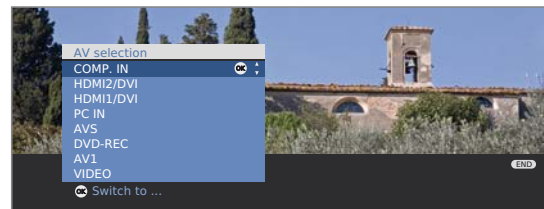

▲ ▼ Select **COMP. IN** socket, **OK** switch over.

Adapt geometry (only possible with certain signals)

This can be used to position the picture correctly and move the position of the picture (horizontally and vertically) so that it fills out the whole screen.



Call **TV menu**.



- ◀ ▶ Select **Geometry**,
▼ go to the menu line below.
- ◀ ▶ Select the desired setting,
▼ go to the menu line below.
- ◀ ▶ Make settings.

Operating additional equipment

Sound components wizard

The sound components wizard helps you to configure the components used to play the TV sound.

Depending on what you want to use, active speakers, speaker systems, Loewe Individual Sound Projector and analogue and digital HiFi/AV amplifiers can be configured.

The sound components wizard is preset to playback via TV speakers at the factory.

If a Loewe Preceiver Auro has been connected to the TV set via link cable, you can only select between **TV speakers** and **Auro** in the sound components wizard.

Integral digital audio decoder

Your TV set is fitted with an integral digital audio decoder. This system has been introduced to the DVD video range and digital TV stations can also broadcast in digital multi-channel sound.

For playback of 5 audio channels the surround sound is reinforced by the deepest frequencies from the subwoofer channel (SUB), (5.1 reproduction = 5 audio channels and 1 subwoofer). All 5 audio channels are reproduced with the full frequency range from 20-20,000 hertz and generate the original theatre effect.

The digital audio decoder decodes Dolby Digital, dts, MPEG and the analogue Dolby Pro Logic und Dolby Pro Logic II signals, irrespective of whether the audio signal is transmitted from an external device or received by the TV set.

DVDs or CDs with PCM-encoded audio format are also decoded by the digital audio decoder. The CD/DVD player must be connected via a coaxial, digital connection to the digital input **AUDIO DIGITAL IN** for this (see page 58).

The audio signals decoded by the digital audio decoder are output via the **AUDIO LINK** interface. You can connect a speaker system such as the Loewe "Individual Sound" (see page 53) or active speakers (see page 54) to the **AUDIO LINK** interface and configure these with the **sound components wizard**.

Settings for loudspeaker systems and active boxes that are connected to the digital audio decoder of the TV set via the **AUDIO LINK** interface:

- Register speaker (system) or active speaker.
- Setting of the lower limit frequency of the speakers.
- Setting of the distances between listener and speakers.
- Level settings for the speakers.
- Setting of the phase position for the subwoofer channel.

All data and selection possibilities which refer to the TV speakers in the course of the sound components wizard are only relevant when TV speakers are connected.

TV speakers

No TV speakers are included in the scope of delivery for the "Individual Compose" TV set. Two speakers (min 4 ohm / min. 20 W sinus) can be connected via the speaker connections (screw terminals) of the TV set.

The Loewe "Stereospeaker I Compose" available as an accessory are ideal for this. These can be fixed directly to the TV set or separately to the wall. When fixing the speakers directly to the TV set, the side speaker connections (exclusively for "Stereospeaker I Compose") behind the trim are used. In the case of separate wall assembly, the speakers are connected to the screw terminals. See installation instructions "Stereospeaker I Compose".

Speakers must never be connected simultaneously to the side connections and to the screw terminals.

Connecting speakers to the screw terminals

To connect the speakers, switch the TV set off at the mains switch and pull out the mains plug.

You have connected and laid out the connecting cables to the speakers.

Remove the rubber band fixed as a transport protection (see figure). Turn the 4 screw terminals anti-clockwise about 2 or 3 turns. This frees the connection openings for the connecting cables of the speakers.

Do not loosen the screw terminals more than necessary. They could fall down and get lost.

Make sure no bare cable ends can get inside the device when connecting. Avoid short-circuits between the individual screw terminals and between the screw terminal and the support plate.

Push the connecting cables (max. 1.5mm²) of the speakers under the respective same coloured screw terminal (red to red, black to black). See also the printed connection designations of the speakers right (Right) and left (Left) and the characters "+" equal red and "-" equal black (see figure).

Make sure that the sheaths of the connecting cables are not clamped accidentally as well.

Tighten the screw terminals clockwise.



Remove transport protection



Attach connection cable

Operating additional equipment

Connecting Loewe sound system

Setup

The arrangement of speakers and TV set can look like the illustration below:


The front and surround speakers should be installed symmetrically to the TV set and to your sitting position.

You can place the subwoofer anywhere on the floor. We recommend placing it in front asymmetrically next to the TV set.

If a centre speaker is used, it should be placed centrally below the TV set.

For the settings in the sound components wizard enter the distances of the centre speaker, and the front and surround speakers to your sitting position. This guarantees a natural spatial image of the sound.

- ➡ If you have connected speakers directly to the TV set, you can use these as front or centre speakers depending on the setting in the sound components wizard.
- ➡ If you have not connected any speakers directly to the TV set, the two front speakers and the centre speaker (Centerspeaker I Compose) are connected to the subwoofer of the Individual sound system.

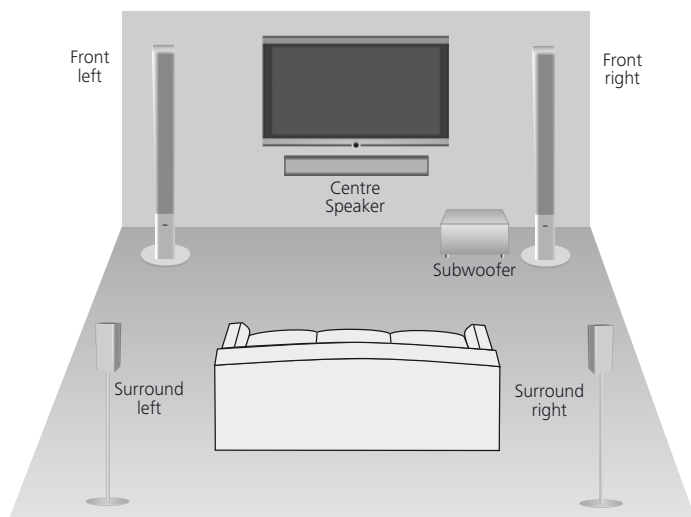

Setup example for Loewe Individual Sound

Connecting

Switch off all devices before connecting.

Subwoofer **without AUDIO LINK** interface (cable represented by grey, dotted line):


Plug the adapter cable to the **AUDIO LINK** interface of the TV set. Connect the cinch connections of the adapter cable to the 6-pin cinch connections of the subwoofer. Use the 6-pole cinch cable provided with the subwoofer for this.

The cubic plug cable connects the master connection on the subwoofer to the cubic plug of the adapter cable.

The adapter and cubic plug cable are available from your dealer (see Accessories, page 74).

Subwoofer **with AUDIO LINK** interface:

The subwoofer is connected to the TV set via the **AUDIO LINK** interface. Use the **AUDIO LINK** cable provided with the subwoofer.

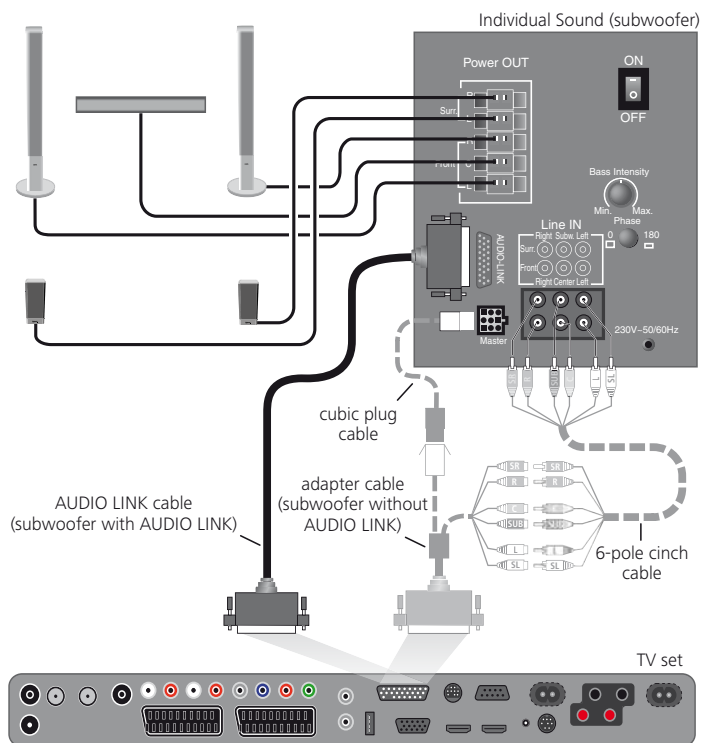

Connecting Loewe Individual Sound (Subwoofer) to the TV set

Operating additional equipment

Connecting active loudspeakers

If you want to use another similar speaker system or active speakers, you can connect these to the **AUDIO LINK** interface of the TV set with an adapter cable.

A comparable speaker system is connected in a similar way to that described above for "subwoofer **without AUDIO LINK** interface".

The adapter cable is available from your dealer (see Accessories, page 74).

Connecting active speakers


Switch off all devices before connecting.

Plug the adapter cable into the **AUDIO LINK** interface of the TV set. Connect the cinch connections of the adapter cable to the connections of the corresponding active speakers.

The cinch connections of the adapter cable are labelled:

R for Front right	SR for Surround right
L for Front left	SL for Surround left
C for Centre	SUB for Subwoofer

The connections on the adapter cable are preamplifier outputs. Therefore, only active speakers may be connected directly to the adapter cable.

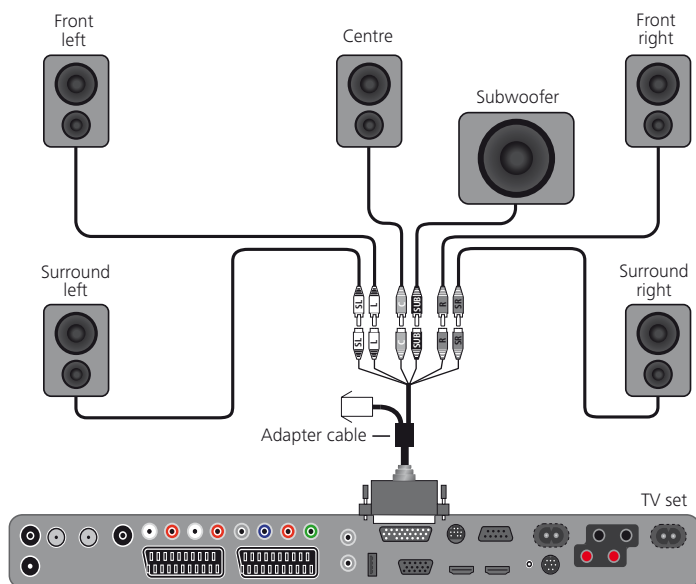

Connection of active speakers to the TV set

Adjusting the speaker system

Calling the sound components wizard

➡ In normal TV mode, without other displays.




Call **TV menu**.



◀ ▶ Select **Connections**,
▼ go to the menu line below.

◀ ▶ Select **Sound components**,
OK calls the sound components wizard.

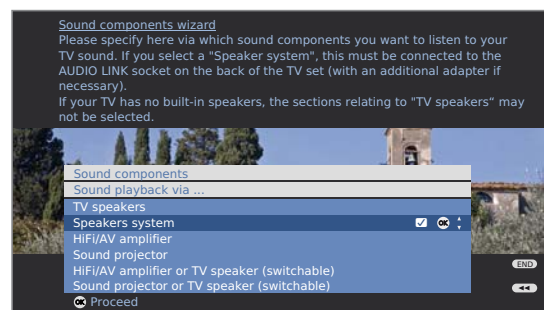


Sound playback via ... speakers system

Enter here that you want to hear the TV sound over a speaker system. If you connect active speakers, please use the setting **Speakers system**.



▼ ▲ Mark **Speakers system**,
OK to continue.

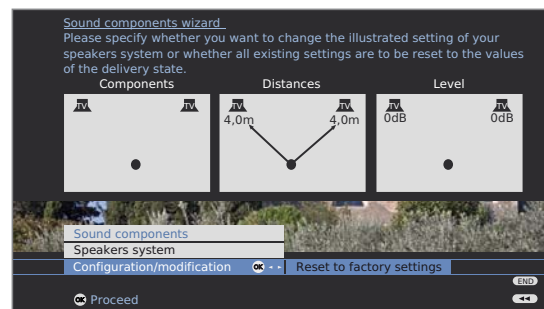

If nothing has been set yet, the factory settings or otherwise the last set values are displayed.


continued on the next page ➡

Operating additional equipment


If you want to set up or change a speaker system:




- ◀ ▶ Select **Configuration/modification**,
OK call selection.

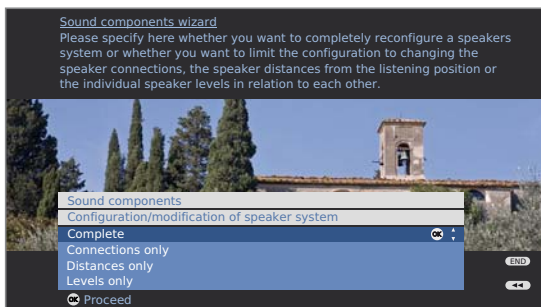

- ▼ ▲ Select **Complete**,
OK continue to connect and set the **front speakers**.

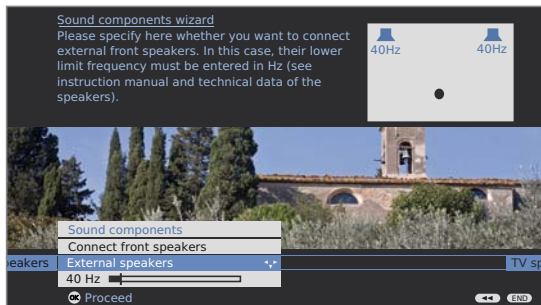

- ◀ ▶ Select **External speakers**,
▼ go to the menu line below and
◀ ▶ set the **lower limit frequency** of the front speakers
in 10 Hz steps.

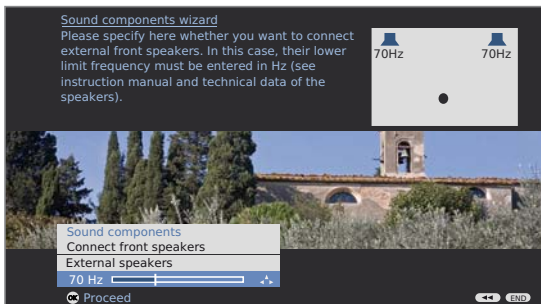

- ➔ Select the start value of the frequency response of the speakers for the right setting (e.g. 50Hz for the specification "Frequency response 50-20.000Hz"). See the technical data of the speakers for the value.

- ➔ You can replace the external front speakers by the TV speakers if necessary. In this case, select **TV speakers**. Then transmit the sound of the front speakers.



- OK** continue to connect and set the **surround speakers**.

- ◀ ▶ Select **yes** for external speakers.
- ➔ If no surround speakers are connected, these can be simulated using the front and centre speakers.
 - ▼ Go to the menu line below and
 - ◀ ▶ set the **lower limit frequency** of the surround speakers in 10 Hz steps.
- ➔ Select the start value of the frequency response of the speakers for the right setting.



- OK** continue to connect and set the **centre speaker**.

- ◀ ▶ Select whether the **TV speakers** or an **External speaker** is to reproduce the centre sound or **no** if no centre speaker is connected.
- ➔ If no centre speaker is connected, the front speakers also transmit the centre sound parts additionally.
 - ▼ for **External speakers** or **TV speakers** go to the menu line below and
 - ◀ ▶ set the **lower limit frequency** of the centre speaker in 10 Hz steps.
- ➔ Select the start value of the frequency response of the speakers for the right setting.



- OK** continue to connect the **Subwoofer**.

- ◀ ▶ **yes** is the selection for subwoofer.
- ➔ If no subwoofer is connected, the front speakers additionally transmit the sound parts intended for the subwoofer as far as possible.


continued on the next page →

Operating additional equipment



OK continue to set the **Distance to left front speaker.**

- ➡ Measure the distances from your listening position to the front, surround, and centre speakers respectively. The digital audio decoder calculates delay times from this for the loudspeaker signals, so that these reach the listener simultaneously.

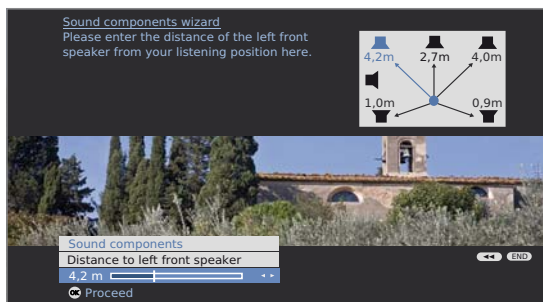


- ◀ ▶ Set the distance between the left front speaker and your listening position in 10 cm steps.

OK continue respectively to the other speakers and
◀ ▶ adjust the distance.

- ➡ After setting the distance for the centre speaker ...



OK continue to **Adjust speaker level.**

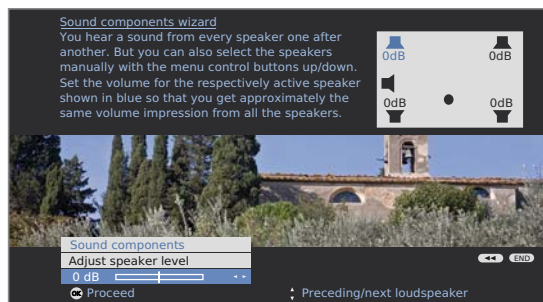


- ◀ ▶ Adjust the volume for each speaker.
- ▼ ▲ Select speakers manually.

- ➡ For balanced audio reproduction all speakers should be set at the same volume level. A noise signal will be reproduced automatically on each speaker in succession. Adjust every speaker to equal perceived volume from your listening position.



OK continue to **Subwoofer phase.**

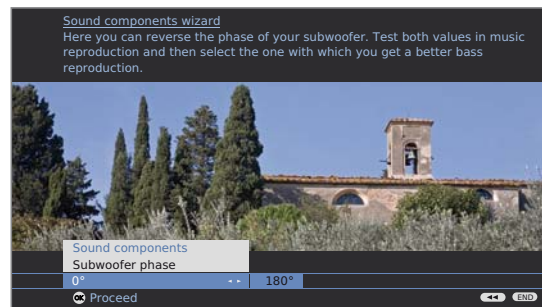

Switch to a station with music with **P+ / P-** or start playback with music on a DVD player.



- ◀ ▶ Test both values (**0°** and **180°**) and select the one with which you get a clearer bass reproduction from your listening position.

OK to confirm the setting and exit the wizard.

This ends the sound components wizard for connecting and setting up a speakers system.

Operating additional equipment

Connecting audio amplifiers

The sound components wizard permits configuration of different audio amplifiers (stereo amplifiers, surround amplifiers, analogue or digital) with different digital audio formats (Dolby Digital, dts, MPEG, and stereo/PCM). See the operating manual of the audio amplifier for more information.


MENU

Call **TV menu**.



- ◀ ▶ Select **Connections**,
- ▼ go to the menu line below.

- ◀ ▶ Select **Sound components**.
- OK** calls the sound components wizard

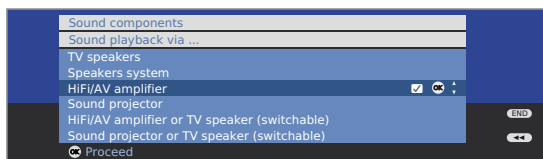

- ▼ ▲ Mark the **HiFi/AV amplifier**.
- OK Proceed**.

- ◀ ▶ Select whether the sound is to be transmitted digitally or analogue to the the amplifier.

Continue, depending on the amplifier, see right column.

Explanations of the setting possibilities:

HiFi/AV amplifier Select setting if an amplifier is connected and your TV set does not have any TV speakers connected.

HiFi/AV amplifier or TV speakers (switchable) Select setting if an amplifier is connected and your TV set has TV speakers connected. In the sound mode selection the audio reproduction can then be switched between the amplifier and the TV speakers.

Sound formats Specify sound formats which can be decoded with the digital amplifier (see operating manual of the used amplifier).

Type of amplifier Select either stereo or surround amplifier.

TV loudsp. as centre speaker For every connected surround amplifier, select whether the TV loudspeakers are to be used as centre speaker.

If so, establish a connection between the centre output of the amplifier and the centre input of the TV set **AUDIO IN1 C** with a cinch cable.


Attention: Do not use the centre speaker connection of the amplifier, use the centre pre-amp output instead!

Connecting digital audio amplifiers

Continuation of the left column above ...

For digital audio transmission: Select **yes**.

Connect the digital audio output of the TV set **AUDIO DIGITAL OUT** with the digital audio input of the amplifier via a cinch cable:

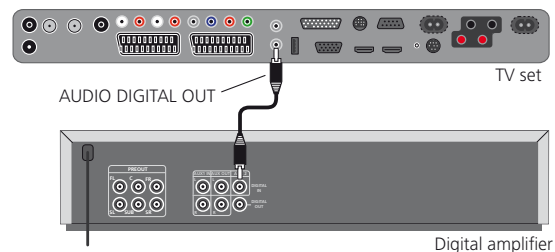


Sound formats, amplifier type and other settings, see explanations of the setting possibilities (left hand column).

Connecting analogue audio amplifiers

Continuation of the left column above ...

For digital audio transmission: Select **no**.

Connect the analogue audio output of the TV device **AUDIO OUT L/R** via a stereo cinch cable to the analogue audio input of the amplifier:

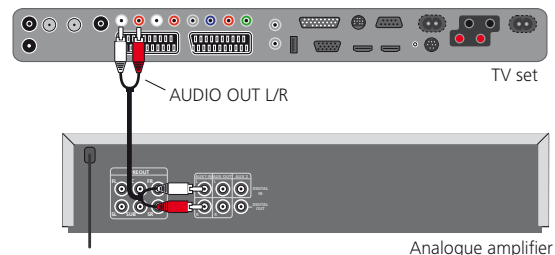

For selecting the amplifier type and making other settings, see explanations of the setting possibilities (left hand column).

Operating additional equipment

The direct way to record

You can programme timer recordings via the integrated Digital Recorder or connected recorders on the TV set. The recording wizard is integrated at several places for programming a recording. Further information about recording with the Digital Recorder can be found in a separate operating manual.

Programming a timer recording with the EPG

➡ You are in EPG mode; if not, press the **EPG** button.



▼ ▲ Mark the desired broadcast.

RECORD button: Call **Timer data**.

Change or confirm **Timer data** as necessary.

Programming a timer recording via teletext

➡ You are in teletext mode; if not, press the **TEXT** button.



RECORD button: Call the programme pages of the current station. Change preset page numbers, see page 35.



Red button: Go to the appropriate page.




▼ ▲ Select desired broadcast,

OK calls **Timer data**.

Change or confirm **Timer data** as necessary.

Enter timer data

Timer data are displayed after selecting the broadcast you want to record. You can change these before confirming.

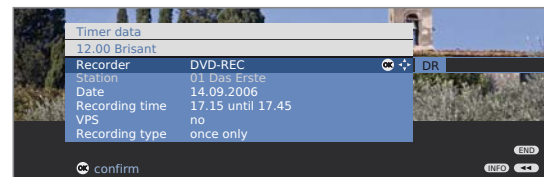

OK confirms **Timer data**, or change if necessary:

◀ ▶ Select **Recorder**.

▲ ▼ Select **Date**.

Enter the recording date with the **numeric buttons**.

▲ ▼ Select **Recording time**.

Enter the recording time with the **numeric buttons**.

▲ ▼ Select **VPS**.

◀ ▶ Set **yes/no**.

▲ ▼ Select **Recording type**.

◀ ▶ Set **once only, Mon-Fri, daily, weekly**.

OK Confirm the **Timer data**.



Setting possibilities in the Timer data menu:

Recorder Selection of the connected/integrated recorder.

Date Day of recording.

Recording time Time of recording.

VPS Use VPS data for analogue stations, **yes / no**. (only available for some analogue stations)

Auto time Use automatic time control, **yes / no**. control (only available for some DVB stations and when recording via EPG)

Recording type **once only, Mon-Fri, daily** or **weekly**.

➡ In devices with Digital Recorder and DR recordings by EPG **Serial** can be selected additionally (see also the instruction manual of the Digital Recorder).

➡ When the automatic time control is activated only **once only** can be selected.

➡ If you use an external recorder without Digital Link Plus, you have to select the recording source (e.g. AUX) in the recorder. This is also the case when DVB broadcasts are to be recorded. The TV's receiver is used.


➡ When you use an external recorder with Digital Link Plus or a comparable system (e.g. P50), this is controlled automatically.








Operating additional equipment

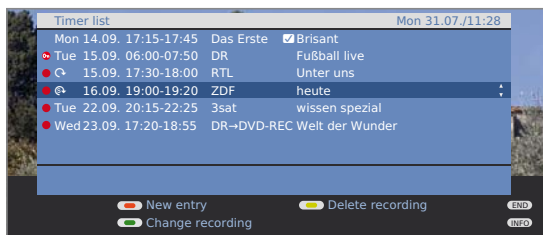Programming the timer with the timer overview






All programmed recordings, marked programs and copy orders are listed in the timer overview. You can also program new recordings, mark other programmes and copy pre-recorded programs from the DR archive to an external recorder with the timer overview.

 Call **Timer list**.



-     **Red button:** New entry (see right hand column).
-  **Green button:** Change recording.
-  **Yellow button:** Delete recording.
-  **Blue button:** Delete memo.

 
Explanation of the symbols in the timer list:

-  Record
-  Repeated recording (daily, weekly or Mon-Fri)
-  Serial recording
-  Decoding order (later decoding of an encrypted recorded programme)
-  Marked programme (see page 32)


New entry: Programme timer recording manually

⇒ Timer list is opened.

    **Red button:** Call **New timer entry**.



◀ ▶ Select **Recording**,
OK call.

 

◀ ▶ Select **Manual**.

For programming a timer recording **Via EPG** or **Via Teletext** see page 59.

OK Call **Station selection**.

◀ ▶ ▲ ▼ Select station.

OK Call **Timer data**.

 
Entry of the timer data see page 59.

After confirming the timer data the new recording is transferred to the timer overview.

New entry: Memorize programme using the timer overview

⇒ Timer list is opened.

    **Red button:** Call **New timer entry**.




◀ ▶ Select **Memo**.
OK EPG is opened.

 
Note desired programme as described in **Switching and memorizing with the programme list** (Seite 32).

New entry: Copying DR archive entries

⇒ Timer list is opened.

⇒ An external recorder is registered.

    **Red button:** Call **New timer entry**.



◀ ▶ Select **Copy**.
OK The DR archive is opened.

See the chapter **Copying recordings** in the operating instructions of the Digital Recorder for further steps.

Operating additional equipment

Timer recording with external devices

➡ It is not possible to record HDTV broadcasts with external devices. Use the internal Digital Recorder for this.

Recorder with Digital Link Plus

If you use an externally connected recorder with Digital Link Plus or a similar system, the TV set and connected recorder exchange data (e.g. compare station lists TV set/recorder or timer data of analogue stations). Please consult the operating manual of your recorder to find out of your recorder is Digital Link Plus compatible. In addition use only Euro-AV cables for the connection between TV set and recorder.

Analogue stations

The timer data are transmitted automatically from the TV set to the recorder after programming is complete. (For DVD recorders in addition the recording quality SQ or EQ is also transmitted.)

The recording is then controlled by the recorder and the recorder tuner is used for reception of the programme.

The recording data are not saved in the timer overview of the TV set. Consequently if you want to change or delete the timer data then you must do so on the recorder.

Digital stations

If you want to record digital stations with an externally connected recorder, then the DVB tuner is used and the TV device takes over control of the recorder. Then the station on the TV set is locked during the timer recording. It is not possible to switch over to another DVB station.

Recorder without Digital Link Plus

If the programmed timer cannot be transmitted to the external recorder (no Digital Link Plus) but supports Digital Link (Loewe-own system), the TV receiver is always used.

Digital Link must be switched on on the recorder. Read the operating instructions of your Loewe recorder.

In addition use only fully wired Euro AV cables for the connection between TV set and recorder.

Analogue and digital stations

You can control the recording from the TV set. The recorder must be set manually to the AV input, to which the TV device is connected. The station on the TV set is locked during the timer recording. It is not possible to switch over to another station.

Copy protection

Copy-protected programmes will not be output on the EURO AV sockets for legal reasons.

Operating additional equipment

PhotoViewer

You can view photos in the standard JPEG format stored on a USB stick or a memory card in a card reader. You can also collect photos in a slide show.

Connecting

➡ Certain USB memory media may not be supported by this set under some circumstances.

Plug a card reader (via a USB cable) or a USB stick into the USB port on the TV set (see pages 5 and 6).

Use a USB extension cable (see Accessories on page 74) for the USB stick if the USB socket is difficult to access (e.g. wall mounting) or the USB stick is too big to be plugged in.

To mount the cover, break out the cable opening in the cover flap.

Starting the PhotoViewer

➡ No photos can be displayed which are available in progressive JPEG format.

A memory card or the USB stick should contain data in standard JPEG format with the file extension ".jpg".

ASSIST

Call the **Assist+** menu.



▲ ▼ Mark **PhotoViewer**,
OK continue.

If only one memory medium is available, the **PhotoViewer** is started. You see the first page of the photo overview (see right column).

If several media are available, select with



◀ ▶ memory medium and then with
OK start **PhotoViewer**.

Ending the PhotoViewer

Remove used memory medium.

Or:

END

Press **END button** (when photo list is displayed).

Or:

TV

Press **TV button**.


Or:

ASSIST

Press the **ASSIST button** and call another function in the Assist+ menu.


Viewing photos

➡ The photo overview is displayed.

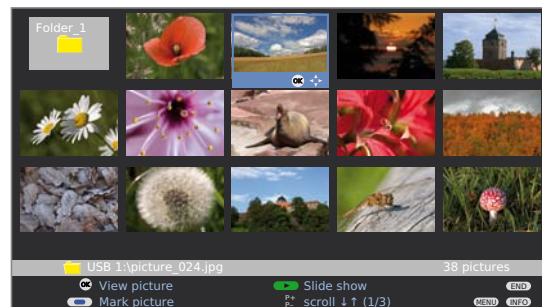

▲ ▼ ◀ ▶ Mark a photo, page with **P+/P-** if necessary.

OK Display as full picture.

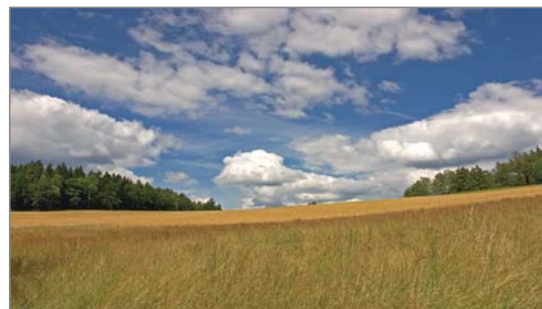

▶▶ or **P+** Next photo.



◀◀ or **P-** Previous photo.



END: Show/hide photo information.



Yellow button: Zoom photo.

Enlargement factors x2, x4, and x8 are possible.

Press the button several times.

The 4th press returns you to the original size.



Select photo section in zoom mode with ▲ ▼ ◀ ▶ .

Exit the zoom mode to the photo overview with **OK** or the **STOP button**.



◀ ▶ Rotate picture by 90 degrees to the left/right.

➡ Photos displayed in a slide show can only be rotated in the Pause mode for viewing.



OK or **STOP button**: Back to the photo overview.



Operating additional equipment


Open folder

- ➡ Folders will only be displayed if they were created on the memory card / USB stick.



- ▲ ▼ ◀ ▶ Mark a folder in the photo overview.
- OK** Open folder.

The photos in this folder are displayed.

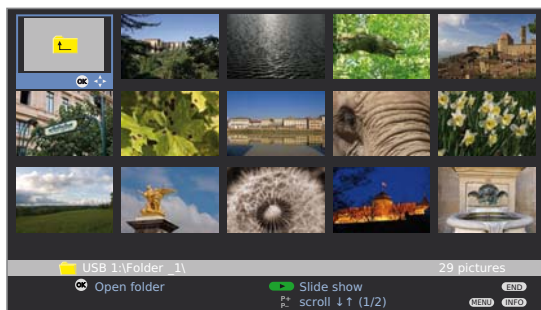


Marking photos for slide show

Mark the photos that you want to display in a slide show.



- ▲ ▼ ◀ ▶ Navigate to a photo.

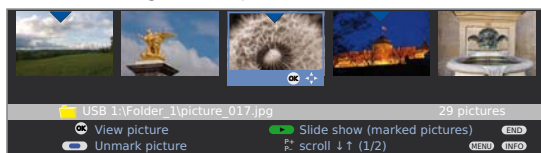

Blue button: Mark photo for slide show.

Starting a slide show

- ➡ No photos marked: All photos of the folder that was just opened will be displayed.
- ➡ Photos marked: Only marked photos will be displayed.



PLAY button: Start / continue slide show.



OK calls the photo overview.



PAUSE button: Pause / continue the slide show.



Yellow button: Zoom picture (only in pause mode).



- ◀ ▶ Rotate picture to left/right in 90° increments (only in pause mode).



▶▶ or **P+** Next photo.



◀◀ or **P-** Previous photo.



STOP button: End slide show.


Calling the PhotoViewer menu

In the PhotoViewer menu you can make picture settings and select the memory medium.

- ➡ The photo overview is displayed.



Call **PhotoViewer menu**.

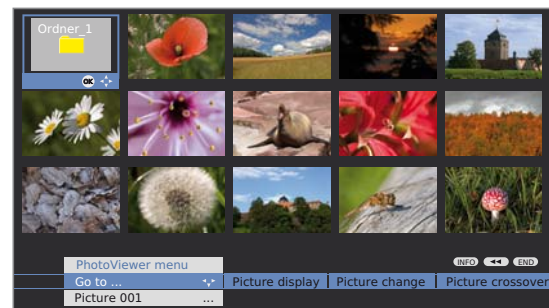

Explanations of the setting possibilities:

Go to... Within the folder select a photo directly or go to the beginning or end of the folder.

Picture display With **Optimum size** the photo is reduced or enlarged in size so that the screen is optimally filled. With **Original resolution** each pixel of the photo represents one pixel on the screen. If the photo resolution is higher than that of the screen, then portions of the photo will be cropped.

Picture change Set the display time per photo in a slide show to between 3 and 60 seconds. The loading time of the photo depends on the photo size, the number of saved files and the transmission speed of the memory medium. Therefore a photo change may take longer than specified.

Picture crossovers There is a choice of four different photo transitions for changing slides. You can also have the photo transitions run in sequence.

Photo info Display additional information about the picture: Recording time and date, resolution and picture size.

Picture settings The settings correspond to the picture settings in TV mode (see page 22).

Sound Select whether or not the previously heard sound is to be heard during the PhotoViewer operation.

Select memory medium Select memory medium from which the photos are to be reproduced. This menu item is only displayed if at least two memory media are available.

Operating additional equipment

MusicBox

You can play music files in MP3 or WMA format which are saved on a USB stick or a memory card in a card reader. You can also collect the music titles in play lists.

Connection

- ➡ Certain USB memory media may not be supported by this device.
- ➡ Your memory medium should not exceed a total capacity of 8 GB. Larger memory media may not be supported. The read-in time of the memory medium depends on the stored data volume.
- ➡ The file names must have the extension ".mp3" or ".wma". Alternative specifications such as MP3 Surround or similar are not supported.

Plug a card reader (with a USB cable) or a USB stick into the USB port on the TV set (see page 5 and 6).

Starting the MusicBox

ASSIST

Call **Assist+** menu.



▲ ▼ Mark **MusicBox**,
OK continue.

If there is only one memory medium the **MusicBox** is started with the **MusicBox list** (see right column).

If several media are available select memory medium with



◀ ▶ and then with
OK start **MusicBox**.

Ending the MusicBox

Remove used memory medium.

END

Or:
Press **END button** (while status window is displayed)

TV

Or:
Press **TV button**.


ASSIST

Or:
Press the **ASSIST button** and call another function in the Assist+ menu.

- ➡ If the MusicBox is ended during playback, the MusicBox remembers the appropriate place in the title. If the TV set is not switched off or the memory medium removed in the meantime, the playback continues at this point the next time the MusicBox is called. The MusicBox then starts immediately on the **MusicBox status window** (see right column).

Select/play music


After starting the MusicBox, the content of the memory medium, the **MusicBox list**, is displayed.

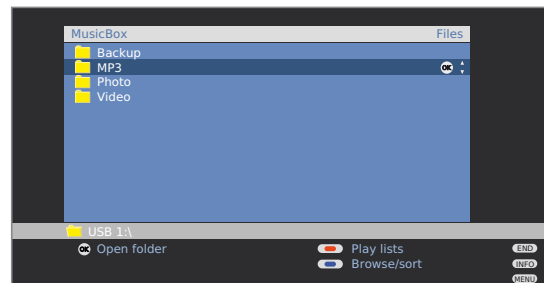


- ▲ ▼ Mark folder, scroll with **P+/-P-** if necessary,
OK open selected folder.
You see the music files (titles) and/or sub-folders in the opened folder.

One folder level back:

Select **⬅** ... and press **OK**.

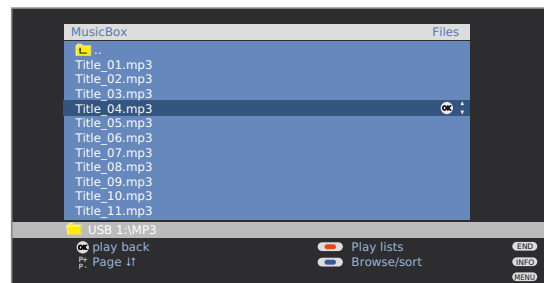

- ▲ ▼ Mark title, scroll with **P+/-P-** if necessary,
OK play marked title.
Then the **MusicBox status window** opens with information about the played title.
- ➡ If the file contains additional information (ID3 tags), the title, singer, album title etc. are displayed.

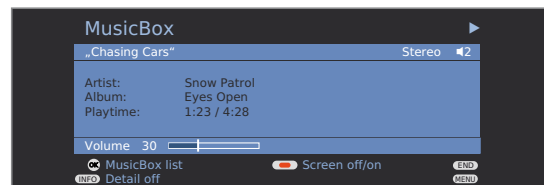

Operating additional equipment

Functions of the control buttons

- ▶ Title is played.
- ▶ Fast forward and rewind is not possible with WMA files.



STOP button: Once: resume stop, twice: stop.



PLAY button:

After resume stop: Continue playing at place where playback was interrupted.

After stop: Start playing the first title according to the set sorting.

For playback: Start the current title from the beginning.

For pause: Continue playback.



PAUSE button: Pause / continue playback.



▶▶ Short: next title, long: wind.



◀◀ Short: previous title, long: rewind.

Settings in the MusicBox status window



Red button: Switch off TV screen.

Press **red button**, **INFO** or **OK** to switch back on.



Reduce info window to one line / maximise again.



OK Show MusicBox list.

MusicBox – Browse/sort

You can browse or sort the contents of your memory medium with the coloured buttons according to certain criteria (file names, titles, artists, albums).

- ▶ The MusicBox list is displayed.




Blue button: Call **Browse/sort**.

The MusicBox overview is sorted according to **Files** at the beginning. The sorting is based on the file names of the music files regardless of their ID3 tags.



▲ ▼ Select file/folder and play/open with **OK**.

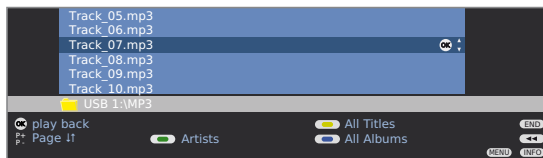


Sort according to artists



Green button: Show **Artists**.

All music titles are sorted alphabetically according to artists (ID3 tags).

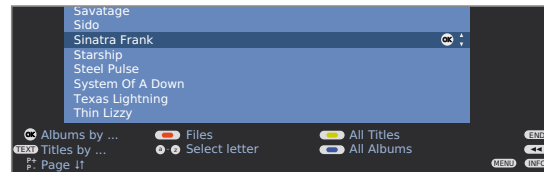

▲ ▼ Mark artist, scroll with **P+/-** if necessary or enter the initial letter with **numeric buttons** like a mobile phone keypad (see page 15).



OK Call **Albums by ...**

The albums of the selected artist are displayed sorted alphabetically.

▲ ▼ Mark album and select with **OK**.

▲ ▼ Select title in album and play with **OK** in MusicBox status window.



TEXT: Call **Titles by ...**

The titles of the selected artist are displayed sorted alphabetically.

▲ ▼ Select title and play with

OK in MusicBox status window.



Sorting according to titles



Yellow button: Show **All Titles**.

All available titles are sorted alphabetically by ID3 tags and displayed with the appropriate artist.

▲ ▼ Select title and play with

OK in MusicBox status window.



Sorting according to albums



Blue button: Show **All Albums**.

All available albums are sorted alphabetically by ID3 tags and displayed with the appropriate artist.

▲ ▼ Mark album and select with **OK**.

▲ ▼ Select title in album and play with **OK** in MusicBox status window.



Sorting according to files



Red button: Show **file overview**.

Exit sorting



Exit search/sorting. The new sorting is retained in the MusicBox list.

Operating additional equipment

MusicBox – Play lists

You can save and call your music titles in play lists. Change and create play lists as you like.


The play lists are created on the memory medium in the common M3U format for simple exchange with the PC.

Call / play play list

➡ The MusicBox list is displayed.



Red button: Call **Play lists**.

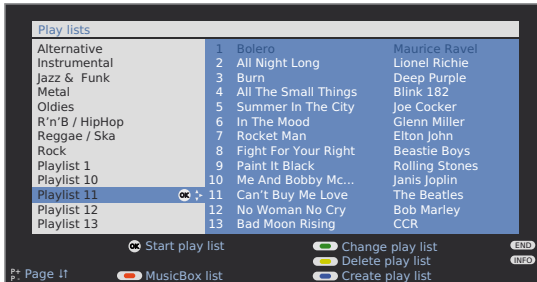

In the play list overview you see the created play lists on the left hand side of the dialogue. On the right next to it you see the music files in the marked play list.



▲ ▼ Select play list, scroll with **P+/P-** if necessary.

OK The play list is played in the MusicBox status window starting with the first title. The name of the play list is displayed after the title.



OK The play list is displayed again.

▶ Change from list selection to title selection.



▲ ▼ Select title, scroll with **P+/P-** if necessary,

OK the play list is played in the MusicBox status window from the marked title.


Create new play list / add title

- ➡ The play list overview is displayed.
- ➡ List selection (left column) must be selected. If not, change the column with ◀ .



Blue button: Call **Create play list**.

A new empty play list is created. The file selection is visible on the left.

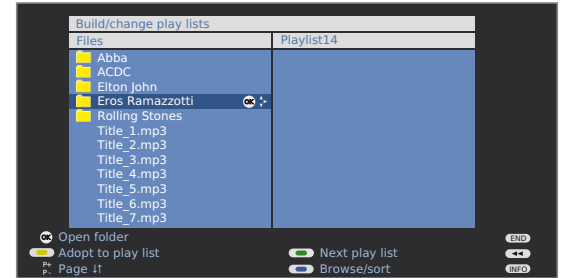

▲ ▼ Mark title/folder, scroll with **P+/P-** if necessary, **OK Adopt** marked title to play list or **open** marked folder.



Yellow button: **Adopt** marked folder to play list.

Change play lists

You can adapt the play lists as required. It is possible to move the titles in the play lists or remove them from the list. The play list can be renamed or deleted completely.

➡ The play list overview is displayed.



Green button: Call **Change play list**.



▶ Go to the page of the play list (right column).



Green button: Select play list to be changed.

Operating additional equipment

Rename play lists

⇒ Play list (right column) must be selected. If not, change column with ▶.



Blue button: Starts **Rename play list**.



Numeric buttons: Enter new name (same procedure as for rename station, see page 28).



OK Save new name.

Move titles in the play lists / change order

⇒ Play list (right column) must be selected.



▲ ▼ Mark title to be moved.



Yellow button: Starts **Move title**.



▲ ▼ Select insertion position at which the marked title is to be inserted.

OK Move title.

Remove titles from play lists / clear play list

⇒ Play list (right column) must be selected.



▲ ▼ Mark title to be deleted.

OK Remove marked title from play list.

Or:



Red button: Starts **Clear play list**.



OK Confirm clearing play list.

Delete play list from memory medium

⇒ The play list overview is displayed.



▲ ▼ Mark play list to be deleted.



Yellow button: Starts **Delete play list**.



OK Confirm delete play list.

Exit play list overview

⇒ The play list overview is displayed.



Red button: Call **MusicBox list**.

Or:



END: Call MusicBox status window.

MusicBox – Menu

In the MusicBox menu you make sound settings, can select the memory medium and set the repeat mode.

⇒ MusicBox must be activated.



Call **MusicBox menu**.



Explanations of the setting options:

Select memory medium Select memory medium from which the audio files are to be used. This menu item is only displayed if at least two memory media are available.

Picture settings The settings correspond to the picture settings in TV mode (see page 22).

Sound settings The settings correspond to the sound settings in TV mode (see page 20).

Repeat Titles can be repeated in two ways:

Title ⌚:


Only the played title is repeated.

Folder or Play list ⌚:

Only the titles from the currently selected folder or, if play list is activated, the current list are repeated.

Repeating is endless until the function is switched off in the MusicBox menu.

The appropriate symbols for the repetition are displayed in the top right of the info window.

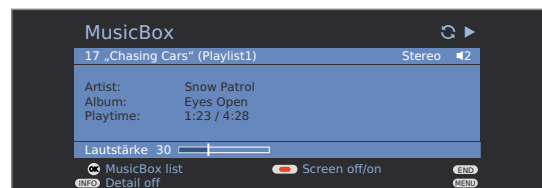

Operating additional equipment

Operating Loewe equipment

Using the remote control for the TV mode of the TV set

TV Press the **TV button**, the display above it will light for approx. 5 seconds.

Using the remote control for additional equipment

REC DVD AUDIO Press the **REC**, **DVD** or **AUDIO button**, the display above it will light for approx. 5 seconds.

As long as a button is pressed, the display of the selected operating mode lights up (TV – REC – DVD – AUDIO). This allows you to check which operating mode the remote control is set to every time you press a button.


Setting the remote control for other Loewe devices

Press required device button along with the **STOP button** at the same time, until the associated LED display flashes twice. Then enter the two-digit device code from the list.

Device	Code	Factory setting
Loewe ViewVision 8106 H	10	
Loewe Viewvision, Centros 21x2	12	
Loewe ViewVision DR+ DVB-T	13	REC
Loewe Auro 2216 PS/8116 DT	14	
Loewe BlutechVision	15	
Loewe Soundprojector	17	
Loewe TV - digital radio	19	AUDIO
Loewe Mediacenter	20	
Loewe BlutechVision Interactive	21	DVD
HDMI CEC mode	22	
Loewe AudioVision	24	
Loewe Individual Sound Projector SL	25	
Resetting to factory setting	99	

The associated LED display flashes twice.

► The codes shown here only apply for direct operation of the accessory device. For operation of the accessory device via the TV set, e.g. with concealed installation, see page 49.

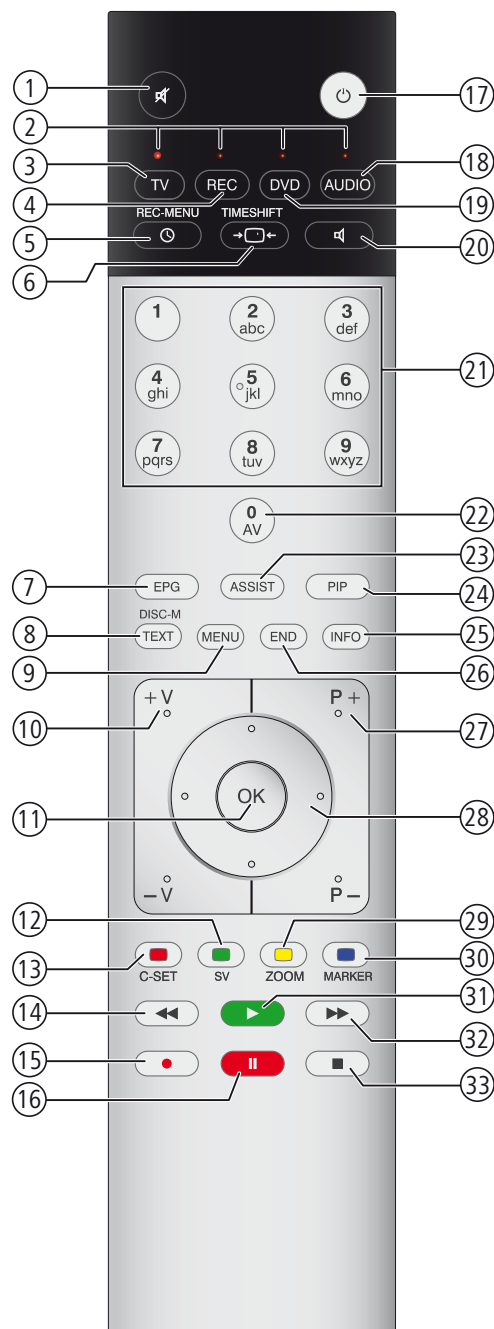

Operating additional equipment

Functions for the Loewe DVD player (Auro 2216 PS, 8116 DT)

- ① Sound off/on
- ② LED indicator for current operating mode
- ③ Switch over to operate TV set
- ④ Switch over to operate Recorder
- ⑤ Sleep timer
- ⑥ Set TV picture format; RADIO: Mono/Stereo
- ⑦ DISC: Repeat; RADIO: display RDS name/frequency of station
- ⑧ DISC: User interface of loaded DVD
- ⑨ Show/hide menu; MENU: close window
- ⑩ **V-/V+** Volume down/up
- ⑪ DISC: Title/Chapter overview; RADIO: station table
MENU: confirm menu selection
- ⑫ Green button: Title/Chapter selection
- ⑬ Red button: DISC: camera position
- ⑭ DISC: short: beginning of chapter/title previous chapter;
long: search back;
RADIO: short: fine tuning back long: search back
- ⑮ no function
- ⑯ Pause; single frame; slow motion
- ⑰ Switch on/off - on stand by
- ⑱ short: TV Radio Digital; long: Auro FM/AM-Radio
- ⑲ Switch over to operate Auro
- ⑳ Select sound format
- ㉑ DISC: select chapter/title; RADIO: select stored station;
MENU: enter digits
- ㉒ MENU: enter numbers or letters
- ㉓ DISC: Repeat A-B; RADIO: FM/AM-mode
- ㉔ Select external audio source
- ㉕ DISC: menu bar
MENU: context help
- ㉖ DISC: Status display; RADIO: station table
MENU: hide menu
- ㉗ **P+/P-** DISC: next/previous chapter; RADIO: station forward/back
- ㉘ ▲ ▼ DISC: chapter up/down; MENU: select up/down;
◀ ▶ DISC: search back/forward; MENU: select left/right
- ㉙ Yellow button: Zoom
- ㉚ Blue button: Set marker
- ㉛ Playback
- ㉜ DISC: short: next chapter/title; long: search forward
RADIO: short: fine tuning forward; long: search forward
- ㉝ Stop

Functions for the Loewe DVD recorder (Centros 1202, 2102 HD, ViewVision DR+)

- ① TV Sound off/on
- ② LED indicator for current operating mode
- ③ Switch over to operate TV set
- ④ Switch over to operate Recorder
- ⑤ Timer recording menu; timer recording list menu
- ⑥ STOP: Title List; PLAY: Edit thumbnail;
CARD: Photo-, Music-, Film-Mode
ViewVision DR+: Timeshift Mode
- ⑦ STOP: Call AV selection (AV1-AV4,DV,TV)
ViewVision DR+: PLAY: skip 15 Sec.
- ⑧ User interface of loaded DVD
MENU: original / playlist
- ⑨ Show/hide menu
- ⑩ **V-/V+** TV Volume down/up
- ⑪ Status display (TV, DVD)
MENU: confirm the menu selection
- ⑫ Green button: ShowView menu
- ⑬ Red button: new chapter marker
- ⑭ PLAY: press short: Start of current chapter/previous chapter;
press long: search back; PAUSE: press short: slow motion back
- ⑮ Record
- ⑯ Pause /single frame
- ⑰ Switch on/off - on stand by
- ⑱ TV Radio Digital
- ⑲ Switch over to operate DVD-Player
- ⑳ TV Sound menu
- ㉑ STOP: Select station directly
MENU: enter numbers or letters
- ㉒ MENU: enter numbers or letters
ViewVision DR+: STOPP: Call AV selection
- ㉓ Card Reader operation
ViewVision DR+: „Home“ menu
- ㉔ PIP (picture in picture)
- ㉕ Info; PLAY: menu bar
- ㉖ MENU: hide menu
- ㉗ **P+/P-** PLAY: Next chapter; STOP: Select station up/down
- ㉘ MENU: select/set
- ㉙ Yellow button: Zoom
- ㉚ Blue button: DISC: short: Set marker; long: Marker search
- ㉛ Playback
- ㉜ PLAY: Press short: next chapter; Press long: search forward
PAUSE: Press short: slow motion forward
- ㉝ Stop

Operating additional equipment

Rotating the TV set

Your TV set has a connection for a rotating stand control. If the set is mounted on a motorised Loewe stand, you can use the remote control to adjust it to your seating location accordingly.

- ➡ A motor unit is connected.
 - ➡ In normal TV mode, without other displays.
- ◀ ▶ Rotate the TV set.



Do not place any objects in the rotation range of the TV set that could obstruct the rotation or that could be knocked over by the rotation movement.

Setting the range of rotation

You can specify the rotation range of the TV device (maximum +/- 40 degrees) by setting the maximum right and left stop position.



Call **TV menu**.



- ◀ ▶ Select **Settings**,
▼ go to the menu line below.

- ◀ ▶ Select **Miscellaneous**,
▼ go to the menu line below.

- ◀ ▶ Select **Rotate TV**,
▼ go to the menu line below.

- ◀ ▶ Select **Basic adjustment**,
OK calls the basic adjustment.



- ▶ **Basic adjustment (right)**
Turn your TV set as far to the right as the installation position of your set allows. This will be the maximum right rotation position in future.

OK confirms basic adjustment to right.



- ◀ **Basic adjustment (left)**
Turn your TV set as far to the left as the installation position of your set allows. This will be the maximum left rotation position in future.

OK ends the basic adjustment.



Close the menu.

Specifying the switch off position

This is where you specify the position that the TV will take when it is switched off. In order for the TV set to return to the determined switch-off position when switching it off, this must be activated (see below).



Call **TV menu**.




- ◀ ▶ Select **Settings**,
▼ go to the menu line below.

- ◀ ▶ Select **Miscellaneous**,
▼ go to the menu line below.

- ◀ ▶ Select **Rotate TV**,
▼ go to the menu line below.

- ◀ ▶ Select **Set switch-off position**,
OK calls Set switch-off position.

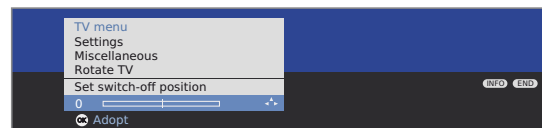

- ◀ ▶ Set desired switch-off position.
The TV set rotates in the process.

OK Save the set position as the switch-off position.



Close the menu.

Activating the switch-off position



Call **TV menu**.



- ◀ ▶ Select **Settings**,
▼ go to the menu line below.

- ◀ ▶ Select **Miscellaneous**,
▼ go to the menu line below.

- ◀ ▶ Select **Rotate TV**,
▼ go to the menu line below.

- ◀ ▶ Select **Activate switch-off position**,
▼ go to the menu line below.

- ◀ ▶ Select **yes**.



Close the menu.

If the TV set is switched off with the on/off key on the remote control or with the switch integrated in the display then it will turn to the defined switch-off position. When it is switched back on, it returns to the position last set

Troubleshooting




Problem	Possible cause	Remedy
All menus are displayed in the wrong language .	The menu language was set incorrectly.	Set the menu language: Press the INFO button in TV mode (Index). Mark the first key word and call it with OK . Then select the language and confirm it with OK .
In the TV menu , Connections cannot be called (displayed in grey).	A timer recording is in progress.	Wait until the timer recording ends or delete the timer recording (page 60).
The control functions of the Loewe Recorder and the Timer are not working or are not working properly	a) The Digital Link function is not activated or not possible in the recorder. b) EURO-AV cable is not connected. c) Recorder is not logged in.	a) Activate Digital Link in the recorder (see operating instructions of the recorder). b) Connect EURO-AV cable (page 47). c) Register recorder (page 44).
General problems when connecting external devices via an AV input .	a) The device is not logged in to the connection wizard or is connected differently from shown in the connection diagram . b) The AV standard is set incorrectly. c) The signal type is set incorrectly.	a) In the connection wizard (TV menu → Connections → New devices/modifications) compare the connection diagram with the actual installation and connect as shown if necessary (page 44). b) Set the correct standard (page 17). c) Set the correct signal type (page 45). If AV standard or AV signal is set to " Automatic " then this can cause errors to be detected with signals that do not comply with standards. In this case standard and signal must be set according to the information in the operating manual of the external device.
The connection of a decoder does not function or does not function properly.	a) The signal is not decoded because the correct decoder stations have not been selected in the connection wizard . b) In decoder mode the sound is missing because the wrong decoder sound has been assigned in the connection wizard .	a) Follow the instructions in the connection wizard (TV menu → Connections → New devices/modifications) and select the appropriate decoder station (page 44). b) Follow the instructions in the connection wizard and select the right audio source (Decoder, TV oder Autom.) (page 44), see also the decoder manual.
Digital Link Plus does not work.	a) EURO-AV cable is not fully wired (pin 10 not wired). b) Some recorders can only adopt stations during the initial installation of the TV set.	a) Replace the EURO-AV cable. b) Restore the recorder to the as-delivered state (see recorder's operating manual).

Troubleshooting

Problem	Possible cause	Remedy
With Teletext various character sets are displayed incorrectly.	The wrong character set has been set in the Teletext menu.	Set the right character set: Select Teletext menu → Settings → Character set → Standard or the appropriate character set.
No sound via the external digital audio amplifier .	a) The external digital audio amplifier does not support the selected sound format (Dolby Digital, dts, MPEG). b) TV set and external digital audio amplifier are not connected with each other.	a) Set PCM stereo on the DVD player in the sound selection. For DVB stations on the TV set switch to stereo in the Status display (END) – Language/sound (green button) . b) Connect AUDIO DIGITAL OUT from the TV set to a digital input of the external digital audio amplifier and select the appropriate input to this.
The picture of a connected external recorder is visible but the timer cannot be called.	The device is not registered in the connection wizard or is connected differently from shown in the connection diagram .	In the connection wizard (TV menu → Connections → New devices/modifications) compare the connection diagram with the actual installation and connect as illustrated (page 44).
The picture of a connected external recorder is visible but the error message no recorder available is still output.	The device is not registered in the connection wizard or is connected differently from shown in the connection diagram .	In the connection wizard (TV menu → Connections → New devices/ modifications) compare the connection diagram with the actual installation and connect as illustrated (page 44).
Photos on the USB stick are not displayed correctly in the PhotoViewer or a "?" appears.	The photo is not available in a displayable format.	Convert photo file into a standard JPG format on the PC.
A programmed recording was not made.	Recording of analogue stations with VPS data: The programme to be recorded was not (no longer) in the programmes offered by the station via VPS. Recording of DVB stations with automatic time control : The provider deleted the programme from the EPG data, for example due to a programme change.	The stations are exclusively responsible for the transmission of VPS data (for analogue stations) or for the use of the automatic time control (for DVB or MHEG-5 stations). The availability of the appropriate data cannot be guaranteed.
Errors occurred when running a CA module.		Switch the TV set off. Remove the CA-module from the TV set. Wait a few seconds. Reinsert the CA-module. Switch the TV set on again.

Technical data

General data

Type	Individual 40 Compose 	Individual 46 Compose 	Individual 52 Compose 
Article number	67437xxx	67439xxx	67440xxx
Device dimensions without base (W x H x D) in cm	101.4 x 61.7 x 10.3	114.1 x 69.2 x 11.4	130.8 x 78.5 x 12.8
Weight (approximate) in kg	28,2	35.7	52.0
Display technology	Full-HD 100Hz LCD technology	Full-HD 100Hz LCD technology	Full-HD 200Hz LCD technology
Screen diagonal (in cm) / Picture format	101 / 16:9	117 / 16:9	132 / 16:9
Resolution (in pixels) / Picture frequency	1920 x 1080 / 100 Hz	1920 x 1080 / 100 Hz	1920 x 1080 / 200 Hz
Contrast (static / dynamic)	2,000:1 / 10,000:1	2,000:1 / 10,000:1	5,000:1 / 30,000:1
Viewing angle (horizontal / vertical)	178° / 178°	178° / 178°	178° / 178°
Power consumption (EN 62087:2009)			
Power consumption "On" (W)	205	220	250
Power consumption in standby mode (W)	1,0	0,9	0,9
Power consumption when the set is turned off (W)	0	0	0
Ambient temperature (Celsius)	5° – 35°		
Relative humidity (non-condensing)	20 – 80%		
Air pressure	800 – 1114 hPa (0 – 2000 m above sea level)		

Electrical data

Chassis designation: L 2715
 Power supply: 220 V – 240 V/50–60 Hz
 Tuner: VHF/UHF/cable/hyperband
 Range: 45 MHz to 860 MHz
 Station storage locations incl. AV and radio: 4000
 TV standards: B/G, I, L, D/K, M, N
 Colour standard: SECAM, PAL, NTSC, NTSC-V, PAL-V (60 Hz)
 Sound standard Mono/Stereo/2-Ton/Nicam B/G, I, L
 Dolby Digital, Dolby Virtual Speaker, DTS
 Audio output power (music/sine): 2 x 40 W / 2 x 20 W
 Teletext: TOP/FLOF Level 2.5
 Page memory 2000
 Digital teletext (only in UK / IRL with active MHEG-5 software) MHEG-5

Jack 3.5 mm: Headphones 32- 2000 ohm
 Mini-DIN (AVS) Video IN: Y/C (S-VHS/Hi 8)
 CVBS (VHS/8 mm)
 Cinch (yellow) Video IN: CVBS (VHS/8 mm)
 Cinch (white/red) Audio IN: L (white) / R (red)
 2x IEC socket 75 Ohm/5 V/80 mA: Antenna/cable/DVB-T/C
 2x F socket 75 Ohm 13/18 V/350 mA: ANT-SAT DVB-S/S2
 2 x screw terminals Speaker Right: + (red) / - (black)
 2 x screw terminals Speaker Left: + (red) / - (black)
 Jack 3.5 mm AUDIO IN2: L/R
 Cinch AUDIO IN max. 2Vrms: Centre
 2 x Cinch AUDIO IN1: L (white) / R (red)
 2 x Cinch AUDIO OUT (level depends on configuration): L (white) / R (red)
 Cinch COMPONENT IN: Cb/Pb signal
 Cinch COMPONENT IN: Cr/Pr signal
 Cinch COMPONENT IN: Y signal
 Cinch AUDIO DIGITAL IN (SPDIF): Digital audio
 Cinch AUDIO DIGITAL OUT (SPDIF): Digital audio
 SUB-D AUDIO LINK: Multi-sound
 SUB-D PC IN: PC/STB video signal
 SUB-D RS-232C: serial interface
 Mini-DIN SERVICE: Service/L-Link
 Mini-DIN CONTROL: Rotating stand control (Positioning accuracy 1.5°)
 2 x USB USB 2.0: MP3/WMA/Standard JPEG files
 2 x HDMI Digital Video/Audio IN
 Type A 19pole Standard 1.3: Digital video and audio
 2 x CI-Slot Common Interface Slot for CA module
 Ethernet (8P8C) LAN: Network interface¹⁾

Connections (max. equipment)

Mains socket: Supply voltage
 EURO-AV 1 Video IN: Y/C (S-VHS/Hi 8)
 CVBS (VHS/8 mm)
 Video OUT: CVBS (VHS/8 mm)
 Y/C (S-VHS/Hi 8)
 Audio IN: L/R
 Audio OUT: L/R
 EURO-AV 2 Video IN: Y/C (S-VHS/Hi 8)
 CVBS (VHS/8 mm)
 RGB
 Video OUT: CVBS (VHS/8 mm)
 Y/C, (only with SVHS Link Plus)
 Audio IN: L/R
 Audio OUT: L/R

¹⁾ Compose 40/46: Only after retrofitting Network Mediaplayer.
 Compose 52: Network Mediaplayer is installed at the factory.

Accessories

Accessories and upgrade kits

The following accessories are obtainable from your Loewe dealer.

Trim:

With your Individual Compose device it is possible to replace the laterally attached trim (panels) to match the ambiance of your home. There are different surface structures or colours that can be selected for your device. Please contact your dealer in this regard.

Wood trim is a natural product. In this case UV light (strong sunlight) can cause slight discoloration.

Upgrade kit Network Mediaplayer (Art.70399.080):

The Network Mediaplayer upgrade kit offers you the possibility of connecting your TV set to your computer. You can then play multimedia contents (photos, music files, videos) which are provided by a media server in your home network.

The connection can be made via an Ethernet port for LAN and via the conventional socket with Powerline or dLAN (external Powerline adapter necessary).

Retrofitting only possible for Compose 40/46.

Network Mediaplayer is factory installed for Compose 52.

Stereospeaker I Compose (2 pieces):

Add two stereo speakers to your Individual Compose which can be fixed directly to the TV set (not possible for Compose 52) or mounted separately on the wall.

Centerspeaker I Compose:

An external centre speaker is recommended for perfect spatial sound. It can be installed on a table stand or mounted on the wall. A visually attractive solution is the Center Floor Stand I Compose in which the loudspeaker is already integrated in the installation solution. The Centerspeaker I Compose can be combined with the Loewe Individual Sound System.

Loewe Individual Sound:

Your TV set can be perfectly supplemented with the Individual Sound speaker system. Numerous speaker combination possibilities with standing speakers, satellite speakers and a subwoofer can be implemented. Here as well it is possible to choose the colours of housing and trim.

Loewe Individual Sound Projector:

With the Loewe Individual Sound Projector you can easily enjoy digital Surround Sound without expensive installation and connection of several speakers. The Sound Projector is easy to set and operate.

Loewe DVD recorder:

The DVD recorders from Loewe are characterised by form and colour, which match Loewe TV sets, adapted user guidance and technology. Combined these devices form a system that offers many advantages.

Loewe Blu-ray Player:

With the Loewe Blu-ray Player "BluTech Vision" you are ideally equipped for the successor format to DVD. With the Loewe system integration you control BluTech Vision and your Loewe TV set simultaneously with the Assist remote control.

Loewe MovieVision DR+:

The external USB hard disk Loewe MovieVision DR+ makes it very easy to archive programs recorded on the integrated hard disk of the Digital Recorder. In addition, you can connect the Loewe MovieVision DR+ to all Loewe TV sets from Chassis L 2700 onward and watch your recorded movies.

Cube i Rack:

The Cube i Rack is designed as a supplemental rack that can accommodate two peripheral devices such as DVD player and/or DVD recorder, as well as the subwoofer of the Loewe Individual Sound speaker system. If a subwoofer is not used then the Cube i Rack can accommodate up to four peripheral devices.

Adapter and cables:

AUDIO LINK adapter	1.5 m	Loewe order no. 89954.001
AUDIO LINK	1.5 m	Loewe order no. 89952.001
AUDIO LINK	6 m	Loewe order no. 89952.002
AUDIO LINK	10 m	Loewe order no. 89952.003
Cubic plug cable	1.5 m	Loewe order no. 90418.930

Upgrade kit USB extension (Art.No. 70167.080):

To ensure easy accessibility of the USB connection or enable USB sticks to be inserted with a large casing, the TV set can be connected to a USB extension.

This upgrade kit is available from your Technical Customer Service (see service addresses on page 81).

 
Subject to availability.

Accessories

Setup possibilities




Wall Mount




Wall Mount Flex 52 L ⁽¹⁾




Table Stand I 52 Compose
Table Stand I 40-46
Compose

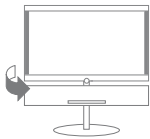


Floor Stand 5 MU SP

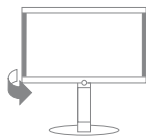

Center Floor Stand
I Compose

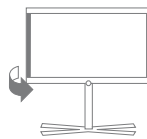

Screen Floor Stand I 52 MU
Screen Floor Stand MU

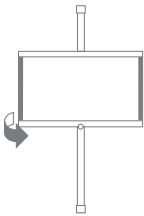

Screen Lift Plus ⁽¹⁾

Individual 52 Compose

- Wall Mount (delivery status)
- Wall Mount Flex 52 L ⁽¹⁾
- Table Stand I 52 Compose
- Floor Stand 5 MU SP
- Center Floor Stand I Compose
- Screen Floor Stand I 52 MU

Individual 46 Compose

- Wall Mount (delivery status)
- Wall Mount Flex 52 L ⁽¹⁾
- Table Stand I 40-46 Compose
- Floor Stand 5 MU SP
- Center Floor Stand I Compose
- Screen Floor Stand MU
- Screen Lift Plus ⁽¹⁾

Individual 40 Compose

- Wall Mount (delivery status)
- Wall Mount Flex 52 L ⁽¹⁾
- Table Stand I 40-46 Compose
- Floor Stand 5 MU SP
- Center Floor Stand I Compose
- Screen Floor Stand MU
- Screen Lift Plus ⁽¹⁾

⁽¹⁾ Only in connection with appropriate adapter to be ordered separately.

Glossary

0-9

24p movie display: Films released on Blu-ray Disc support presentation of 24p cinema films. The Blu-Ray player transfers the original film format to the television with 24 frames per second. The DMM (DigitalMovieMode) set in the factory calculates and inserts additional intermediate pictures, which suppress film jerking typical for the cinema, thereby providing for a smooth motion sequence.

A

Active antenna: An antenna with its own power supply or amplification which can improve the reception in areas with a poor coverage.

Automatic time control: Similar to **VPS** for analogue stations the automatic time control monitors the start and end times of programmes from DVB stations. If these times deviate from the data programmed in the timer data the running time of the recording is adapted automatically. The automatic time control is not supported by all DVB stations.

AV socket: Socket for audio and video signals.

AV sources: Audio/video source.

AVS: Audio/video sockets on the side of the TV set (cinch and mini-DIN).

B

Band: Name for a transmission range.

Blu-ray Disc: The follow-up format of **DVD**. The contents of about five DVDs fit onto one Blu-ray Disc (abbreviated BD). Therefore, the Blu-ray disc provides enough space for high-resolution images and multi-channel sound formats.

C

CA module: The **Conditional Access module** contains the coding system and compares the transmitted code with the one on the **Smart Card**. If they match, the appropriate stations or programmes are decoded.

CEC: Abbreviation for Consumer Electronics Control. CEC provides universal component control functions for entertainment electronics devices (e.g. System standby, One Touch Play). CEC is also known as **Digital Link HD** at Loewe.

Cinch cable: Cable for transmitting audio or video.

CI slot: See **Common Interface**.

Common Interface: The Common Interface (CI slot) is a standardised interface. By inserting suitable decoding modules (**CA modules**) and a **Smart Card** coded digital programmes can be used.

Common Interface Plus: CI Plus is an advanced development of the **Common Interface** standard. CI Plus slots are in principle downward compatible to the previous CI standard, i.e. CA modules and Smart Cards according to the past CI standard can continue to be used in CI Plus slots, as far as the programme provider permits this. Additionally, extended regulations apply however to CI Plus.

Component IN: Connection in which the video signal is transmitted via three separate cinch connections. It is made up of the brightness signal "Y" and the colour difference signals "Pb" and "Pr". **YPbPr** is the original analogue version of the digital **YCbCr** in which video data saved on the DVD as well as transmitted via satellite, cable or antenna in DVB are colour coded.

Conditional Access module: See **CA module**.

D

Decoder: Analogue, coded TV signals are passed through a decoder and made visible again.

Digital Link: System for controlling recorders (for video and DVD recorders from Loewe) via the Euro AV sockets of the Loewe TV set with concealed setup. Controlling the recorder for timer recordings.

Digital Link HD: System for controlling devices via the HDMI connection of the Loewe TV set in the case of concealed installation.

Digital Link Plus: System for controlling recorders according to protocol 50. For analogue stations the station and timer data are transmitted via the EURO-AV socket to the recorder. The timer recording is executed exclusively by the recorder. There is a different designation with different manufacturers.

Dolby Digital: Digital multi-channel audio. The digital standard for high quality home movie systems. The individual channels are broadcast separately in this standard. The three front channels right, left and centre, the two surround channels right and left and the external subwoofer channels are called a 5:1 signal.

Dolby Pro Logic: Analogue multi-channel audio. Converts a Dolby-coded stereo signal into a surround sound. This usually contains four channels (front left, centre, front right, surround channel). A special subwoofer channel is not generated in this method.

Dolby Pro Logic II: Analogue multi-channel audio. Dolby Pro Logic II is a further development of **Dolby Pro Logic**. This method generates a 6-channel spatial sound from a stereo or Pro-Logic signal (front left, centre, front right, surround left, surround right, subwoofer).

Dolby Surround: Analogue multi-channel audio system that brings four audio channels down to two audio tracks with the aid of a matrix coding.

Dolby Virtual Speaker: The Dolby Virtual Speaker technology simulates the surround playback of a real 5.1-channel playback with only two speakers.

DTS: Digital Theater Systems; Digital multi-channel audio.

DVB-C/-S/-T: Digital Video Broadcasting stands for digital television. Technical DVB is the standardised process for transmitting digital content (television, radio, multi-channel audio, room sound, **EPG**, Teletext, and other supplemental services) through digital technology. **C** stands for transmission via cable, **S** for distribution via satellite and **T** for terrestrial or antenna distribution.

DVD: Abbreviation of Digital Video Disk and later Digital Versatile Disk.

DVD preceiver: Combi-device of DVD player and radio without integrated amplifier.

Glossary

DVI: Digital Visual Interface, is an interface for transmitting digital video and graphic data (without audio).

Dynamic contrast ratio: Here the light intensity of the display is adapted in case of a high black portion in the picture. The so-called backlights are dimmed automatically and the contrast ratio increases temporarily, i.e. dynamically.

E

Electronic Programme Guide: See **EPG**.

EPG: Electronic Programme Guide is the electronic variant of a printed TV guide. Using the EPG you can watch the TV programme of the TV station, transfer the appropriate data. The list of programmes contains the title, beginning and end and duration of the programme. In addition brief descriptions of the content of the programmes is also displayed.

Euro AV socket: Interface for connecting video devices to a TV set. This socket is also referred to as Scart socket.

F

FLOF: Full Level One Facilities. Teletext system in which names and numbers of the jump destinations are transmitted in the bottom line on every page. This guides the reader to related topics for example. An information about which pages exist and which pages have sub-pages is not available in FLOF.

H

HDCP: High-bandwidth Digital Content Protection. Coding system provided for the **DVI** and **HDMI** interfaces for secure transmission of audio and video data.

HDMI: High Definition Multimedia Interface is a newly developed interface for full digital transmission of audio and video data.

HDTV: High Definition Television is an umbrella term that covers a number of high resolution television standards.

HD-Ready: A quality seal that is awarded to products that are capable of displaying high-definition television (**HDTV**).

High band and Low band: Transmission ranges for satellites.

I

ID3 tags: Additional information for MP3 and WMA audio files. Information about the singer, title, album and album cover can be saved here among other things. These data are edited on the PC by an ID3 tag editor.

J

JPEG/JPG: Joint Photographic Experts Group is a committee which has developed a standard method for the compression of digital photos. This method JPEG (**JPG** for short), named after the committee, is a commonly used graphic format for photos.

L

LAN: Abbreviation for Local Area Network. Mainly used as a designation for networks with wiring (Ethernet).

LCD: Liquid Crystal Display.

LCN: Logical Channel Numbers. In stations with LCN, the channel location number belonging to the station is also transmitted by the provider. The stations are sorted according to these channel location numbers.

L-Link: Intelligent system connection between Loewe devices for the automatic exchange of information. Makes the operation of TV and Loewe system components even more convenient.

LNB/LNC: The crucial electronic component of a satellite antenna is referred to as an LNB (Low Noise Block Converter). It is mounted in the focal point of a parabolic antenna. The designation **LNC** (Low Noise Converter) indicates that conversion to lower intermediate frequency takes place. The supplemental block in the LNB refers to the fact that a whole frequency range (a block) is converted in each case.

M

MHEG-5: Digital teletext standard of the Multimedia and Hypermedia Expert Group. At the moment only available in United Kingdom and Ireland.

Modulator: Transmitter in the video or DVD recorder so that the devices can receive signals via the tuner of the TV device.

Mono: Single-channel audio.

MPEG: Digital compression process for video.

MP3: Data format for compressed audio files.

N

Network ID: NID refers to the so-called programme ID number, also known as network ID – a number between 0 and 8191. This specification is necessary in specific cable networks of some countries. Then only DVB signals of this station network are searched for.

NICAM: Audio standard. Is used in Denmark, England, France, Sweden, and Spain.

NTSC: American colour standard.

P

Page Catching: For teletext, refers to going to and calling a page number.

PAL: European standard.

PCM: Pulse Code Modulation for digital sound.

Picture in Picture: See **PIP**.

PIP: Picture in Picture; a function which displays two pictures on the screen.

Pixel: Denotes both the smallest unit of a digital graphic grid and its display on a screen with grid control.

Glossary

Pixel error: A pixel error is a defective pixel, usually on an LCD. Pixel errors may be caused by production errors. They are expressed for example by a constantly lit pixel or a constantly black pixel. Single defective pixels however are excluded from a guarantee.

Progressive JPEG: Progressive JPEGs are built up gradually. The quality of the picture increases progressively during the loading process.

ProScan/Progressive Scan: Progressive Scan (abbr. PS) or full picture method is a technique in the picture build-up of monitors, TV sets, beamers, and other display devices in which the output device is not sent line interlaced half pictures – unlike in the interlace technique – but real full pictures.

R

RGB: Colour signals red, green and blue.

S

Satellite tuner: Receiver for satellite programmes.

SDTV: Standard Definition TeleVision.

SECAM: French colour standard.

Set-Top-Box: Set-Top-Box (STB for short) refers to a device in entertainment electronics which is connected to another device, usually a TV set, and offers the user additional functional options.

Signal input groups: Depending on the applied signal, the signal sources are divided into different groups. All signal input groups with their corresponding signal types and the possible inputs are listed below.

TV analogue:

Signal type: FBAS, YC, RGB-SD (480i/576i), Component-SD (480i/576i)
Input: Tuner analogue, AV1, AV2, AVS, COMP. In

TV digital:

Signal type: DVB-SD, HDMI-SD (480i/576i)
Input: Tuner digital, HDMI1/DVI, HDMI2/DVI

HD analogue:

Signal type: RGB-HD (video mode: e.g. 1920x1080, 1280x720),
Component-HD (video modes: e.g. 1920x1080, 1280x720)
Input: COMP. IN, PC IN

HD digital:

Signal type: DVB-HD, HDMI-HD
Input: Tuner digital, HDMI1/DVI, HDMI2/DVI

PC:

Signal type: RGB
(PC modes: e.g. 800x600, 1024x768, 1280x1024, 1360x768)
Input: PC IN

PhotoViewer:

Input: USB

Signal strength: Strength of the received antenna signal.

Signal quality: Quality of the incoming antenna signal.

Smart Card: The Smart Card is an electronic chip card issued by the respective programme provider or by the certification-free Pay-TV operators. It contains the code which is decoded by the **CA module**.

Static contrast ratio: Describes the difference between the brightest and darkest picture display.

Stereo: Dual-channel audio.

Switch voltage: Video devices specify this voltage to switch the TV device to playback.

Symbol rate: Describes the transmission speed for data transmission.

T

Terrestrial: In data transmission a wireless transmission that does not use satellites as intermediate station is referred to as terrestrial.

TFT: Thin Film Transistor. One widely distributed application is control of liquid crystal flat screens, for which a signal transistor is used for each pixel. This design of display is also referred to as active matrix, however it is frequently also referred to as TFT display.

TOP: Table of Pages. Teletext system in which the individual pages are divided into topics. The blocks stand for a higher hierarchy level (e.g. News, Sport, Programmes) and the groups for the level below (e.g. Home/Abroad, Football/Tennis). Abbreviations can be assigned to the pages which are displayed in colour on the bottom line and can be selected with the four coloured buttons on the remote control. Information is also transmitted about which pages exist and which of them have sub-pages.

Tuner: Another term for receiver.

U

USB: Universal Serial Bus. Serial bus system for connecting external devices (USB card reader, USB stick).

V

VGA: PC interface for connecting a monitor.

VPS: The Video Programming System (VPS) is a signal which some (but not all) analogue TV stations transmit in the blanking gap. The signal is used by video and DVD recorders when recording programmes to react to delays in start time, programme changes and excesses of the planned programme time.

W

WLAN: Abbreviation for Wireless Local Area Network. Also referred to in brief as wireless network.

WMA: Abbreviation for Windows Media Audio, Microsoft's own audio data format. The contents are compressed as in MP3 files.



Glossary

Y

Ycc/Ypp: Colour standards for **Set-Top-Boxes**.

YCbCr: Digital colour model, see **COMPONENT IN**.

YPbPr: Analogue colour model, see **COMPONENT IN**.

 The code number  Cancels an access code and thus the parental lock. Please keep in a safe place.

Index

0-9

24p format 48

A

Access code 41
Active loudspeakers 54
Adjusting the picture 22
Adjusting the sound 20
Alarm 42
Assist+ 8, 16
Audio amplifiers 57
AUDIO button 12
Auro Loewe Preceiver 52
Auto format 22
Automatic dimming 22
Automatic speech detection 21
Automatic time control 59
AV audio signal 21
AV selection 19

B

Balance 21
Batteries 11
Brightness 22
Button functions 24

C

CA module 40
CA module selection 25
Card reader 62
Change favourites lists 29
 Add station 29
 Delete station 29
 Move station 29
 Rename list 29
Change station 28
 Delete station 28
 Move station 28
 Rename station 28
 Restore station 28
CI slot 40
Code number 41
Coloured buttons 24, 25, 34
Component IN 51
Connecting the antenna 11
Connections 5, 6
Connection wizard 44
Contrast 22
Control unit 4
Copy protection 61

D

Data capture 33
Digital audio input 58
Digital Link 61

Digital Link HD (HDMI CEC) 49
Digital Link Plus 59, 61
Digital teletext 36
Display 12
DVB character ser 25
DVB software 38
DVB subtitles 24
DVD button 68
DVI 48

E

Encrypted stations 13, 26, 40
Energy efficiency 13, 16
EPG 32

F

Factory settings picture/sound 22
Favorites 19
File folder 63
First installation wizard 12
FLOF 34

H

HDMI 48
HDMI CEC 49
Headphone volume 20
Help 15
HiFi/AV amplifier 57

I

Index in the TV set 16
Info Display 15
iPIP 30

L

Language 12, 16, 17, 42, 71
Language/sound 25
Last station 24
LNC/LNB 13
Logical Channel Number 13
Loudness 20

M

Mains switch 12
Manual station search 27
Maximum volume 21
Max. switch on volume 21
Memorise 32
Menu operation 15
Mobile phone keypad 15
Move picture vertically 23
MusicBox 64

 All albums 65
 All titles 65
 Artists 65

MusicBox 64

 Browse/sort 65
 Files 65
 Playlist 66
 Repeat 67
 Select/play music 64

Muting 20

N

New devices/modifications 44
Numeric buttons 15, 16, 18

O

On-screen displays 43
Overview diagram 17

P

Page selection 34
Parental lock 41
PC IN 50
Personal text pages 24, 35
PhotoViewer 62
Picture 22
Picture adjustment 22
Picture format 22
Cinema 23
 PALplus 23
 Panorama 23
 Zoom 23

Picture in Picture 30
PIN 41
PIP 30
Programme info 24

R

Radio menu 17, 37
Radio mode 12, 36
REC button 68
Recording 59
Recording wizard 59
Remote control 3, 11, 68
Repeat initial installation 12
Reset picture/sound 22
Rotating the TV set 70
RS-232C interface 58

S

Safety 9, 10
Satellite system 13
Scope of delivery 7
Search wizard 26
Select station 18
Service 81
Settings 17
Signal type 45

Slide show 63
Small PIP 30, 31
Smart Card 40
Software update 38
Sound 20
Sound components wizard 52
Sound mode 20
Sound off 20
Sound-picture synchronisation 20
Sound system 53
Split screen 30, 31
Standard PIP 30
Standby mode 12
Station list 18
Station search/update 26
Status display 25
Storage medium 63
Subtitles 24, 25
Switching off 12
Switching on 12
Switching voltage 17

T

Teletext 34
Teletext functions 24
Teletext subtitles 24
Time 24
Time and date 43
Timer data 59
 Date 59
 Recorder 59
 Recording time 59
 Recording type 59
 VPS 59

Timer functions 42
Timer list 60
Timer recordings 59
TOP 34
TOP table 34
TV base software 38
TV button 11, 68
TV menu 17
TV set equipment 7
TV speakers 11, 52

U

USB stick 38, 62, 64

V

Video source 19
Videotext subtitles 35
Volume 20
Volume adjustment 21
VPS times 35

Service

(A)

Loewe Austria GmbH
Parking 12
1010 Wien, Österreich
Tel +43 - 1 22 88 633 - 0
Fax +43 - 1 22 88 633 - 90
Email: loewe@loewe.co.at

(AUS)

International Dynamics
Australasia Pty Ltd.
129 Palmer Street
Richmond 3121, Victoria,
Australia
Tel +61 - 3 - 94 29 08 22
Fax +61 - 3 - 94 29 08 33
Email: mail@international
dynamics.com.au

(B NL L)

Loewe Opta Benelux NV/SA
Uilenbaan 84
2160 Antwerpen, België
Tel +32 - 3 - 2 70 99 30
Fax +32 - 3 - 2 71 01 08
Email: ccc@loewe.be

(BG)

Darlington Service
Kn. Klementina Street, bl. 193
1618 Sofia, Bulgaria
Tel +359 - 2 955 63 99
Fax +359 - 2 955 63 99
Email: sac@audio-bg.com

(CH)

Telion AG
Rütistrasse 26
8952 Schlieren, Schweiz
Tel +41 - 44 732 15 11
Fax +41 - 44 732 15 02
Email: lgelpke@telion.ch

(CY)

HADJIKYRIAKOS & SONS LTD.
121 Prodomos Str., P.O Box
21587
1511 Nicosia, Cyprus
Tel +357 - 22 87 21 11
Fax +357 - 22 66 33 91
Email: savvas@hadjikyriakos.
com.cy

(CZ)

BASYS CS SPOL. S.R.O
Sodomkova 8/1478
10200 Praha 10 - Hostivar, Česko
Tel +420 2 34 70 67 00
Fax +420 2 34 70 67 01
Email: office@basys.cz

(D)

Loewe Opta GmbH,
Customer Care Center
Industriestraße 11
96317 Kronach, Deutschland
Tel +49 1801--22256393
Fax +49 9261--99500
Email: ccc@loewe.de

(DK)

Kjaerulff1 Development A/S
C.F. Tietgens Boulevard 19
5220 Odense SØ, Denmark
Tel +45 - 66 13 54 80
Fax +45 - 66 13 54 10
Email: loewe@loewe.dk

(E)

Gaplasa S.A.
Conde de Torroja, 25
28022 Madrid, España
Tel +34 - 917 48 29 60
Fax +34 - 913 29 16 75
Email: loewe@maygap.com

(EST)

TEDRA TRADING OY
Kuusemetsa 3
Saue 76506, Estonia
Tel +372 - 50 14 817
Fax +372 - 67 09 611
Email: raivo@futurehifi.com

(F)

Loewe Opta France SAS
13 rue du Dépôt,
Parc del l'Europe, BP 10010
67014 Strasbourg Cédex, France
Tel +33 - 3 - 88 79 72 50
Fax +33 - 3 - 88 79 72 59
Email: loewe.france@loewe-fr.com

(FIN)

Kjaerulff 1 OY
Uudenmaantie 100
20760 Piispansilta, Finland
Tel +358 - 20 751 3800
Fax +358 - 20 751 3801
Email: loewetuki@kjaerulff1.com

(GB)

Loewe UK Limited
Century Court, Riverside Way
Riverside Business Park, Irvine,
Ayrshire
KA11 5DJ, UK
Tel +44 - 1294 315 000
Fax +44 - 1294 315 001
Email: enquiries@loewe-uk.com

(GR)

EISAGOGIKI EMBORIKI ELLADOS
S.A.
321 Mesogion Av.
152 31 Chalandri-Athens, Hellas
Tel +30 - 210 672 12 00
Fax +30 - 210 674 02 04
Email: christina@bose-onkyo.gr

(H)

Basys Magyarorszag KFT
Tó park u.9.
2045 Törökbálint, Magyar
Tel +36 - 2341 56 37 (121)
Fax +36 - 23 41 51 82
Email: basys@mail.basys.hu

(HR)

Plug&Play
Bednjanska 8, 10000 Zagreb
Hrvatska (Kroatia)
Tel +385 1 4929 683
Fax +385 1 4929 682
Email: loewe@loewe.hr

(I)

Loewe Italiana S.r.L.
Largo del Perlar, 12
37135 Verona (VR), Italia
Tel +39 - 045 82 51 611
Fax +39 - 045 82 51 622
Email: info@loewe.it

(IL)

PL Trading (pz 2004) Ltd.
27, Aliat Hanoar St.
Givataim 53401, Israel
Tel +972 - 3 - 57 27 155
Fax +972 - 3 - 57 27 150
Email: zeev@loewe.co.il

(IRL)

Origo Ltd
Unit 23 Magna Drive
Magna Business Park, City West
Dublin 24, Republic of Ireland
Tel +353-1-4666700
Fax +353-1-4666708
Email: service@origo.ie

(KSA)

SALEM AGENCIES & SERVICES CO.
Hamad Al Haqueel Street, Raw-
dah, Jeddah
Kingdom of Saudi Arabia
Tel +966 (2) 665 4616 ext: 666
Fax +966 (2) 660 7864
Email: hkurkjian@aol.com

(LT)

A Cappella
Ausros Vartu 5, Pasazo skg.
01129 Vilnius, Lithuania
Tel +370 - 52 12 22 96
Fax +370 - 52 62 66 81
Email: info@loewe.lt

(M)

DONEO CO. LTD
34/36 Danny Cremona Street
Hamrun, HMR02, Malta
Tel +356 - 21 - 22 53 81
Fax +356 - 21 - 23 07 35
Email: info@doneo.com.mt

(MA)

SOMARA S.A.
377, Rue Mustapha El Maani
20000 Casablanca, Morocco
Tel +212 - 22 22 03 08
Fax +212 - 22 26 00 06
Email: somara@somara.ma

(N)

PCE. PREMIUM CONSUMER
ELECTRONICS as
Ostre Kullerod 5
3241 Sandefjord, Norge
Tel +47 - 33 48 33 48
Fax +47 - 33 44 60 44
Email: oddgunnar@loewe.no

(NZ)

International Dynamics (NZ) Pty
Ltd
PO Box 109 317, Newmarket
Auckland, New Zealand
Tel +64 9 379 0179
Fax +64 9 379 0279
Email: enquiries@international
dynamics.co.nz

(P)

Mayro Magnetics Portugal, Lda.
Rua Professor Henrique de Barros
Edifício Sagres, 2º. C
2685-338 Prior Velho, Portugal
Tel +351 - 21 942 78 30
Fax +351 - 21 942 78 30
Email: geral.loewe@mayro.pt

(PL)

DSV TRADING SA
Plac Kaszubski 8
81-350 Gdynia, Polska
Tel +48 - 58 - 6 61 28 00
Fax +48 - 58 - 6 61 44 70
Email: market@dsv.com.pl

(RO)

Avitech Co. SRL
1/II Pipera Tunari St.
007190 Voluntari, Ilfov, Romania
Tel +40 - 21 200 64 64
Fax +40 - 21 200 64 65
Email: andrei.silisteanu@avitech.ro

(RUS)

Service Center Loewe
ul. Verkhnyaya Maslovka, d. 29
125083 Moscow, Россия
Tel +7 - 495 612 50 43
Fax +7 - 495 612 47 10
Email: service@atc.ru

(S)

Kjaerulff 1 AB
Ridbanegatan 4, Box 9076
200 39 Malmö, Sverige
Tel +46 - 4 06 79 74 00
Fax +46 - 4 06 79 74 01
Email: sweden@kjaerulff1.com

(SK)

BaSys Czech & Slovak s.r.o.
Stará Vajnorská 17/A
831 04 Bratislava, Slovakia
Tel +421 2 49 10 66 18
Fax +421 2 49 10 66 33
Email: loewe@basys.sk

(TR)

ENKAY ELEKTRONIK SAN. Ve Tic.
Ltd. Sti.
Alemdag Cad: Site Yolu No.: 10
81230 Ümraniye/ İstanbul, Türkiye
Tel +90 - 216 634 44 44
Fax +90 - 216 634 39 88
Email: mhatipog@enkaygroup.com

(UAE)

Dubai Audio Center
P.O. Box 32836, Sheik Zayed Road
Dubai, UAE
Tel +971 - 4 343 14 41
Fax +971 - 4 343 77 48
Email: daccdubai@emirates.net.ae

(ZA)

THE SOUNDLAB (PTY) LTD
P.O. Box 31952, Kyalami 1684
Republic of South Africa
Tel +27 - 1 14 66 47 00
Fax +27 - 1 14 66 42 85
Email: loewe@mad.co.za

Other

Trademarks

Manufactured under licence from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.



The screen font "Loewel2700" is based on the "Tavmjong Bah Arev (tavmjong.free.fr)" font, which in turn is based on "Bitstream Vera". Bitstream Vera is a trademark of Bitstream Inc.

This set contains a software which is based partly on the work of the Independent JPEG Group.

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>).

This software is provided by the OpenSSL project "as is" and any expressed or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose are disclaimed. In no event shall the OpenSSL project or its contributors be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage.

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com).

This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Acknowledgements

Loewe Opta GmbH
Industriestraße 11
D-96317 Kronach
www.loewe.de

Printed in Germany
Date of issue 07/10-3.0b TB/FP
© Loewe Opta GmbH, Kronach
ID: 9.8.0 / 9.10.0

All rights including translation, technical modifications and errors reserved.