

# Audiodesign

SoundBox ID




35040001



Bedienungsanleitung, Operating instructions, Mode d'emploi,  
Istruzioni per l'uso, Instrucciones de manejo, Gebruiksaanwijzing

**LOEWE.**




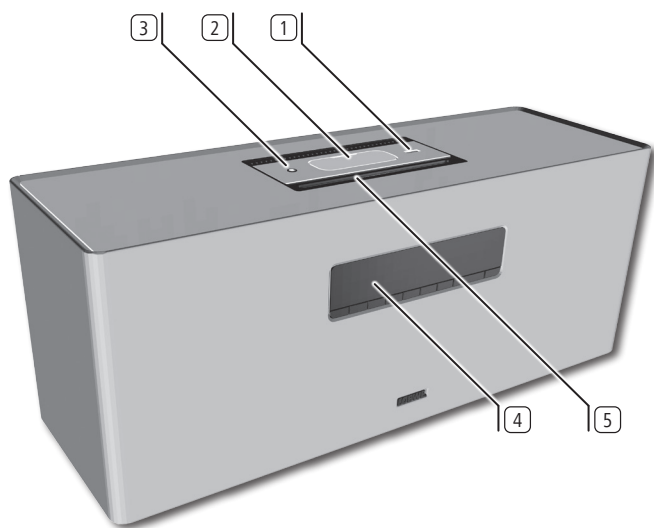

- ① USB socket
- ② iPod / iPhone dock <sup>(1)</sup>
- ③ HEADPHONE - headphone socket
- ④ Display
- ⑤ CD / MP3 - Slot-in drive
- ⑥ AUX - Stereo input 3.5 mm jack
- ⑦ ANT FM - FM antenna socket
- ⑧ Mains cable
- ⑨ CLOCK slide switch
- ⑩ ALARM - Alarm function button
- ⑪ VOLUME +/- Set volume
- ⑫ SRC - Set audio source
- ⑬ CD/USB/iPod: Next title;  
FM-Radio: short: Select station up
- ⑭ CD/USB/iPod: Previous title;  
FM-Radio: short: Select station down
- ⑮ CD/USB/iPod: Stop; at settings: back
- ⑯ CD/USB/iPod: Pause/Resume play;  
at settings: confirm
- ⑰ CD: Eject disc
- ⑱ Switch ON / OFF - in Standby mode
- ⑲ IR receiver
- ⑳ Control functions in "Settings" menu
- ㉑ LED indicator light ALARM ON/OFF

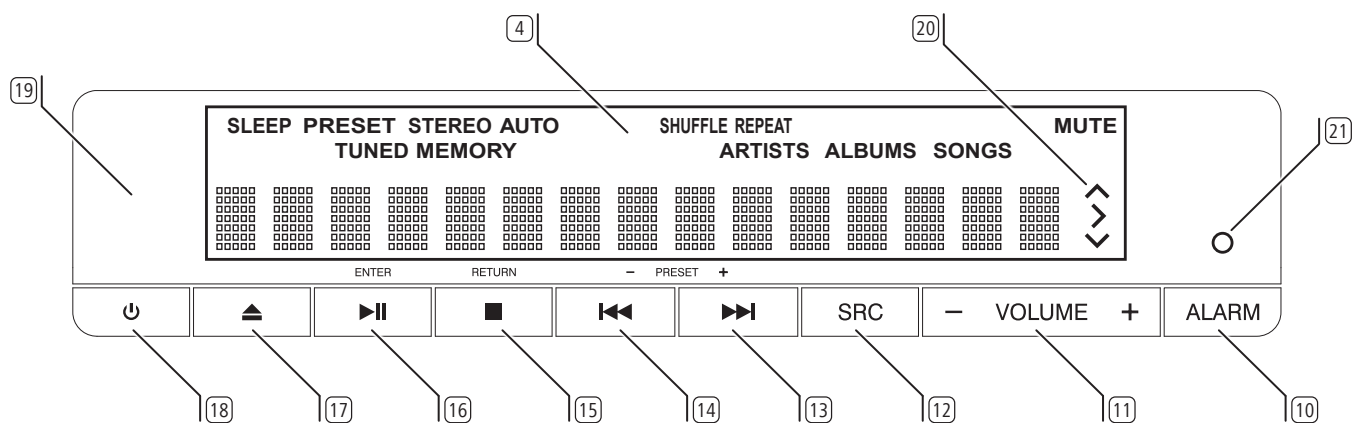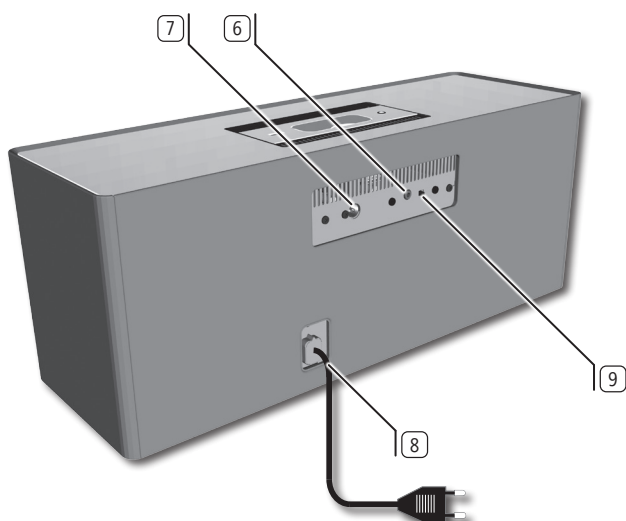

<sup>(1)</sup> A list of which Apple models are compatible with the **SoundBox ID** can be found on page 26.

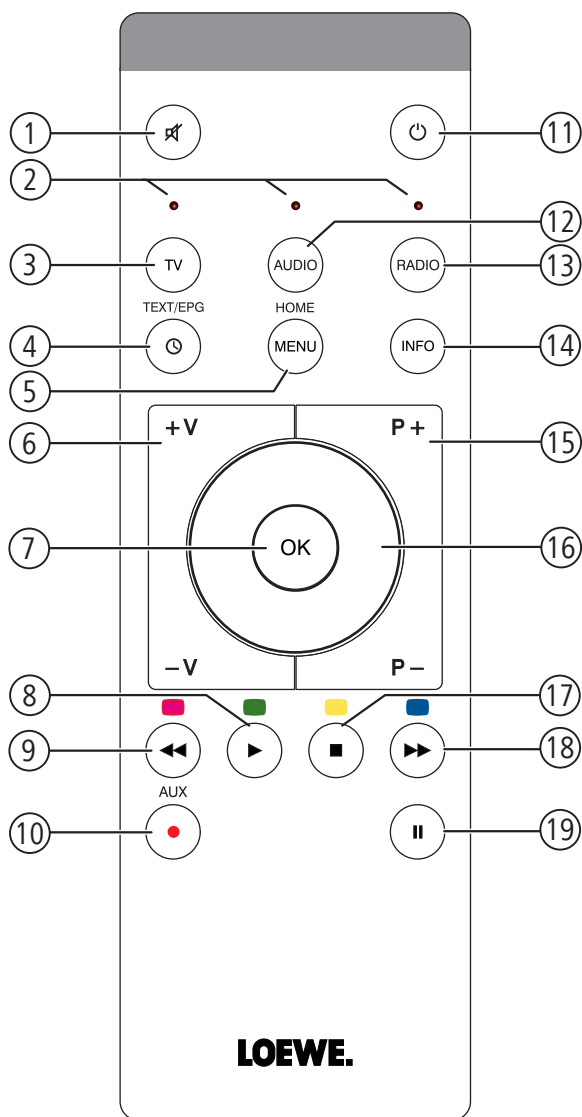

- ① Sound mute/on
- ② LED display for current operating mode
- ③ Switch over to TV mode
- ④ Short press: time  
Long press: alarm
- ⑤ Short press: iPod: Menu  
Long press: RADIO: save radio stations
- ⑥ **V+/-** volume up/down
- ⑦ In the menu: confirm/call up; iPod: Select/Play
- ⑧ Short press: play/pause  
Long press: random replay order
- ⑨ Short press: select title down  
Long press: wind down
- ⑩ Audio source selection
- ⑩ and at the same time ⑩ ◀ : FM radio: search backwards;
- ⑩ and at the same time ⑩ ▶ : FM radio: search forwards
- ⑪ Switch ON / OFF - in Standby mode
- ⑫ Operate the unit that has been set, e.g. SoundVision
- ⑬ Operate the unit that has been set, e.g. SoundBox ID
- ⑭ Short press: display functions  
Long press: settings menu
- ⑮ **P+/P-** radio station up/down
- ⑯ ▲ ▼ Index up/down; ◀ ▶ select in the iPod menu
- ⑰ Short press: stop  
Long press: repeat
- ⑱ Short press: select title up  
Long press: wind up
- ⑲ Short press: continue pause/play  
Long press: snooze/sleep mode

<sup>†</sup> The assignment of these buttons can be changed (page 20).  
 The description refers to the standard setting.

## Contents

<b>Control elements</b> .....	<b>15</b>
<b>Assist Easy remote control</b> .....	<b>16</b>
<b>Contents</b> .....	<b>17</b>
<b>Welcome</b> .....	<b>18</b>
Scope of supply .....	18
Cleaning .....	18
For your safety.....	18
Set-up .....	19
Connection.....	19
<b>Start-up</b> .....	<b>20</b>
Inserting batteries .....	20
Setting the remote control .....	20
Operating Loewe devices .....	20
Connecting to the mains supply.....	20
Switching on/off .....	20
Setting time.....	21
Setting the volume.....	21
Setting the sound .....	21
Dimming the display .....	21
Setting radio stations .....	21
Listening to the radio.....	21
Delete radio station .....	21
<b>Control</b> .....	<b>22</b>
CD/USB play .....	22
Playing from external audio sources .....	22
iPod operation .....	23
Wake-up function.....	24
Sleep function.....	24
Switch off automatically.....	24
<b>Troubleshooting</b> .....	<b>25</b>
Troubleshooting.....	25
<b>Technical Data</b> .....	<b>26</b>
Legal information .....	26
Trademark rights.....	26
Markenrechte .....	26
Environmental protection.....	26

## Thank you

for choosing a Loewe product. We are happy to have you as a customer.

At Loewe we combine the highest requirements regarding technology, design and ease of use. This applies equally for TV, DVD, video, audio and accessories.

Neither technology nor design is an end in itself, but both are intended to provide our customers with the best possible audio and visual experience.

Our design is not influenced by short-term, fashionable trends. You have, after all, purchased a high-quality piece of equipment which you do not want to tire of tomorrow or the day after.

## Scope of supply

### Loewe SoundBox ID, art. no. 51202-T/W/G/I/P01

- Assist Easy remote control with 2 batteries
- Antenna
- Instructions for Use

## Cleaning

Only clean the aluminium surface with a slightly damp clean, soft cloth (without using any abrasive cleaning fluid).

You can remove any dust on the speaker surface by carefully using a vacuum cleaner if needs be.

## For your safety

For your safety, and to avoid unnecessary damage to your unit, please read and follow the safety advice below.

### Use for the intended purpose and ambient conditions

- The unit is intended exclusively for the playback of audio signals.
- Always switch off the unit before connecting or disconnecting other devices.
- Do not operate the unit unattended. Pull out the mains plug if you are away for a longer period.

Protect the unit from:

- Water, dampness, dripping or sprayed water or steam
- Impacts and mechanical stresses
- Magnetic and electric fields
- Higher electrical powers than specified
- Cold, heat, direct sunlight and high temperature fluctuations
- Dust
- Covering which obstructs air circulation
- Interference with the internal workings of the unit



Do not place objects containing liquids on top of the unit.



Candles and other open flames must be kept away from the unit at all times to prevent the spread of fire.

This unit has been built exclusively for private use in domestic environments. Warranty services cover this intended use.

**WARNING:** To prevent electrical shock, do not open the unit. There are no parts inside the unit that can be repaired by the user. Repairs should only be carried out by a Loewe dealer.

If you have moved the unit out of the cold into a warm environment, leave it switched off for about an hour to avoid condensation forming. Do not switch the unit on until it has reached room temperature. This prevents serious damage to the components.

### Volume

Loud music can result in impaired hearing. Avoid extreme volumes, especially over longer periods and if you use headphones.

### About these Instructions for Use

The information in these instructions refers to the product Loewe **Sound-Box ID**. Unless stated otherwise, the instructions refer to the operating elements on the **Assist Easy** remote control.

Paragraphs beginning with the **■** symbol indicate important hints, tips or conditions for perfect operation.


Terms which you will find in the menu or printed on the unit are printed in **bold** type. In the functional descriptions, the necessary operating elements are arranged to the left of the text containing the handling instructions.

## Set-up

- Place the unit on an even, firm, horizontal surface.
- Do not set up the unit near strong heat sources or in direct sunlight.
- If setting up in a shelf or a closed cupboard: Leave at least 2.5 cm clearance around the unit, so that the air can circulate unhindered and there is no heat backup. Do not cover the opening at the back. The device may not be laid on its back during operation.
- Incorrect voltages can damage the unit. This device may only be connected to a powersupply with the voltage and frequency indicated on the type plate using the mains cable.
- Pull out the power cable during thunderstorms. A voltage surge caused by lightning conducted through the mains could damage the unit.
- If the unit is not to be used for an extended period, the plug should also be disconnected from the mains.
- The power plug of the unit must be easily accessible so that the device can be disconnected from the power supply at all times.
- Position the mains cable in such a way that it can not be damaged. The power cable may not be kinked or laid over sharp edges, stood on or exposed to chemicals; the latter also applies to the unit as a whole. A power cable with damaged insulation can cause electric shocks and poses a fire risk.
- When you want to unplug from the mains, pull on the plug housing rather than on the cable. The cables in the mains plug could otherwise be damaged and could cause a short-circuit when plugged in again.


## Connection

Connect the **ANT FM** (7) jack to an FM antenna socket via an optional FM antenna cable (available from your dealer). Alternatively, use the antenna provided. Position the antenna so as to ensure the best reception, e.g. close to a window. You can connect an external audio source to the socket **AUX** (6) Use an audio cable with 3.5 mm jack cable available from your dealer. Plug the mains cable into a 230 V 50 Hz wall socket.

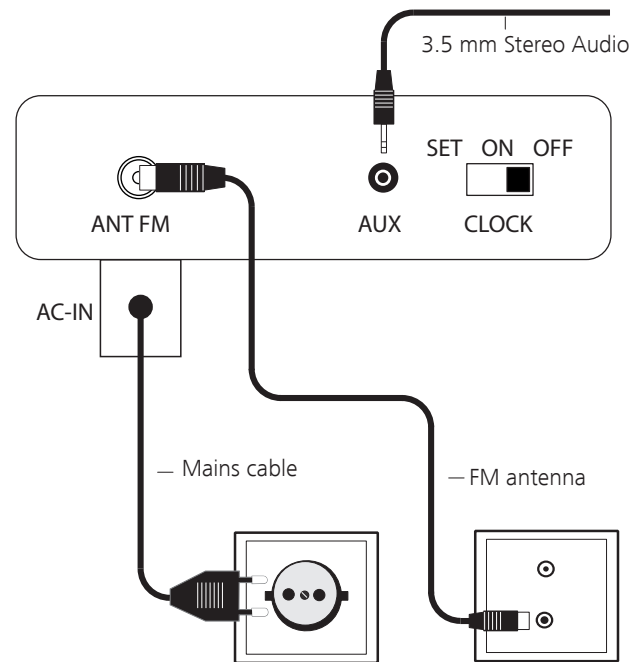

You can connect a headphone with a 3.5 mm jack socket to the **HEADPHONE** (3) socket. The speakers of the **SoundBox ID** are then switched off.

## Inserting batteries

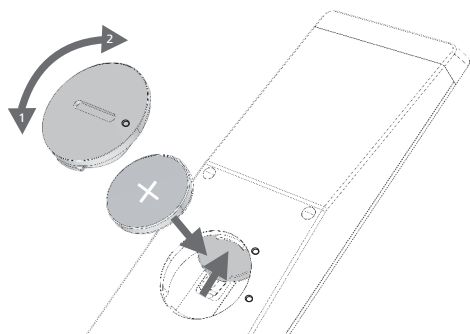



Twist the battery compartment lid out in an anti-clockwise direction and then remove it. Insert a CR2032/DL2032 battery. The plus pole of the battery must point upwards here. Replace the battery compartment cover onto the remote control (observe the markings).





- ➡ Do not insert rechargeable batteries in the battery compartment of the remote control.
- ➡ The batteries used must not be exposed to excessive heat such as sunlight, fire or similar!

## Setting the remote control


The **AUDIO** and **RADIO** buttons can be configured to operate certain Loewe products:

-   Press the button down that you wish to configure (**AUDIO** or **RADIO**) and then press **REC/AUX** at the same time; hold the buttons down for 5 sec.

The LED over the selected button flashes twice.

-     Input the button combination from the table below (press the buttons one after another).

Button combination	Unit
Red	Loewe TV Radio
Green	Loewe Mediacenter
Blue + yellow	Loewe BluTechVision Inter-active
Yellow	Loewe AudioVision
Green + blue	Apple Remote
Green + yellow	Apple TV
Green + yellow + blue	SoundBox ID * (RADIO)
Blue	SoundVision * (AUDIO)
Red + blue	<AirSpeaker>
Red + green + yellow	MediaVision 3D
Red + green + yellow + blue	Reset all settings

-  Press **OK**  
 The LED above the button for the unit flashes twice.


\* Default setting

## Operating Loewe devices

### Using the remote control for the Loewe SoundBox ID

-  Press the **RADIO** button, the LED indicator lights up for about 5 seconds

### Using the remote control for a Loewe TV set




-  Press the **TV** button, the LED indicator lights up for about 5 seconds


Every time a button is pressed, the LED indicator lights up for the selected operating mode to allow you to check (**TV – AUDIO – RADIO**). Please refer to the respective operating instructions on how to operate the individual devices.



## Connecting to the mains supply

Make the required cable connections as shown in the section “Connection” (page 19). Plug the mains plug into the mains socket 230V 50 Hz.

## Switching on/off

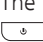-  Activate the remote control for **SoundBox ID** operation by pressing the **RADIO** button briefly.
-  To switch on the unit, press the ON/OFF button  **18** on the **SoundBox ID** or on the remote control **Assist Easy 11**.

The LED indicator light above the ON/OFF button  **18** lights up.

-  To switch off the unit, press the ON/OFF button  **18** on the **SoundBox ID** or on the remote control **Assist Easy 11** again.

➡ If you will be absent for some time, first switch off the unit with the **ON/OFF** button and then pull out the mains plug. You can thus save energy and protect the environment.

➡ The unit switches off automatically after 60 minutes without playback in the operating mode CD or USB (into Standby Mode) in order to save energy (page 24).

➡ The unit switches automatically off after 4 or 8 hours (into Standby Mode) in order to save energy (page 24).



## Setting time

The current time can be set.


Reset the slide switch **CLOCK** on the rear of the unit to the **SET** position.

  Press the unit buttons (13)/(14) to set the hours up/down.

 Press the unit button (16) to confirm.

  Press the unit buttons (13)/(14) to set the minutes up/down.


 Press the unit button (16) to confirm.

 Press the **SRC** (12) button to toggle between the display for 12 h / 24 h.

Reset the slide switch **CLOCK** on the rear of the unit to the **ON** or **OFF** position:

- ON** Time display in Standby mode
- OFF** Clock is off in Standby mode (Energy Saving mode)
- SET** Setting the time

 The unit briefly shows the current time.

 The time setting is lost about five minutes after removing the power supply. Now reset the time.

## Setting the volume



**V+ / V-** Set volume.

## Setting the sound


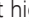
The base and treble can be set.

 Long press: select the settings menu.



  Select option **TREBLE / BASS**.

Press **OK** to confirm.

  Set higher or lower in the range from **-10 to +10** dB.

Press **OK** to confirm.



Long press: quit Settings menu.

## Dimming the display

The brightness of the display can be set.



Long press: select the settings menu.



  Select option **DIMMER**.

Press **OK** to confirm.

  Set **DIMMER 1/2/OFF**.

Press **OK** to confirm.




Long press: quit Settings menu.

## Setting radio stations

You can save up to 30 FM radio stations.

### Automatic preset

 Only stations that support the RDS are found saved in the automatic preset. Please use the manual preset for non-RDS stations.



Press several times for **Tuner FM** radio playback.

Keep the **MENU** button pressed down for > 2 seconds.

Press **OK** to confirm.


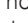
The automatic preset starts. All radio stations previously selected are deleted and overwritten by new ones (max. 30 stations).

### Manual preset



Press several times for **Tuner FM** radio playback.



Press and hold the (10) button and use (16)   to set the desired radio station



Keep the **MENU** button pressed down for > 2 seconds.



  Select desired storage location.

Press **OK** to confirm.

## Listening to the radio

### Select saved radio station





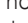
Press several times for **Tuner FM** radio playback.





**P+ / P-** Select station up/down.
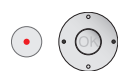
### Set radio station manually



Press and hold the (10) button and use (16)   to set the desired radio station

Press   briefly again: Set frequency incrementally.

  Long press: Search forwards and playback of the next radio station found.



Press again. Various details on the set RDS radio station are displayed. For example: **PS** station name, **PTY** type of program, **RT** text messages, **CT** station time.

## Delete radio station



Long press: select the settings menu.



  Select option **PRESET DELETE**.

Press **OK** to confirm.

  Select station. **OK**

## CD/USB play


You can play standard audio CDs (CD-DA) with a diameter of 8/12 cm with the Loewe **SoundBox ID**. The device can also play audio data CDs you have written yourself in the format CD-R (ISO 9660) and CD-RW. Audio files are played in the format MP3 and WMA (without DRM). USB sticks are supported in the format FAT16 and FAT32.

### Prerequisites for audio files

- Sampling frequency: 16 - 48 kHz (MP3), 22 - 48 kHz (WMA).
- Bit rate: 8 - 320 kbps (MP3), 16 - 320 kbps (WMA).
- Number of files: Maximum 512 (CD), 9999 (USB).
- Number of directories: Maximum 255 (CD), 999 (USB).
- Number of files per directory: Maximum 511 (CD), 255 (USB).
- File extensions: ".mp3" / ".wma".

### Handling discs


Do not touch the playing side of the disc. Hold the disc at the edges so as not to touch the surface with your fingers. Do not attach paper or adhesive tape onto either side of the disc.

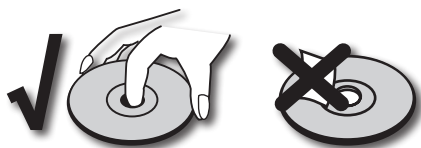

- ➔ CD-R/RW discs written with a PC or a DVD or CD recorder cannot be played if the disc is damaged or dirty or the lens of the player is contaminated with condensation.
- ➔ If you write a disc with a PC, it may be the case that the disc cannot be played owing to the application software settings, even if your format is compatible. (You can obtain more information from your software provider). Discs must be finalised.
- ➔ Depending on the recording device or the CD-R/RW disc itself, some discs cannot be played with this device.
- ➔ Do not use CDs with unusual shapes (e.g. heart shaped or octagonal). Otherwise malfunctions or damage cannot be ruled out.
- ➔ Finger prints and scratches on the disc can impair the playing quality. Handle the discs carefully.

### Inserting discs

The unit has a so-called slot-in drive (5). This is located at the top (in front of the iPod dock). Insert the disc in the drive until it is automatically drawn in. The cover side of the disc points forwards here.

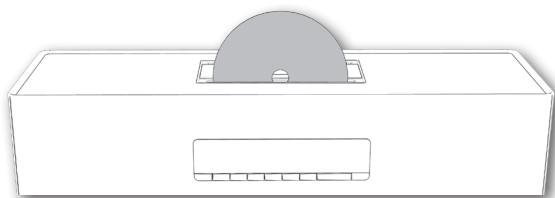

On the display (4) **LOAD** and then **Disc Reading** or **USB Reading** is displayed while the media recognition runs.

### Ejecting the disc

To remove the inserted disc press (▲) (17).

## Playing the media

As soon as the CD or USB stick is inserted, the playback starts automatically with the first title. The playback is in alphabetic order of the title names in the case of data media.

### Replay functions

- Press several times for **CD** or **USB** playback.
- ▶ **Play Start / Continue.**
- ⏸ **Pause** Stop play.
- ◀ ▶ Press briefly: Select title up/down.
- ◀◀ ▶▶ Press twice briefly to return to the previous title.
- ◀ ▶ Press longer: Search up/down.
- **Press Stop** once: Stop play, last title is played from the start with **Play**. Press twice: Playback completely terminated.
- ▲ ▼ Select directory of data media.  
 The main directory is designated with **ROOT**, the names of the directories on the storage medium being displayed below this.
- ▶ **PLAY:** Long press for random playback order.
- ◼ **SHUFFLE ALL** The titles of the current medium are played in random order.
- ◼ **SHUFFLE FOLDER** The titles of the current directory are played in random order.
- ◼ **SHUFFLE OFF** Play in normal order.
- ◼ **STOP:** Long press for repeat.
- ◼ **REPEAT ALL** Repeats all titles
- ◼ **REPEAT ONE** Repeats the current title
- ◼ **REPEAT FOLDER** Repeats all titles in the current directory
- ◼ **REPEAT OFF** No repeat
- ⓘ Press **INFO** again. Various details on the current title can be displayed during the playback. For example: Title number, remaining play time, total play time of the disc, file name, title/album/artist name.

## Playing from external audio sources

You can play an external audio source with the Loewe **SoundBox ID**. The source must be connected to the 3.5 mm jack socket **AUX** on the rear of the unit.


- Press several times for **AUX** playback.  
 Start playing the connected audio source.

## iPod operation


You can connect your Apple iPod to the **SoundBox ID** allowing you to listen to your music in the very best quality. The **SoundBox ID** has an integrated iPod dock (2). Once you switch on the **SoundBox ID**, the battery of the connected iPod is charged. A list of which Apple models are compatible with the **SoundBox ID** can be found on page 26.

### Connecting the iPod

Remove the cover from the iPod dock (2).

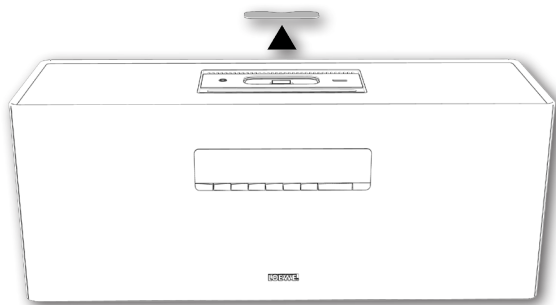

Insert the dock adapter supplied with your iPod in the loading recess of the iPod dock. Then place your iPod in the dock.

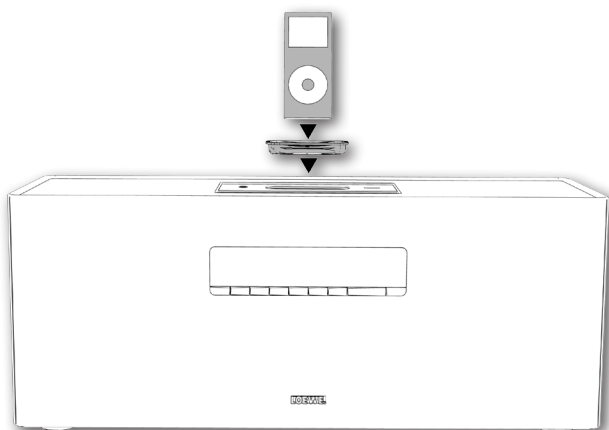

- ➡ Use the corresponding Apple Dock Adapter of your Apple iPod/iPhone to avoid damaging your iPod plug.
- ➡ When inserting and handling the iPod in the dock, only apply gentle force so as not to damage any sensitive plug-in connections.







## iPod audio play

- Press several times for **iPod** playback.
  - ▶ **Play** Start / Continue.
  - ⏸ **Pause** Stop play.
  - ◀ ▶ Press briefly: Select title up/down.
  - ◀ ▶ Press longer: Search up/down.
  - ◀ ◀ Press briefly twice to return to the previous title.
  - **Stop** End play.
- iPod menu.
- ◀ ▶ Select entries in the iPod menu.
  - OK **OK** Confirm/Play selected title.
  - ▶ **PLAY:** Long press for random playback order.
  - SHUFFLE SONGS** Play all titles in random order.
  - SHUFFLE ALBUMS** Play titles of the current album in a random order.
  - SHUFFLE OFF** Play in normal order.
  - **STOP:** Long press for repeat.
  - REPEAT ALL** Repeats all titles
  - REPEAT ONE** Repeats the current title
  - REPEAT OFF** No repeat
  - INFO Press again. Various details on the current title can be displayed during the playback. For example: Title number, remaining play time, title/album/artist name.
- ➡ Depending on the software version, your iPod can possibly not be operated via the **SoundBox ID**. We recommend updating the software of your iPod to the latest version.
  - ➡ The compatibility with your iPod can vary depending on the model. For Apple devices supported see page 26.
  - ➡ Faults can occur depending on the iPod device.
  - ➡ Only disconnect your iPod from the **SoundBox ID** when there is no access to it.

## Wake-up function






Your **SoundBox ID** can wake you up at a preset time with one of the available audio sources or an acoustic signal.

### Setting the wake-up time

-  Keep the **ALARM** button **10** pressed for > 2 seconds.  
The LED indicator light above the unit button **ALARM** and the hour display of the wake-up time flashes.
-  Press the unit buttons **13/14** to set the wake-up time "hours".
-  Press the unit button to confirm.
-  Press the unit buttons **13/14** to set the wake-up time "minutes".
-  Press the unit button to confirm.
-  Press the unit buttons **13/14** to set the wake-up signal.


**BEEP** A signal sound is emitted for the wake-up time  
**SOURCE** The music source set is played for the wake-up time

**SRC+BEEP** The music source set is played and a signal sound is emitted for the wake-up time


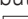
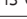
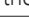
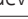
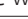


-  Press the unit button **16** to confirm.
-  Press the unit buttons **13/14** to make further settings for the selected source, e.g. the desired radio station for FM radio.
-  Press the unit button **16** to confirm.
-  Press the unit buttons **13/14** to set the volume of the wake-up signal.
-  Press the unit button **16** to confirm.


The LED indicator light **21** above the unit button **ALARM** lights up. This shows that the alarm is switched on.

### Activate/Deactivate wake-up function


-  Use the button **ALARM** **10** or a long press of the button **4** on the remote control to switch the alarm off.  
The LED indicator light **21** above the **ALARM** button shows whether the wake-up function is active. The wake-up time is displayed briefly when activating the wake-up function.
- ➡ If the audio source set is not available during the wake-up time (e.g. iPod is not in the dock), the acoustic sound will be buzzed.

## Snooze function

-  Press and hold the button or press one of these buttons on the device when the alarm goes off:      The alarm stops and automatically starts again in five minutes.  
The LED indicator light above the unit button **ALARM** flashes.
-  The alarm is switched off.
-  Set alarm volume.

If the wake-up signal **SRC+BEEP** has been set, pressing the button  once stops the acoustic sound and if you press it again the music source.

### Switch off alarm



-  Use the button **ON/OFF** **18** or **ALARM** **10** or a long press of the button **4** on the remote control to switch the alarm off.  
The LED indicator **21** light above the unit button **ALARM** goes out.

- ➡ The wake-up signal stops automatically after about 60 minutes.
- ➡ The wake-up function is deactivated after switching off the wake-up signal. Activate the wake-up function again, as described under "Activating /Deactivating the wake-up function".

## Sleep function




You can listen to music for a certain time with the **SoundBox ID** until it switches off automatically.

### Setting the run time


-  Select desired music source.
-  Select desired play time **30, 60, 90, 120** Min / **SLEEP OFF** by long pressing again.

## Switch off automatically

The unit switches off itself after an adjustable time.

-  Long press: select the settings menu.
-  **▲ ▼** Select option **AUTO POWER OFF**.  
Press **OK** to confirm.  
**▲ ▼** Set **8H** or **4H**.  
Press **OK** to confirm.
-  Long press: quit Settings menu.

## Troubleshooting

Problem	Possible cause	Remedy
Not working at all.	Mains cable not plugged in.	Plug the mains cable into a socket 230 V 50 Hz.
No sound.	Defective connections at the input cable.	Connect the cable correctly (page 19). If the problem continues, the cable might be defective.
	The volume is set at minimum.	Turn up the volume.
	The sound is set to mute.	Press  or <b>V+</b> on the remote control to reactivate the audio output and then set the volume level.
	A headphone is connected.	Remove the headphone.
CD playback not possible.	No disc inserted.	Insert a disc.
	A disc that cannot be played has been inserted.	Insert a disc that can be played (check the type of disc).
	The disc is dirty.	Clean the disc.
	The disc cannot be loaded.	Switch the unit on and then insert the disc in the drive.
	The disc is not inserted with the playback side to the rear.	Insert the disc with the playback side to the rear.
A media file cannot be played.	The file format is not supported.	Convert the file to a supported format on a computer with a converter program.
The unit is not working properly.		Unplug the mains plug from the mains socket and then try plugging it in again after 30 seconds.
The remote control is not working properly.	The batteries in the remote control are dead.	Replace the batteries with new ones.
The time display is flashing; the unit cannot be operated.	The <b>CLOCK</b> switch (9) on the rear of the unit is in the <b>SET</b> position.	Set the switch to the <b>ON</b> or <b>OFF</b> position.
The unit switches off automatically.		The unit switches to Standby mode to save energy after 60 minutes without playing a CD or USB.
	The sleep function (page 24) has been activated.	Switch the unit on again.
	The iPod function is selected, but no iPod is docked.	Place the iPod in the dock or select another operating mode.
	The unit has an energy saving function (page 24).	Switch the set on again manually.
The radio reception is disrupted.	The antenna is loose or damaged.	Insert the antenna cable firmly in the socket or replace it with a new one.
iPod operation is disrupted.	The iPod is not correctly inserted in the dock.	Pull the iPod out and insert it carefully in the dock again until the correction is properly established.
The iPod playback stops and another title is played.	The iPod function "Shake to Shuffle" is activated.	Deactivate this function in your iPod.
USB playback is not possible.	The combination of file and directory name is too long.	The combination of file and directory name must not exceed 250 characters. Please make the names shorter.
	The file format of the USB storage medium is not compatible.	Format the USB storage medium in FAT16/32 format.
	The number of files / directories is greater than the maximum allowed.	Reduce the number of files / directories (page 22).

## Technical Data

### General

Loewe SoundBox ID	Art.no. 51202-T/W/G/I/P01
Operating temperature [°C]	5 ... 40
Humidity [%] (no condensation)	30 ... 90
Dimensions [W x H x D in cm]	45 x 14.5 x 17
Weight [kg]	5.1

### Electrical data

Mains voltage [Volt 50 Hz]	230
Power consumption [Watt]	23
Power consumption in Standby [Watt] (Energy Saving mode)	< 0.5
Laser	Laser class 1, wavelength: 790 nm
Output stages	2
Load bearing capacity [Watt] (max. music)	2x 15

### Interfaces

Headphones	Jack socket 3.5 mm
AUX	Jack socket 3.5 mm
USB	2x V 2.0, type A
ANT FM	FM antenna input, 75 Ohm

### Media formats supported

USB, CD-R, CD-RW	MP3, WMA (without DRM)
CD	Audio-CD

### Apple devices supported - Made for

(only for audio playback)

iPod touch (4th generation), iPod touch (3rd generation)  
 iPod touch (2nd generation), iPod touch (1st generation)  
 iPod classic  
 iPod nano (6th generation)  
 iPod nano (5th generation), iPod nano (4th generation)  
 iPod nano (3rd generation), iPod nano (2nd generation)  
 iPhone 4, iPhone 3GS, iPhone 3G, iPhone

## Legal information

Loewe Opta GmbH is a public limited company of German law with its Head Office in Kronach.

Industriestrasse 11, 96317 Kronach  
 Telephone: +49 9261 99-500  
 Fax: +49 9261 99-515  
 Email: ccc@loewe.de

Commercial Register: Municipal Court Coburg, No. HRB 42243  
 VAT ID-No.: DE 193216550  
 WEEE registration number: DE 41359413

Editorial date 12.12. 3rd edition  
 © Loewe Opta GmbH, Kronach  
 All rights reserved including translation.  
 Design and technical specifications are subject to change without notice.

## Trademark rights

Made for

 iPod  iPhone

“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPod is a registered trademark of Apple Inc. in the USA and other countries.

## Environmental protection

### Cardboard box and packaging

In line with national regulations regarding the disposal of packaging materials, we pay a fee to authorised recyclers who collect packaging from dealers.

### The unit



**Attention:** The EU Directive 2002/96/EC governs the proper return, handling and recycling of used electronic appliances.

Old electronic appliances must therefore be disposed of separately. Never dispose of this unit in normal domestic waste! You can hand in your old unit free of charge at identified collection points or to your dealer if you buy a similar new unit. Other details about return (also for non-EU countries) are available from your local authorities.

### Remote control batteries



The batteries provided contain no harmful materials such as cadmium, lead or mercury.

Regulations concerning used batteries mean that batteries may no longer be disposed of in household waste. You can dispose of used batteries free of charge at the collection points in commercial outlets. Your dealer will also have a collection point for used batteries.

**A** Loewe Austria GmbH  
Parking 12  
1010 Wien, Österreich  
Tel +43 - 810 0810 24  
Fax +43 - 1 22 88 633 - 90  
E-mail: loewe@loewe.co.at

**AUS**  
Audio Products Group Pty Ltd  
67 O'Riordan St  
Alexandria NSW 2015, Australia  
Tel +61 - 1300 130 492  
Fax +61 - 02 9578 0140  
E-mail: help@audioproducts.com.au

**B NL L**  
Loewe Opta Benelux NV/SA  
Uilenbaan 84  
2160 Wommelgem, België  
Tel +32 - 3 - 2 70 99 30  
Fax +32 - 3 - 2 71 01 08  
E-mail: ccc@loewe.be

**BG** Darlington Service  
193 Kn. Klementina St.  
1612 Sofia, Bulgaria  
Tel +359 - 2 9556399  
E-mail: darlington@psp-bg.com

**CH** Telion AG  
Rütistrasse 26  
8952 Schlieren, Schweiz  
Tel +41 - 44 732 15 11  
Fax +41 - 44 732 15 02  
E-mail: infoKD@telion.ch

**CY** Hadjikyriakos & Sons Ltd.  
121 Prodromos Str., P.O. Box 21587  
1511 Nicosia, Cyprus  
Tel +357 - 22 87 21 11  
Fax +357 - 22 66 33 91  
E-mail: savvas@hadjikyriakos.com.cy

**CZ** BaSys CS s.r.o.  
Sodomkova 1478/8  
10200 Praha 10 - Hostivar,  
Česká republika  
Tel +420 234 706 700  
Fax +420 234 706 701  
E-mail: office@basys.cz

**D** Loewe Opta GmbH,  
Customer Care Center  
Industriestraße 11  
96317 Kronach, Deutschland  
Tel +49 9261 99-500  
Fax +49 9261 99-515  
E-mail: ccc@loewe.de

**DK** Kjaerulff1 Development A/S  
C.F. Tietgens Boulevard 19  
5220 Odense SØ, Denmark  
Tel +45 - 66 13 54 80  
Fax +45 - 66 13 54 10  
E-mail: info@loewe.dk

**E** Gaplasa S.A.  
Conde de Torroja, 25  
28022 Madrid, España  
Tel +34 - 917 48 29 60  
Fax +34 - 913 29 16 75  
E-mail: loewe@maygap.com

**F** Loewe France SAS  
Rue du Dépôt,  
13 Parc de l'Europe, BP 10010  
67014 Strasbourg Cédex, France  
Tel +33 - 3 - 88 79 72 50  
Fax +33 - 3 - 88 79 72 59  
E-mail: loewe.france@loewe-fr.com

**FIN** Karevox Oy  
Museokatu 36  
00100 Helsinki, Finland  
Tel +358 - 9 44 56 33  
E-mail: kare@haloradio.fi

**GB IRL** Loewe UK Limited  
1st Floor, 237A Kensington High St  
London  
W8 6SA, UK  
Tel +44 - (0) 207 368 1100  
Fax +44 - (0) 207 368 1101  
E-mail: enquiries@loewe-uk.com

**GR RO** Issagogiki Emboriki Ellados S.A.  
321 Mesogion Av.  
152 31 Chalandri-Athens, Hellas  
Tel +30 - 210 672 12 00  
Fax +30 - 210 674 02 04  
E-mail: christina\_argyropoulou@isemmel.gr

**H** Basys Magyarorszag KFT  
Tó park u.9.  
2045 Törökbálint, Magyar  
Tel +36 - 2341 56 37 (121)  
Fax +36 - 23 41 51 82  
E-mail: ertekcsites@basys.hu

**HK CN** Galerien Und PartnerPlus  
King's Tower 28/F, 111 King Lam Street  
Kowloon, Hong Kong  
Tel +852 - 27 77 89 88  
Fax +852 - 23 10 08 08  
E-mail: service@loewe-cn.com

**HR** Plug&Play Ltd.  
Bednjanska 8, 10000 Zagreb  
Hrvatska (Kroatia)  
Tel +385 1 4929 683  
Fax +385 1 4929 682  
E-mail: info@loewe.hr

**I** Loewe Italiana S.r.l.  
Via Monte Baldo, 14/P - 14/N  
37069 Dossobuono di Villafranca di Verona  
Tel +39 - 045 82 51 690  
Fax +39 - 045 82 51 622  
E-mail: info@loewe.it

**IL**  
Clear electronic entertainment Ltd  
13 Noah Mozes St.  
Agish Ravad Building  
Tel Aviv 67442, Israel  
Tel +972 - 3 - 6091100  
Fax +972 - 3 - 6092200  
E-mail: info@loewe.co.il

**IND** Navshiv Retail Pvt. Ltd.  
Block D, Plot No. 7 Shanti Kunj  
Vasant Kunj  
New Delhi - 110070, India  
Tel +91 11 47 65 55 00  
Fax +91 11 47 67 67 15  
E-Mail: admin@navshiv.com

**IR** MiMoRa HOLDING CO.  
N0 1001, Afra Tower  
Parsa St. Fereshteh  
Tehran, Iran  
Tel + 98 921 344 0521  
E-Mail: s.zarandooz@gmail.com

**KSA** Salem Agencies & Services Co.  
Hamad Al Haqueel Street, Rawdah, Jeddah  
21413  
Kingdom of Saudi Arabia  
Tel +966 (2) 665 4616  
Fax +966 (2) 660 7864  
E-mail: hkurkjian@aol.com

**LV EST** Kpartners, SIA  
A.Čaka iela 80  
Rīga, LV-1011, Latvia  
Tel +3 71 - 67 29 29 59  
Fax +3 71 - 67 31 05 68  
E-mail: olga@dom332.lv

**LT** A Cappella Ltd.  
Ausros Vartu 5, Pasazo skg.  
01129 Vilnius, Lithuania  
Tel +370 - 52 12 22 96  
Fax +370 - 52 62 66 81  
E-mail: info@loewe.lt

**M** Doneo Co. Ltd  
34/36 Danny Cremona Street  
Hamrun, HMR1514, Malta  
Tel +356 - 21 - 22 53 81  
Fax +356 - 21 - 23 07 35  
E-mail: service@doneo.com.mt

**MA** Somara S.A.  
377, Rue Mustapha El Maani  
20000 Casablanca, Morocco  
Tel +212 - 22 22 03 08  
Fax +212 - 22 26 00 06  
E-mail: somara@somara.ma

**N** Premium Consumer Electronics as  
Østre Kullerød 5  
3241 Sandefjord, Norge  
Tel +47 - 33 29 30 40  
Fax +47 - 33 44 60 44  
E-mail: loewe@loewe.no

**NZ** Audio Products Group Pty Ltd  
67 O'Riordan St  
Alexandria NSW 2015, Australia  
Tel 0800 174 781  
Fax +61 - 02 9578 0140  
E-mail: help@audioproducts.com.au

**P** Mayro Magnetics Portugal, Lda.  
Rua Professor Henrique de Barros  
Edifício Sagres, 2º. C  
2685-338 Prior Velho, Portugal  
Tel +351 - 21 942 78 30  
Fax +351 - 21 940 00 78  
E-mail: geral.loewe@mayro.pt

**PL** Tele Radio Video  
Ul. Boh. Getta Warszawskiego 18  
81-609 Gdynia  
Tel. 58 624-50-09  
E-Mail: loewe@trv.com.pl

**RUS** Service Center Loewe  
Aptekarsky per.4 podjezd 5A  
105005 Moscow, Russia  
Tel +7 - 499 940 42 32 ( ext. 454 )  
Fax +7 - 495 730 78 01  
E-mail: service@loewe-cis.ru

 
**S** Kjaerulff 1 AB  
Ridbanegatan 4, Box 9076  
200 39 Malma, Sverige  
Tel +46 - 4 06 79 74 00  
Fax +46 - 4 06 79 74 01  
E-mail: loewe@loewe.se

**SG** Atlas Sound & Vision Pte Ltd  
10 Winstedt Road #01-18  
Singapore 227977  
Tel +65 - 6334 9320  
Fax +65 - 6339 1615  
E-mail: service@atlas-sv.com

**SK** BaSys SK, s.r.o.  
Stará Vajnorská 37/C  
83104 Bratislava, Slovakia  
Tel + 421 2 49 10 66 18  
Fax + 421 2 49 10 66 33  
E-mail: loewe@basys.sk

**TR** SERVISPLUS GENEL MERKEZ  
ÖRNEK MAH. ATES SOK. NO:1  
34704 ATAŞEHİR, İSTANBUL, TÜRKİYE  
Tel +90 - 216 315 39 00  
Fax +90 - 216 315 49 50  
E-mail: info@servisplus.com.tr

**UAE** Dubai Audio Center  
P.O. Box 32836, Sheikh Zayed Road  
Dubai, UAE  
Tel +971 - 4 343 14 41  
Fax +971 - 4 343 77 48  
E-mail: service@dubaiaudio.com



**LOEWE.**